


# Chrome Tidy Rail

Assembly Instructions - Please keep for future reference

875/2714

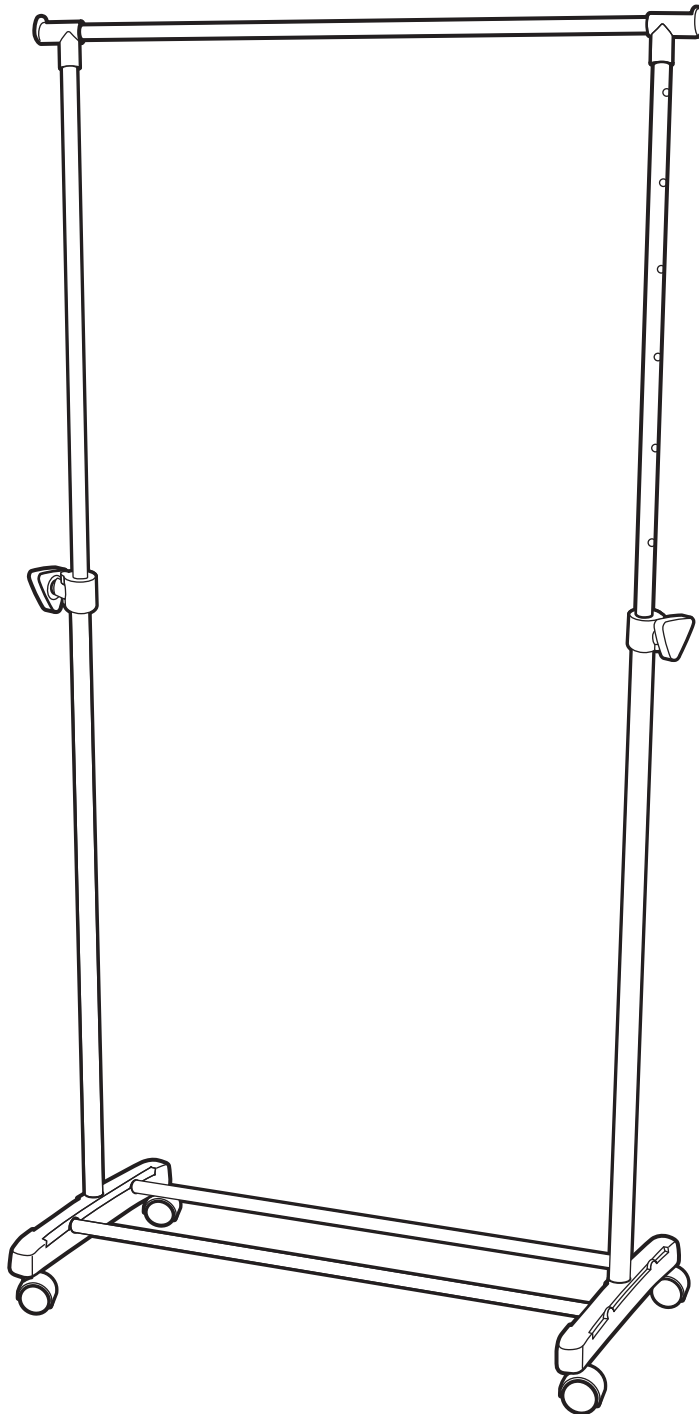

## Dimensions

Width - 84.5cm

Depth - 42.5cm

Height - 99.5/167cm

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



## Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts are a choking hazard.

- Make sure you have enough space to layout the parts before starting.

- Assemble on a pad to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.

- If using power tools, please follow the safety instructions supplied with the tools.

- Assemble the unit as close to its final position (in the same room) as possible.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

 
- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the panels listed below




1 Rail x 1 (84cm)



2 Bottom tube x 2 (78cm)



 3 Lower side support x 2 (86cm)







4 Upper side support x 2 (78cm)

# Components – Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


<p><b>A</b></p>  <p>Connector x 2</p>	<p><b>B</b></p>  <p>Lock x 2</p>	<p><b>C</b></p>  <p>Leg section x 2 (42cm)</p>
<p><b>D</b></p>  <p>Castor x 4</p>		

# Assembly Instructions


## Step 1

**Note:** It would be useful to ask someone to help you at this stage.

**a:** Insert Bottom tubes **2** into Leg section **C**.

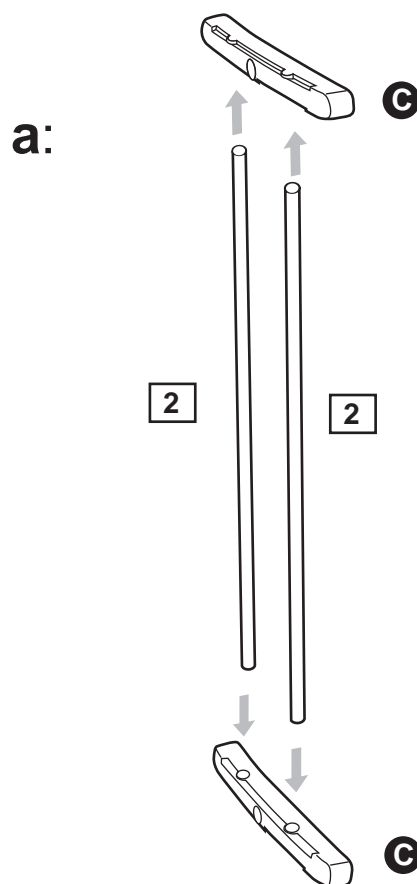

**b:** Insert Lower side supports **3** into Leg section **C**.

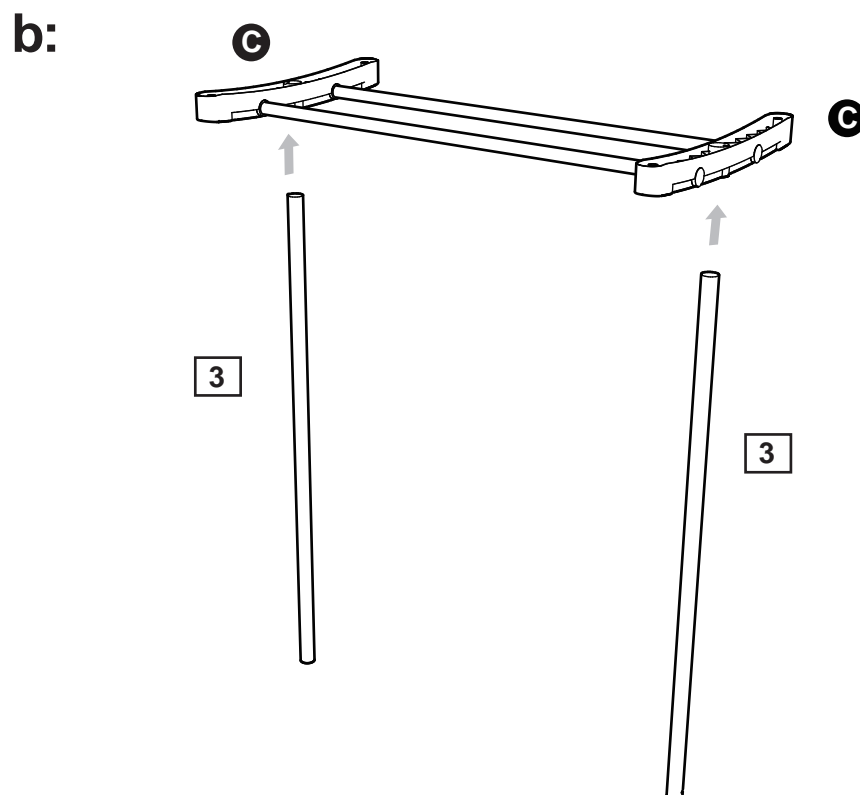


# Assembly Instructions


## Step 2

**Note:** It would be useful to ask someone to help you at this stage.


**a:** Insert Rail **1** into Connectors **A**.

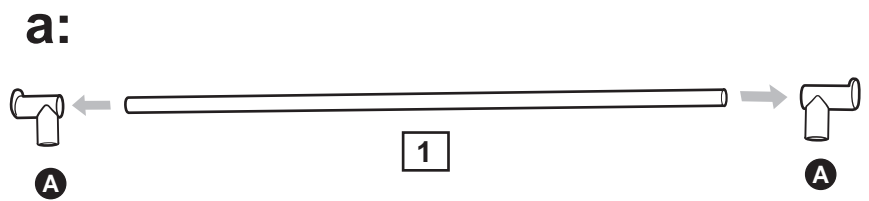

**b:** Insert Upper side support **4** into Connectors **A**.

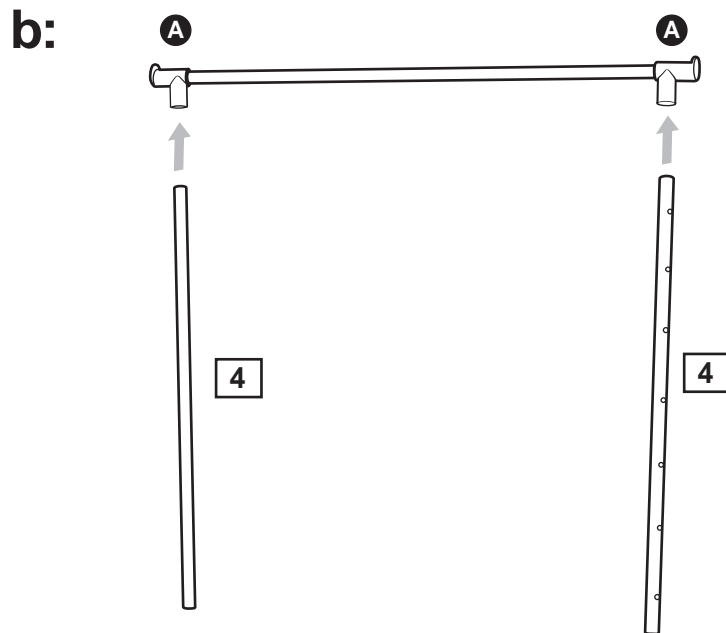

**c:** Insert Castors **D** into Leg section **C**.

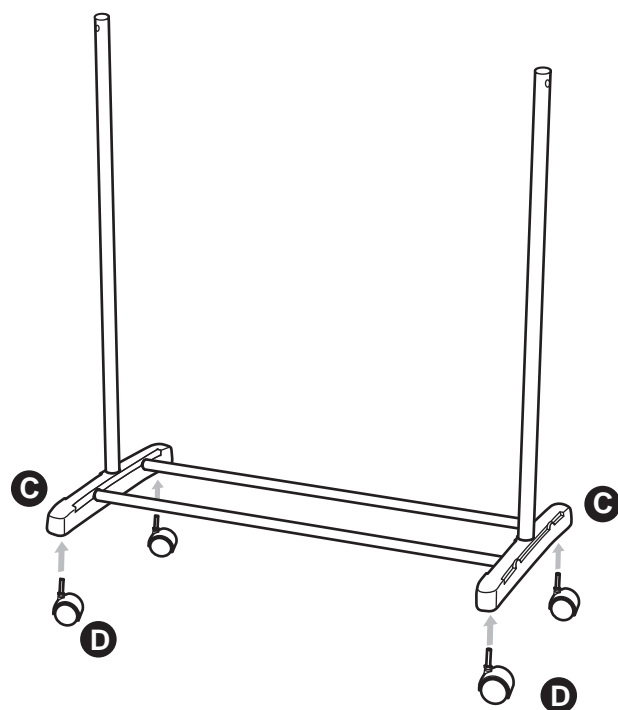


# Assembly Instructions

## Step 3

**Note:** It would be useful to ask someone to help you at this stage.

**a:** Insert Locks **B** into the top of Lower side support **3**.  
Insert Upper side support **4** into the Locks **B**.  
Don't tighten the Locks **B** until the next step of height setting.

**a:**

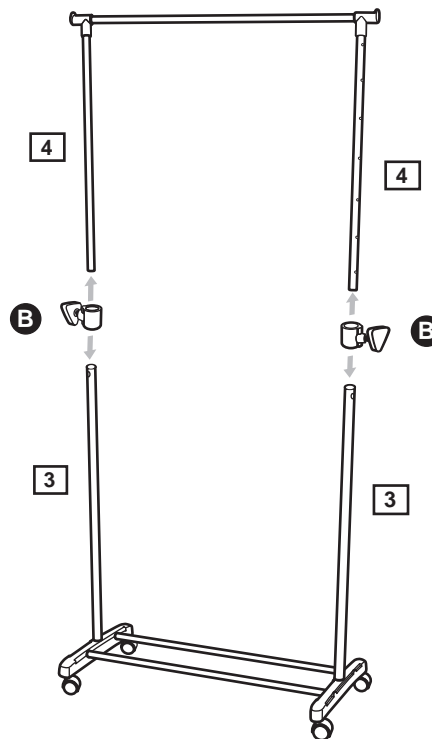


**b: Set the height of the unit.**

Ensuring the Locks **B** are loosened, slide the Upper side support **4** to the desired height and tighten the Locks **B** to affix in position as shown in fig.1.

Adjustment Range:  
99.5-167cm.

**Note:** Please hold Upper side support **4** and pull downward. It will be fixed if locked or will glide downward if unlocked.

**b:**

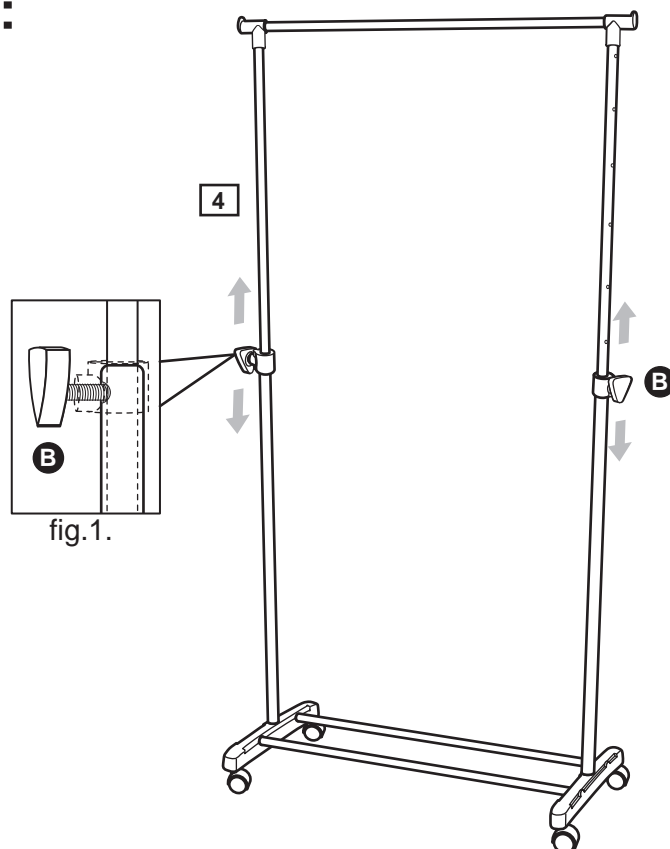

**Assembly is complete.**

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**