
Chrome Tidy Rail

Assembly Instructions - Please keep for future reference

875/8457

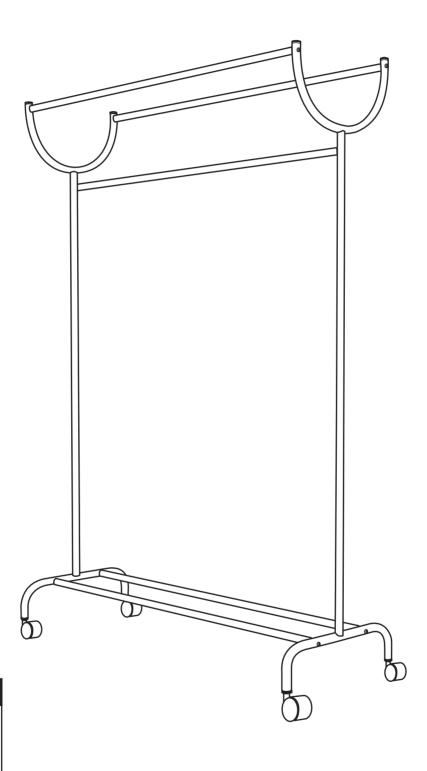

Dimensions

Width - 115cm Depth - 43cm Height - 168cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- · Check you have all the components and tools listed on pages 2.
- . Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- · Make sure you have enough space to layout the parts before starting.

- Do no stand or put weight on the product during assembly, this could cause damage.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- · Parts of the assembly will be easier with 2 people.



•We do not recommend the use of power drill/drivers for

inserting screws, as this could damage the unit. Only use hand screwdrivers.

· Dispose of all packaging carefully and responsibly.


Care and maintenance

- · Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Parts

If you have damaged or missing components, call the **Customer Helpline**: **08456 400800**

Please check you have all the fittings listed below

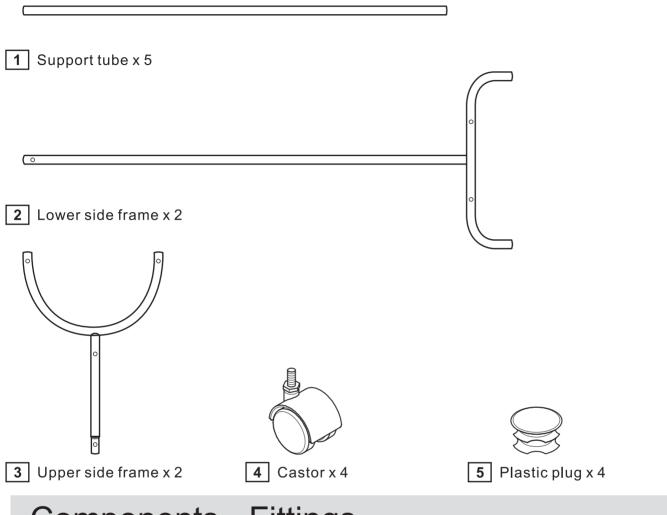

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.



Ruler - Use this ruler to help correctly identify the screws

1 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions


Step 1

Insert the Eng plugs 5 into the top of the Upper side frame 3.

Fix the Castors 4 into the bottom of the Lower side frame 2 using Spanner •.

Repeat the above processes for the second Side frame.

Note: Place the side frame gently and horizontally on the ground.

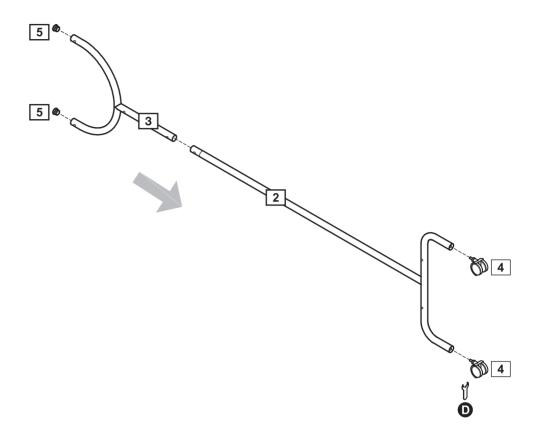


Step 2

Fix the Upper side frame
3 to the Lower side
frame 2 using Screws
B.

Repeat the above process for the second Side frame.

Note: Place the side frame gently and horizontally on the ground.

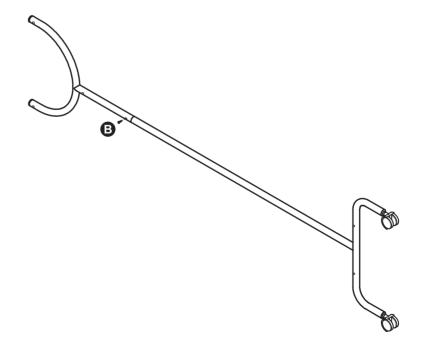


Assembly Instructions

Step 3

Note: It would be useful to ask someone to help you at this stage.

Fix the Support tubes 1 onto the Side frame using Screws **A**.


Do not fully tighten the screws.

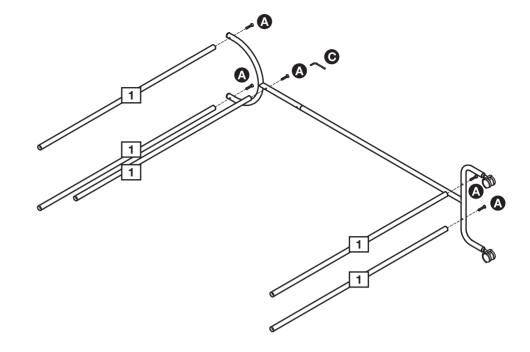

Step 4

Fix the Support tubes 1 onto the other side of the Side frame using Screws **A**.


Retighten all screws.

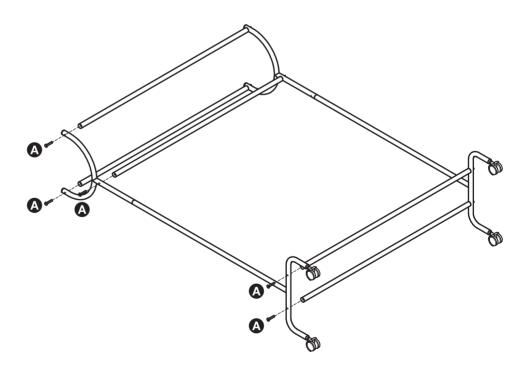

Assembly Instructions

Carefully place the tidy rail in the desired location.

Assembly is complete.

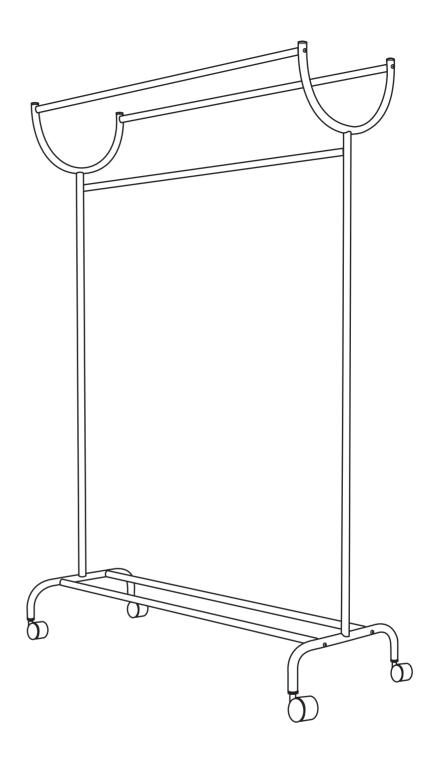

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800