

COOKWORKS

PANINI GRILL INSTRUCTION MANUAL



This is an attended appliance. Do not leave the appliance unattended when in use.

LW-262

IMPORTANT SAFETY WARNINGS

1. Read all the instructions carefully before using and please retain this instruction manual for further reference.
2. Never leave the appliance unattended while in use.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. That the appliance is not intended to be operated by means of an external timer or separate remote control system.
6. The surfaces are liable to get hot during use.

7. Do not touch hot surfaces. Use handles or knobs.
8. To protect against risk of electrical shock, do not immerse cord, plugs or cooking unit in water or other liquid.
9. Close supervision is necessary when any appliance is used by or near children.
10. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
11. The temperature of accessible surfaces may be high when the appliance is operating especially the metal top area.
12. Keep the power cord away from hot surface. Never let the cord hang down where a child could grab it - clip excess cord into the cord storage clips in the base.
13. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
14. The use of accessory attachments, not recommended or sold by the appliance manufacturer, may cause hazards.
15. Do not use outdoors.
16. Do not let cord hang over edge of a table or counter, or touch hot surfaces.
17. Do not place on or near a hot gas or electric burner, or in a heated oven.
18. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
19. To disconnect, remove plug from wall outlet.
20. Do not use appliance for other intended use.
21. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons.
22. Children should be supervised to ensure that they do not play with the appliance.

23. For household use only.
24. No user-serviceable parts inside. Refer servicing to qualified service personnel.
25. A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a long cord. An extension cord may be used with care, however, the marked electrical rating should be at least as great as the electrical rating of this appliance. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over.


SPECIAL CAUTIONS IN USING THE GRILL

1. Do not cover or leave unattended during use.
2. Ensure that there is adequate ventilation, a minimum of 5cm around all sides of the grill is recommended.
3. The surfaces of the grill may become hot, wear oven gloves when handling the appliance during use.
4. Do not use grill on near or under flammable materials (eg curtains) or heat sensitive surfaces.
5. The filling of cooked grill will be hot, allow to cool to a comfortable temperature before eating.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Don't put the PANINI GRILL in water (or any other liquid). Don't use it in a bathroom or near any source of water, and don't use it outdoors.
8. Don't touch the PANINI GRILL when it's on some parts are not as hot as others, but they're all hot. Use oven gloves, a wooden or plastic spatula. Or plastic tongs.
9. Oil or other foods may burn. Don't use the PANINI GRILL near or below curtains or other combustible materials, and watch it while in use.
10. Unplug the PANINI GRILL when not in use, before moving and before cleaning. Let it cool down fully before moving or cleaning.
11. Don't use the PANINI GRILL for any purpose other than those described in these instructions.

COOKING CAUTIONS

1. When grilling meat and poultry, make sure the grill is hot before placing the meat onto the hotplates.
2. Thoroughly defrost frozen meat and poultry in the refrigerator before cooking. Keep raw meat and poultry separate from cooked foods.
3. Always wash hands after handling raw meat and poultry before handling any ready to eat foods.
4. Wipe and disinfect surfaces that have been in contact with raw meat and poultry.
5. Use separate utensils for handling raw meat/poultry and cooked food on the grill, or wash them thoroughly between se.
6. To check whether meat, particularly poultry is cooked, pierce the flesh with a skewer or fork, the juices should run clear. Ensure the food is piping hot throughout.

PRODUCT DESCRIPTION

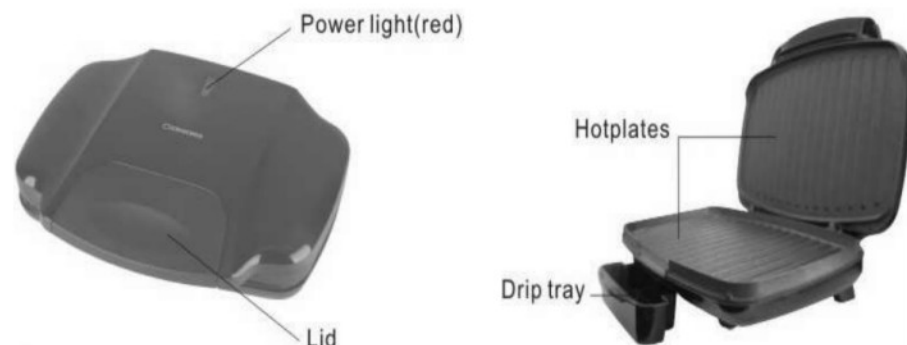

LOCATION

- ☐ Always operate this product on a flat horizontal surface.
- ☐ Do not operate under or near curtains or other combustible materials. Do not place under cupboards or close to a wall as scorching of wall or cupboard may occur.
- ☐ After selecting appropriate location, carefully lay the grill down on protected flat surface to avoid scratching.
- ☐ Lay out power cord to avoid the cord touching the heating plates.

BEFORE USING YOUR GRILL

Before using the grill for the first time, wipe internal surfaces with a damp cloth and then coat the hotplates with some oil or butter.

As with all new heating elements, your grill may emit a slight burning smell when it is first switched on. This is normal and not a cause for concern. Run the appliance for a few times. This will reduce the unpleasant smells.

USING YOUR GRILL

1. Place the grill on a stable, flat heat resistant surface and clean thoroughly before use.
2. Fit the drip tray, close the lid and plug in, the red power light will illuminate. Switch on and off this grill by plugging in and unplugging from the mains.
3. Whilst waiting for the grill to reach the correct working temperature, prepare your foodstuff for grilling.
4. When the hotplate has reached the correct temperature, the red power light will go out. Open the lid and **taking care not to touch the hotplates**, place the foodstuff centrally on the hotplate.
5. Close the lid slowly until it rests on the top of the food to be grilled.
6. Check regularly to see if the foodstuff has reached the required level of cooking.
7. If satisfactory, remove the foodstuff using heat resistant plastic or wooden implements. Do not use sharp or metal implements, as this will damage the coating on the hotplates.
8. The grill can be stopped at any time by removing the plug.

CLEANING

1. Unplug the grill from the mains and allow cooling before cleaning.
2. **WARNING: This is an electrical appliance. TO AVOID ELECTRIC SHOCK, DO NOT IMMERSE ANY PART INTO WATER OR LIQUID.**
3. Wipe the hotplates with paper kitchen towel to remove grease before wiping with a damp (not wet) dishcloth soaked in washing up water.
4. Wipe again with a damp dishcloth, this time soaked in clean water and dry thoroughly with paper kitchen towel.
5. The drip tray can be washed in hot water with a little washing up liquid. NOT SUITABLE FOR DISHWASHER.
6. In case of stubborn deposits, pour a little cooking oil onto the hotplate and wipe off after 5 minutes when the deposit has softened.
7. Wipe outside surfaces with a soft damp cloth and ensure that no moisture or oil enters the cooling slots. Do not use detergents or abrasives as these may scratch the surface and never immerse in water.
8. Allow all surfaces to fully dry before using the grill again.

CONNECTION TO POWER


- Before connecting, check that the voltage indicated on the appliance (bottom of the appliance) corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged,

the plug must not be used until a replacement is obtained (available from the appliance manufacturer).

- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

You should only plug the appliance into a 230V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

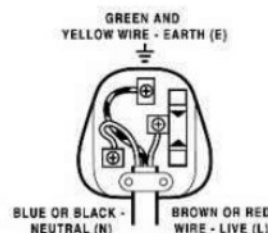

The wires in this mains lead are colored in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

GREEN + YELLOW = EARTH


IMPORTANT

The colors of the wires in the mains lead of this appliance may not correspond with the colored markings identifying the terminals in your plug, proceed as follows:



Caution

To prevent electric shock disconnect from the mains before removing the cover

- ❑ The blue wire must be connected to the terminal marked with the letter N or colored black.
- ❑ The brown wire must be connected to the terminal marked with the letter L or colored red.
- ❑ The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. ().

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician

DISPOSAL INFORMATION



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

GUARANTEE

This product is guaranteed against manufacturing defects for a period of

1 year

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Argos Ltd
489 – 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW