

PRODUCT REGISTRATION: GLASS DOOR DRINKS COOLERS

Please either **register your product online at www.husky-lifestyle.co.uk** OR complete this form, selecting answers as necessary. When completed, remove this page from the manual, fold and seal it with tape or staples, then post to the address shown overleaf. Husky Retail Ltd values your privacy. The company will only use this data for their own marketing purposes. Names and addresses will not be forwarded on to other parties.

If you do NOT wish to receive marketing information from Husky Retail Ltd, please tick this box ☐

MR/MRS/MS/OTHER: NAME: DATE OF BIRTH: MALE/FEMALE

YOUR ADDRESS:

POSTCODE: DATE OF PURCHASE:

SERIAL NO: 8 6 (This is typically located on the back of the exterior of the cooler)

TELEPHONE/MOBILE NO: E-MAIL ADDRESS:

Unless otherwise marked, please **circle one answer only**.

1. Who bought this Husky Drinks Cooler?
YOU PARTNER FRIEND RELATIVE OTHER

2. If you answered "YOU" above, where did you purchase this unit?
ARGOS CURRYS TESCO ASDA
OTHER: (please specify)

3. Type of purchase? **ONLINE IN-STORE**

4. For what occasion? **HOME USE SPORTING EVENT PARTY BARBECUE GIFT OTHER**

5. What appliance has been purchased?
Brand (i.e. "Stella Artois". If the unit is unbranded, leave this field blank):

Model No. (i.e. "HUS-EL189". This is shown on the product label on the back of the unit – see page 3):

6. Where did you hear about this appliance?
ADVERTISEMENT STORE FLYER STORE CATALOGUE STORE RECOMMENDATION OTHER RECOMMENDATION HUSKY WEBSITE OTHER WEBSITE:

7. What was the most important factor when choosing this product? **DESIGN CAPACITY DRINKS BRAND** (if applicable) **HUSKY BRAND OTHER:**

8. Where do you keep your Husky appliance?
KITCHEN DINING ROOM LOUNGE BEDROOM OFFICE OTHER:

9. What do you store in your Husky appliance?
BEER WINE OTHER ALCOHOL SOFT DRINKS WATER OTHER:

10. If you have a branded unit, how often are the beverages you store the same as the brand on the cooler? i.e. Stella Artois stored in a Stella Artois branded unit.
ALWAYS OCCASIONALLY NEVER

11. Are there any other brands which you would like to see on a Husky product?

12. What, if any, is the brand of beer/wine you drink most often at home?

13. Are there any features you would like to see on your Husky product?

14. Which newspapers/magazines do you read regularly? (Please list all)



Husky Retail Ltd supply a wide range of drinks and wine coolers in branded and unbranded designs, and suitable for all drink types.

For information on the latest range, visit www.husky-lifestyle.co.uk or call 01455 555397.

HUSKY

For the latest brand news, exclusive discounts and promotions, join the Husky Owners Club. Simply send an e-mail, stating the brand featured on your cooler, to huskyowners@husky-lifestyle.co.uk, or register online at www.husky-lifestyle.co.uk

Husky Retail Ltd.
37 Station Road, Lutterworth LE17 4AP, U.K.
Tel: +44 (0)1455 555397 Fax: +44 (0)1455 555376
Visit our web site: www.husky-lifestyle.co.uk

HUSKY

Husky Drinks Cooler

Owner Manual

To ensure safe operation, please read this instruction manual thoroughly before use.



ENGLISH

HUSKY

Husky Retail Ltd. 37 Station Road,
Lutterworth, Leicestershire LE17 4AP, U.K.
Tel: +44 (0)1455 555397 Fax: +44 (0)1455 555376
www.husky-lifestyle.co.uk

HU0516

Images for illustration only. Stock not included.

HU0516

CE For illustration only.



Husky Drinks Cooler

Thank you for buying this Husky Drinks Cooler. It has been designed and manufactured for years of trouble-free service.

Operation is very simple, but please take a few minutes to read this booklet. It contains important safety information, and tips to ensure you receive the best possible service from your Husky Drinks Cooler.

This appliance is intended to be used exclusively for the storage of beverages and is not suitable for the storage of food or any perishable drinks.



**WARNING:
RISK OF ELECTRICAL SHOCK HAZARD
USERS IN EUROPE** This unit must be earthed.

If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF. Ensure that the appliance is properly earthed. Stop using the appliance immediately if electric shock is felt when touching the cooler.

**DISPOSAL OF OLD REFRIGERATORS
BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE
DOOR(S) AND DISCARD SEPARATELY.**

**WARNING – CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH
THE OLD APPLIANCE. CONTACT YOUR LOCAL AUTHORITY FOR PROPER
DISPOSAL PROCEDURES.**

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

Please note: the cooling system contains gases and refrigerants which require specialist waste disposal. The valuable materials contained in a refrigerator can be recycled.

Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions. Please ensure the pipework of your cooler is not damaged prior to disposal. You can contribute to environmental awareness by insisting on an appropriate non-polluting method of disposal.

DISPOSAL OF PACKAGING

All the packaging materials with your Husky Drinks Cooler may be disposed of without danger to the environment.

The cardboard carton and polythene wrappers are fully recyclable – check with your local authority for the best recycling options. The expanded polystyrene materials included in the packaging can be placed in general waste.



Warranty

This Husky appliance is guaranteed to be free from defects in parts and manufacture for 12 months from date of purchase, provided that the unit is used under the normal operating conditions shown within the manual. Your attention is drawn to the following:

- Husky Retail Ltd. will not accept any liability for damage or injury caused by improper use.
- Husky Retail Ltd. will not be liable for any damage caused by moving the appliance; improper power supply; defective wiring or fuses; accident, alteration, abuse or misuse of the appliance; abnormal operating conditions; commercial or industrial use; fire; water damage; or customer misuse.
- This warranty is void if service on the unit is performed by any person other than an approved technician, or if the appliance is used for commercial purposes.

This warranty is available only to the original purchaser and is not transferable. Your normal consumer rights are not affected.

If service is required, **DO NOT ATTEMPT TO REPAIR UNIT YOURSELF.** Please return unit to store. Proof of purchase will be required for any warranty claims. You must retain your original receipt. If service under warranty is required, you will be required to produce this. Please also retain the original packaging should the unit need to be returned.

Please note: As part of our policy of continuous product improvement, Husky Retail Ltd. reserves the right to amend specifications without notice.



REMOVE THIS COMPLETED FORM FROM THE MANUAL, FOLD AND SEAL WITH TAPE OR STAPLES BEFORE POSTING

FOLD HERE

Affix
stamp
here

**Product Registration
Husky Retail Ltd.
37 Station Road
LUTTERWORTH
LE17 4AP
United Kingdom**

When not in use

If the unit is not being used for long periods:

- Unplug your Husky Drinks Cooler.
- Clean and dry the inside of the appliance. Leave the door slightly open to allow it to dry completely.
- A cooler which is unused without being cleaned may start to smell musty or develop mildew.

DEFROSTING

- The surface of the evaporator ices up when the drinks cooler is working. This is an entirely normal part of operation. If the frost layer is more than 3mm / 1/8" thick, the cooler must be defrosted and cleaned to avoid unnecessary energy consumption and inefficient operation.

1. Remove all items inside and unplug the unit.
2. After defrosting, clean the unit (see instructions below) and allow it to dry.

Cleaning

1. Unplug your Husky Drinks Cooler.
2. Wash the interior with warm water and neutral detergent.
3. Dry all surfaces thoroughly.

Note: Do not use abrasive cleaners!

To ensure efficient operation the back and bottom of the cooler should be cleaned thoroughly. Use mild soapy water to clean the door seal.

Moving your Husky Drinks Cooler

- Unplug the appliance
 - Remove all items inside
- Note: Never hold the appliance by the door.

Power Failure

- If a power cut occurs, do not open the door more often than necessary in order to conserve cold air.

TROUBLESHOOTING

Before returning your Husky Drinks Cooler to the store, check the following points; you may be able to solve any problem yourself.

Problem	Solution
Not cooling	<ul style="list-style-type: none"> • Check power cable is connected and fuse is intact. • Wrong temperature selected. • Adjust setting on the thermostat (see page 5) • Cooler is overfilled. • Appliance exposed to direct sunlight or a heat source. • Door is opened too often.
Unusual noises or noisy operation	<ul style="list-style-type: none"> • Appliance is not on a level, firm surface or may be touching other items. • Note: It is normal to hear refrigerant flowing as the compressor stops and starts.
Outer surfaces are wet	<ul style="list-style-type: none"> • Water source or leak too near the appliance – dry surfaces thoroughly and move the appliance.
Inner surfaces are wet	<ul style="list-style-type: none"> • Door opened too often or kept open too often.

SAFETY INSTRUCTION & WARNINGS

 
Before switching on your Husky Drinks Cooler, read the information in this User Guide carefully. The User Guide contains important observations relating to the assembly, operation and maintenance of the appliance. Please keep this booklet in a safe place for future reference. If you ever sell this unit, hand this User Guide to the new owner. The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.

WARNING: When positioning the appliance ensure the supply cord is not trapped or damaged. Do not locate extension sockets or charging transformers/power supplies adjacent to the compressor at the back of the unit, as they could overheat.

- Do not use damaged appliances. If you are in any doubt, consult the supplier.
- Connection and installation of the unit is to be carried out in strict compliance with the relative instructions in this User Guide.
- For safety, the appliance must be properly earthed in accordance with specifications.
- Always remember to unplug the appliance before cleaning. Never unplug your cooler by pulling on the power cable. Always grip plug firmly and pull straight out from the socket.
- All electrical repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous.
- DANGER OF FERMENTATION: Keep alcoholic beverages in airtight bottles or containers.
- Do not damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If the refrigerant comes into contact with the eyes, it may cause serious eye injury.
- Do not obstruct or cover the ventilation aperture.
- Do not allow children to play with your Husky Drinks Cooler, or to sit on it or hang onto the door.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


WARNING: THE METAL RAILS ON THE BOTTOM UNDERNEATH OF THIS DRINKS COOLER MAY HAVE SHARP EDGES, SO ALWAYS UNPACK AND HANDLE WITH CARE.

DO NOT DRAG THE UNIT: PLACE CAREFULLY IN POSITION TO AVOID THE SCRATCHING OF SURFACES.

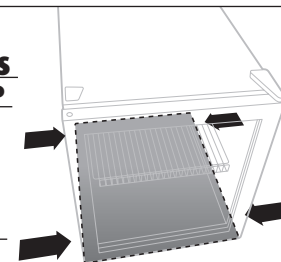

SPECIFICATIONS

 - This appliance is a cellar compartment for the storage of beverages. It is not suitable for the storage of fresh food.
- It is intended strictly for domestic use.
- The refrigerating circuit is leak-proof.

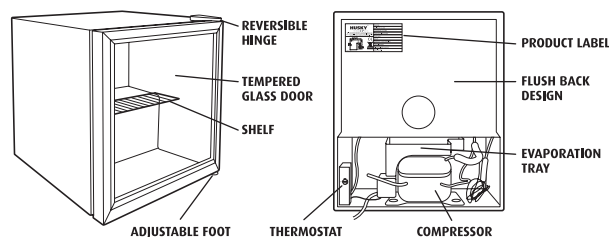

REVERSING THE DOOR HINGE

The door can be opened from left to right and vice versa. Should you wish to change the opening direction, please follow these instructions.

Note: all parts removed should be kept safely. You will require these for the reinstallation of the door.

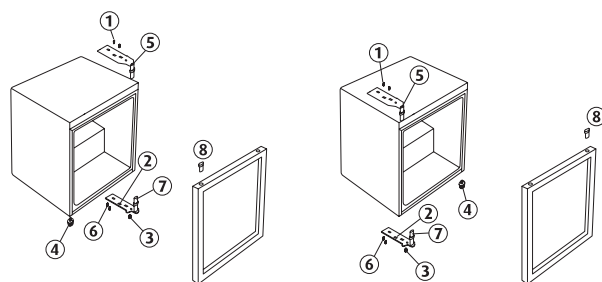 


Fig 1 Position of components prior to reversal of the door hinge.

Fig 2 Position of components after reversal of the door hinge.

- Remove the two screws (1) that hold the upper hinge (5) (right side) to the frame.
- Lift the door off and place on a padded surface to prevent scratching.
- Remove the blanking plug (8) from the hole in the upper left corner of the door and transfer it to the uncovered hole on the upper right corner. Press firmly to secure it.
- Remove the two screws (6) that hold the lower hinge (2)
- Remove the adjustable front left foot and transfer it to the other side.
- Remove the bolt pin (7) from the lower hinge (2) and reverse the direction of the lower hinge. Secure the lower hinge (2) to the left side of the lower frame with the two screws (6). Re-insert the bolt pin (7). Set the door into position, making sure it is seated comfortably onto the lower hinge (2).
- Holding the door closed, secure the upper hinge (5) into the top frame with the two screws (1). Check the door is level and tighten the screws firmly.

HOW TO MINIMISE THE ENERGY CONSUMPTION OF YOUR HUSKY DRINKS COOLER

- Energy consumption will be lower if the unit stands in a well ventilated space and in particular if vent at the back of the unit is clear of obstruction.
- Do not place the appliance in direct sunlight or near a heat source such as ovens, radiators, heaters, etc as this will increase energy consumption.
- Keep the door closed as much as possible.
- Setting the thermostat cooler (towards 5 on the dial) means higher energy consumption, so set only as cool as you really require.
- Do not overfill the cabinet - overfilling means that the cool air cannot circulate freely inside the cabinet which may slow the process of cooling and make the cabinet less efficient.
- Defrost the appliance if frost can be seen building up inside - frost will increase energy consumption and make the cooling process slower.
- Turn the appliance off completely if it is not required for a period of days or longer to avoid wasting energy (see also section 'When not in use').

BASIC OPERATION

Your Husky Drinks Cooler must stand on an even, flat surface for quieter operation.

 
If the appliance is to be placed on carpet, support it with a wooden board underneath. Be aware that placing the appliance on carpet may mean that heat from the compressor may cause the carpet to fade.

Thermostat settings

The settings 1 (MIN) – 5 (MAX) regulate the interior temperature.

Setting 1 (or MIN) = lowest setting (warmest internal temperature)

Setting 5 (or MAX) = highest setting (coldest internal temperature)

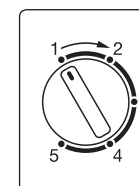

To operate

1. Clean the inner compartment.
2. Plug in your Husky Drinks Cooler.
3. To turn the unit off, disconnect the plug from the mains supply.

NOTE: If the unit is unplugged or power lost, you must wait 3 to 5 minutes before restarting. If you attempt to restart the unit before this delay, the unit will not start.

WARNING

If the thermostat is set to too cold a setting, beverages may become frozen. In extreme circumstances, glass bottles may even break. Always exercise caution when setting the temperature.

- Do not place heavy items (more than 20kg/44lbs) on top of the cooler.
- Do not place any items on top of the cooler which may fall off when the door is opened.
- After the appliance has been unplugged, leave for three minutes before plugging it in again.

