

BUSH

Instruction manual

Model: SR190DG

1128352



You'll soon be enjoying your new Soundbar with Wireless Subwoofer.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Soundbar with Wireless Subwoofer. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021**.

Contents

1. Safety information

Power source	8
Moisture and water	8
Heat sources and flames	9
Ventilation	9
Care and cleaning	9

2. Getting to know your Soundbar

Accessories	12
Soundbar and Wireless Subwoofer	13
Remote control	14
Inserting batteries	15
Positioning the Soundbar and Wireless Subwoofer	15
Making the connections	16

3. Using your Soundbar

Power on	20
Standby mode	20
Change the mode (Audio source)	20
Adjusting the volume	21
Bass or Treble enhancement	21
Pairing with a Bluetooth device	21
Controlling a paired device	22
USB mode	22
Line in mode	23
Aux in mode	24
Optical mode	24

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on **0345 600 3021**.

Contents

 
HDMI ARC Mode	24
Wall mounting your Soundbar	25
4. Other information	
Technical specification	30
5. Product support	
Troubleshooting	34
Help and assistance	35
Disposal	36

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

This page is left intentionally blank

Safety information 1

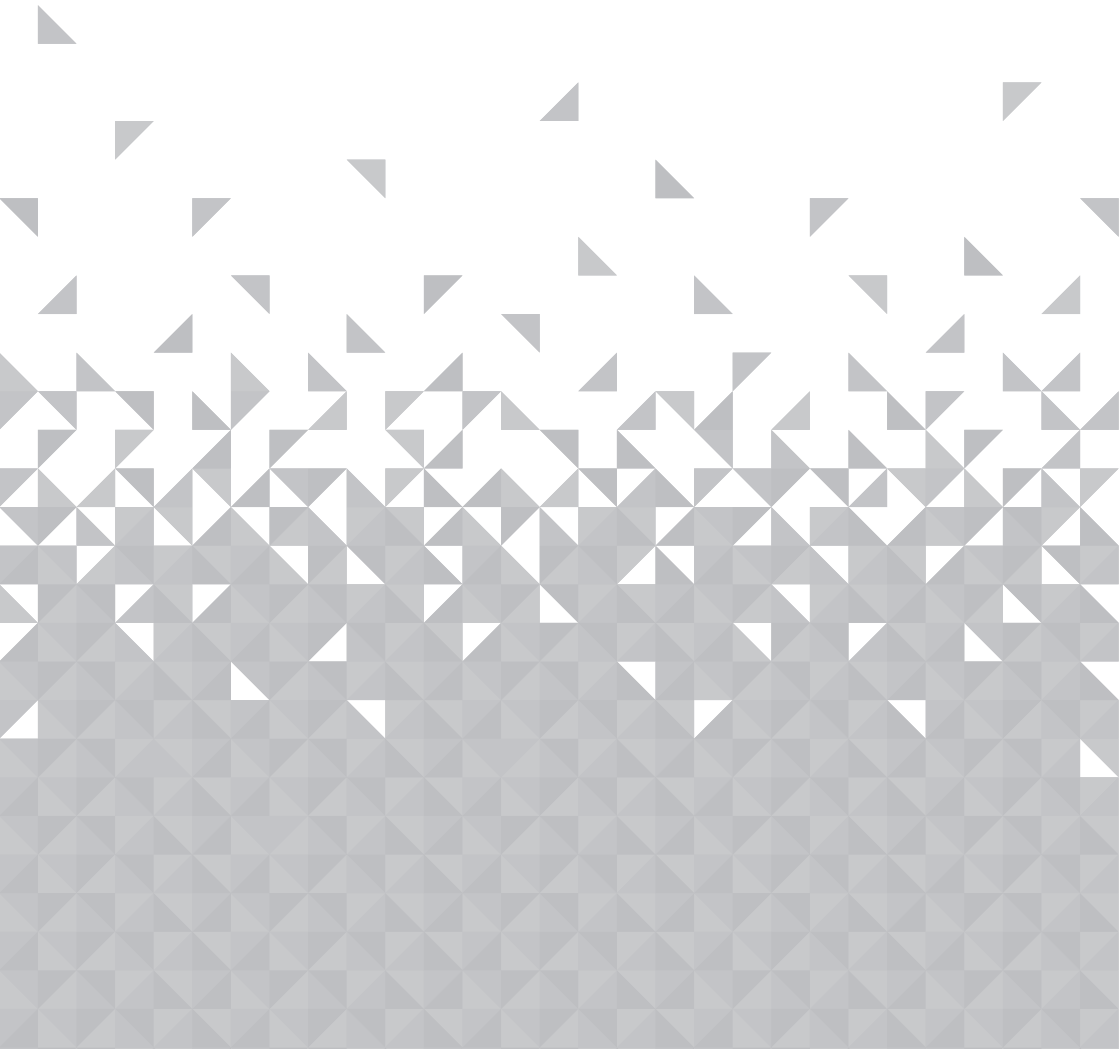



Safety information

Important - Please read these instructions fully before installing or operating

Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your soundbar and subwoofer from the mains power supply during thunderstorms.
- Always check that you have completely switched off your soundbar and subwoofer, before you change or disconnect the power supply.
- When installed, the power socket must be within easy reach.
- Do not bend, stretch or pull the supply cables in order to avoid electric shock.
- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the product may damage it and will void your warranty.
- Switch the soundbar and subwoofer off at the mains power socket and unplug it if you are leaving it unattended for a long period of time (holidays etc).
- Remove the batteries from the remote control if it will not be used for an extended period of time.
- Only use recommended batteries or those of the same or equivalent type in the remote control.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.

Moisture and water

- Do not use this product near water or moisture.
- Do not use this product near a bath or sink, near a swimming pool or anywhere else that water or moisture is present.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

Heat sources and flames

- Do not leave this product in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.

Ventilation

- Do not install this product in a confined space.
- Allow adequate ventilation to prevent heat build-up.
- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
- For indoor use only.

 
Care and cleaning

- All care and cleaning operations should be carried out with the Soundbar and Subwoofer unplugged from the mains power.
- Occasionally wipe the cabinets with a lint free cloth.
- Never clean the units with liquids or solvents.

This page is left intentionally blank

Getting to know your Soundbar

2

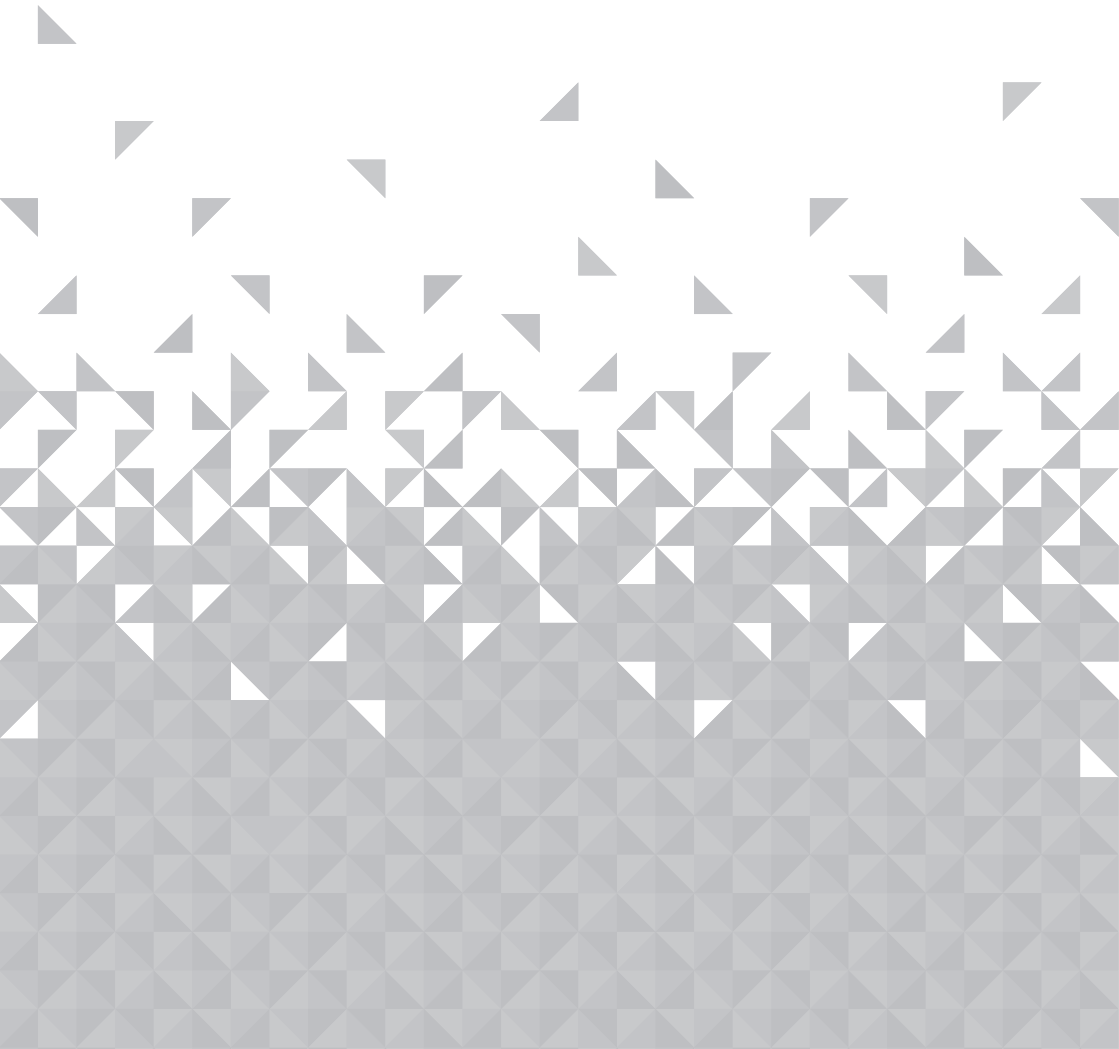

Getting to know your Soundbar

You'll be up and running in no time

 
Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.


If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories


Remote control (requires 2 x AAA batteries included)

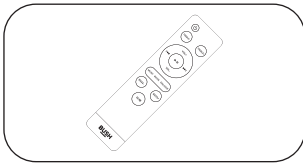


Rawl plugs and screws

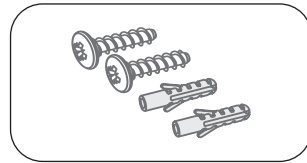 

 
3.5mm to RCA cable

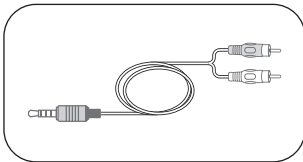

Wall mounting brackets

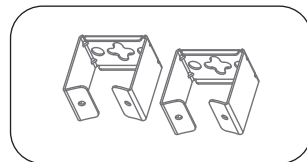 

Mains power adapter X 2

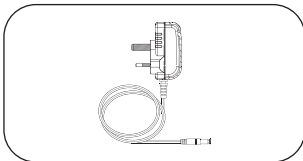 


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Soundbar

You'll be up and running in no time

 Soundbar and Wireless Subwoofer

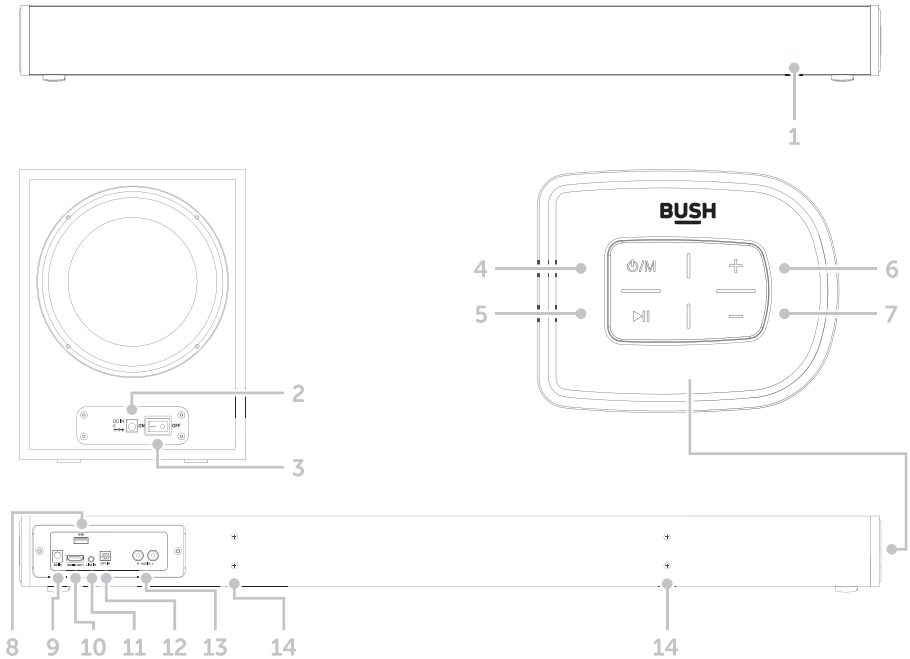


1. Power on and Source Mode indication LED's
2. Subwoofer Power input socket (DC in)
3. Subwoofer On/Off switch
4. Power on/Audio source (Bluetooth/USB/Line in/Aux-in/Optical/HDMI ARC)
5. Bluetooth Pair/Disconnect & Play/Pause in BT and USB modes
6. Volume +
7. Volume -
8. USB socket
9. Power input socket (DC in)
10. HDMI ARC connection
11. LINE IN socket
12. Optical input
13. RCA inputs
14. Wall mounting bracket fixing points

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on **0345 600 3021**.

Getting to know your Soundbar

You'll be up and running in no time

 Remote control

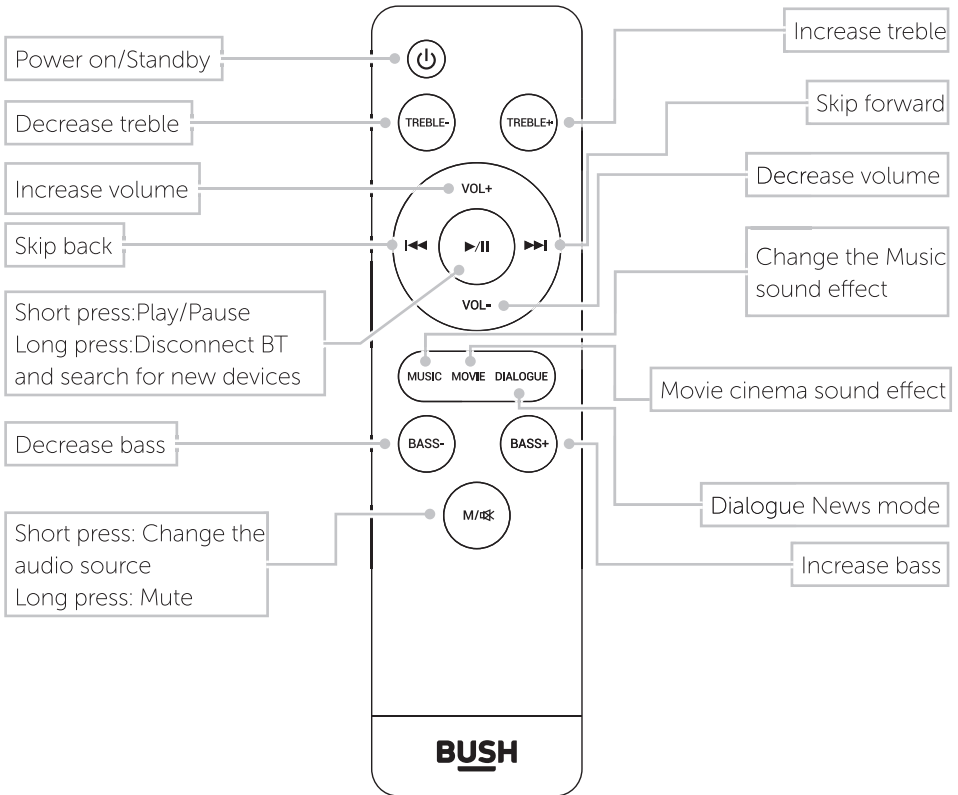


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Soundbar

You'll be up and running in no time

Inserting batteries

 1. On the back of the remote control, press in the tab on the battery compartment cover to remove it.
2. Insert the 2 x AAA batteries supplied, making sure to note the '+' and '-' markings and position the batteries the correct way around.
3. Replace the battery cover, making sure that it 'clicks' shut.



Positioning the Soundbar and Wireless Subwoofer

Your Wireless Subwoofer is already paired to your Soundbar but it's important that you consider carefully in advance where your Soundbar and Wireless Subwoofer will be situated and make sure that they are:

- on a flat and stable surface or that the Soundbar is securely wall mounted
- within 1.4 metres of a power socket. Please ensure that the mains power leads are not trip hazards.
- where the Soundbar will be in range of the connected or 'paired' bluetooth device (e.g. TV/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- never place your Soundbar or Subwoofer directly onto antique or polished surfaces.

Getting to know your Soundbar

 
You'll be up and running in no time

Making the connections

Note: Please **do not** switch on the mains power until ALL the required connections have been made.

1. Decide which connections and cables you will use with your Soundbar.
2. After the required connections have been made, plug the mains power lead into the socket on the back of the Soundbar and then plug the power adaptor into the mains power wall socket and switch on.

Note: Before connecting digital optical cable, ensure any protective stoppers have been removed from the ends of the cable and the rear of the optical socket of the soundbar.

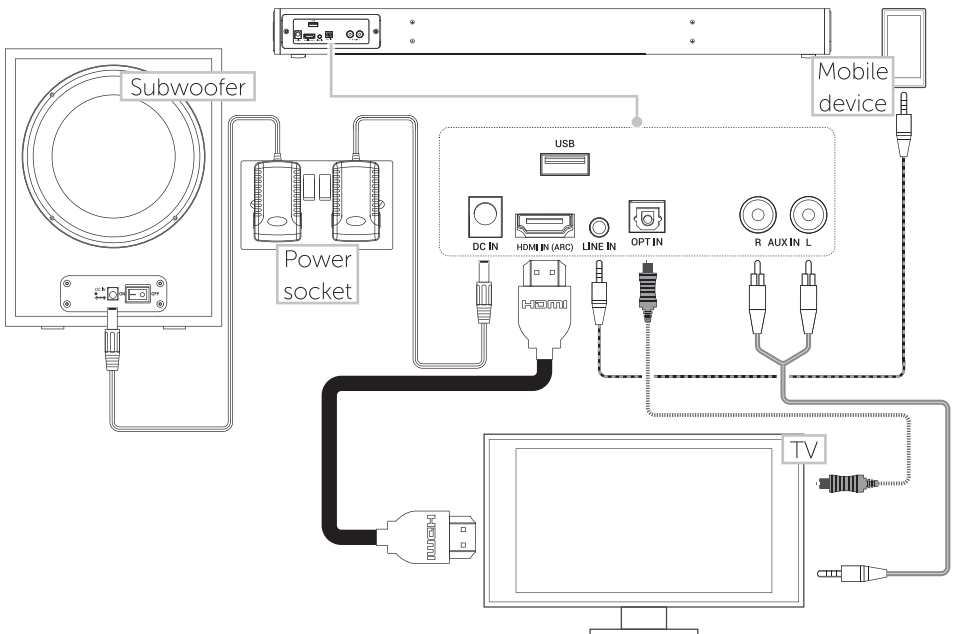


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

This page is left intentionally blank

Using your Soundbar

 3

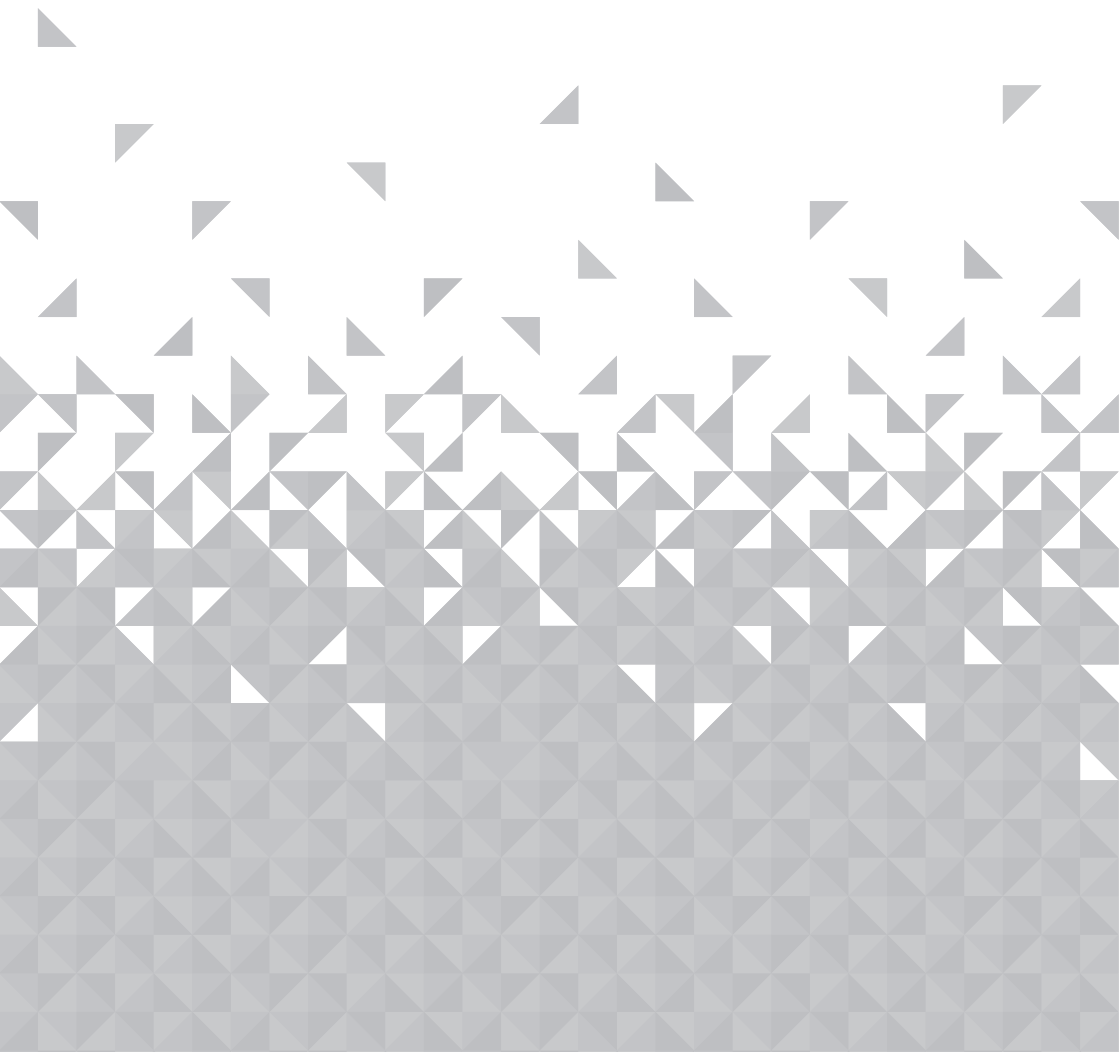

Using your Soundbar

Let's get started

Power on

Press and release the Power button on the end of the Soundbar or on the remote control. Your Soundbar will switch on in Bluetooth mode and will search for Bluetooth devices.

Note: This Soundbar has a 'last function used' memory. It will turn on in the last mode used before it was turned off if the product has not been unplugged.

Standby mode

Press and hold the Power button on the end of the product or press and release the Power button on the remote control. Your Soundbar will go to Standby mode.

Note: This product is designed to go to STANDBY mode automatically after 15 MINUTES (approximately), if it does not receive an audio signal. Press and release the Power button on the Soundbar or on the remote control to switch your product back on again.

Change the mode (Audio source)

Press and release the **B/M** button on the end of the Soundbar or the **M/** button on the remote control to change between Bluetooth/USB/Line in/Aux-in/Optical and HDMI ARC modes. Connect a USB stick in to the USB socket on the back of the Soundbar to switch directly to USB mode.

Check the LED indicator on the front of your Soundbar which will confirm the current mode

Standby:..... Red
Searching for BT devices:..... Blue flashing
BT connected: Blue
USB: Pink
Line In:..... Green
Aux in: Light blue
Optical:..... Orange
HDMI: White

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Soundbar

Let's get started

Adjusting the volume

- on the soundbar and Vol - on the remote

- Press and release to decrease the volume in steps.
- Press and hold to progressively decrease the volume.

+ on the soundbar and Vol + on the remote

- Press and release to increase the volume in steps.
- Press and hold to progressively increase the volume.

Note: There are 32 volume levels. The soundbar audio source LED will flash at each press of Vol- / Vol+ button on remote control or soundbar until minimum or maximum volume level has been reached and LED is static.

Bass or Treble enhancement

The Bass and Treble settings each range from -6 to +6.

1. Press and release the Bass or Treble + or - button on the remote control to adjust the Bass or Treble as appropriate.

Pairing with a Bluetooth device

Before you can use your Soundbar in Bluetooth mode with your TV or other Bluetooth capable device, you need to 'pair' it.

1. When you first power on your Soundbar or when you change the mode to Bluetooth, the product will search for Bluetooth devices and you will see a blue flashing LED on the front of the Soundbar.
2. On the device that you would like to connect to your Soundbar via Bluetooth (e.g. TV/ iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Using your Soundbar

Let's get started

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. When found, your Soundbar will be displayed as 'BUSH SR190DG'. Select the device name to begin pairing.

Note: If your device requests a password, please enter '0000' to complete the device pairing.

4. Check the Soundbar, the blue LED will stop flashing and will remain on when pairing has been successful.
5. Now that you have paired your device with the Soundbar, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
6. Your device will remain paired with the Soundbar unless you decide to disconnect or 'unpair' it.

Note: You can press and hold the  button on end of the Soundbar to unpair your current device and search for new devices.

Controlling a paired device

Once paired you can either use the controls on the connected audio device to play/pause, skip tracks etc., or you can use the control buttons on the Soundbar remote control.

 Play/Pause

 Press and release to skip forward

 Press and release to skip back

USB mode

Insert the USB stick which has the music files you wish to play, into the USB socket on the back of the Soundbar. Check that you line up the USB stick with the USB socket and that it is the right way around. When connected correctly, the LED indicator on the front of the Soundbar will change to Pink.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Soundbar

Let's get started

Note: Your Soundbar will support mp3, wma and wav audio formats.

You can use the remote control to play/pause and skip tracks on the USB.

 Play/Pause

 Press and release to skip forward

 Press and release to skip back

Note: Remember to unplug the USB stick after use to access the other modes on your Soundbar.

Line in mode

Check that your Soundbar is in Line in mode. If you are not already in Line in mode, press and release the **Ⓞ/M** button on the Soundbar or the **M/🔇** button on the remote control to go to Line in mode. The LED indicator on the front of your Soundbar will change to green when you are in Line in mode.

1. Connect one end of a 3.5mm audio cable (not supplied) to the headphone (or auxiliary out) socket of your secondary device.
2. Connect the other end to the Line in socket on the back of your Soundbar.
3. Press the Play button on your external device to start playback through the Soundbar.

To gain optimal volume levels, adjust the volume level on both the secondary device and on the Soundbar.

Note: It is recommended that you unplug the audio cable from the Line in socket on the back of the Soundbar, after you have finished listening to your external device.

Note: If you are connecting to a DVD player, audio equipment, games console, satellite box or TV which has RCA phono AUDIO OUT sockets, then use supplied RCA cable to connect to the AUDIO OUT sockets of the source and the other end to the 3.5mm LINE IN socket of the soundbar. Ensure cable red plug inserted into the red socket & cable white plug into the white socket.

Using your Soundbar

Let's get started

Aux in mode

Check that your Soundbar is in Aux in mode. If you are not already in Aux in mode, press and release the **⏻/M** button on the Soundbar or the **M/🔊** button on the remote control to go to Aux in mode. The LED indicator on the front of your Soundbar will change to light blue when you are in Aux in mode.

1. Connect the Left (white) and Right (red) plugs of supplied RCA cable to the Left (white) and Red (right) sockets on the back of the Soundbar.
2. Connect the other end of the cable to the Audio out (Line out / Aux out) socket on your TV. The sound output from your TV, will now be via your Soundbar.

To gain optimal volume levels, adjust the volume level on both the TV and on the Soundbar.

Note: Ensure audio out is set to Line out / Aux out on your TV. Refer to TV instruction manual.

Optical mode

Check that your Soundbar is connected to the TV or other audio device using an Optical cable (not supplied) and is in Optical mode.

If you are not already in Optical mode, press and release the **⏻/M** button on the Soundbar or the **M/🔊** button on the remote control to go to Optical mode. The LED indicator on the front of your Soundbar will change to orange when you are in Optical mode.

Note: Ensure digital audio output is set to PCM and audio out set to Optical (S/PDIF) on your TV. Refer to the TV instruction manual.

HDMI ARC Mode

Check that your Soundbar is connected to the TV using an HDMI cable (not supplied) and that this is plugged into the HDMI ARC socket on the back of the Soundbar.

If you are not already in HDMI mode, press and release the **⏻/M** button on the Soundbar or the **M/🔊** button on the remote control to go to HDMI mode. The LED indicator on the front of your Soundbar will change to white when you are in HDMI mode.

Note: Ensure digital audio output is set to PCM and audio out set to HDMI ARC on your TV. Refer to the TV instruction manual.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

 
Using your Soundbar

Let's get started

Wall mounting your Soundbar

You can wall mount your Soundbar. You will need:

- the 2 wall mount brackets included with your soundbar
- 2 x rawl plugs of a type and size that are suitable for the wall that you will hang the Soundbar on. 2 rawl plugs have been supplied but please check that these are suitable for the wall surface that you will use.
- 2 x screws that are the correct size for the rawl plugs. 2 screws have been supplied which are the correct size for the rawl plugs provided, but you will need to check that they will be sufficient for the wall surface that you will use.

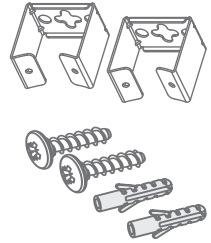

You will also need to check that the screw heads fit and hold well into the wall mount points on the back of the Soundbar.

 
Notes:

- Make sure that the screws and rawl plugs you use are suitable for supporting the Soundbar.
- To avoid damage to the Soundbar and personal injury, you should get a qualified person to drill the fixing surface and fit the appropriate wall fixings.
- When drilling into walls, always check that there are no hidden wires or pipes etc.
- Before wall mounting your product, check the wall strength. If this is not clear, then consult relevant qualified personnel.
- Take care not to allow the Soundbar to fall whilst attempting to hook it onto the screws you have fitted to hang the product onto.

Using your Soundbar

Let's get started


1. Unscrew the 4 screws that are in the back of the Soundbar for the wall mount brackets. Use these screws to attach the wall mount brackets supplied.

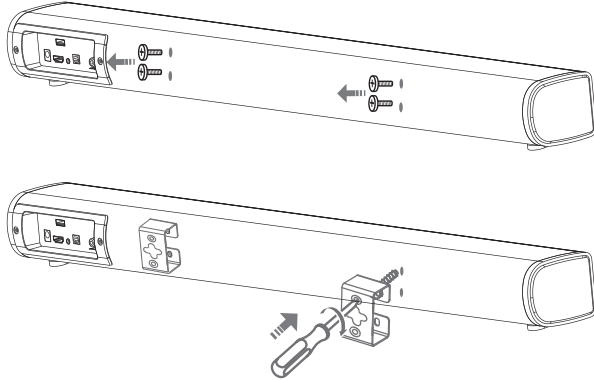

2. Align the Soundbar in your chosen location and use a pencil to mark the drilling positions of 406 mm (16 inches) apart.
3. Drill the holes as marked in point 2 above. If fixing to a solid masonry wall, use a masonry drill
4. Push 2 rawl plugs into the holes. Insert 2 screws into the holes and tighten. Take care to leave enough space between the screw heads and the wall.

Note: You will need to ensure that the screws heads can fit into the wall mount points on the back of your Soundbar and that they are long enough to sufficiently grip into the rawl plugs and wall. You must also leave enough space between the screw head and the wall for the screw head to fit into the mounts.

 5. Hang the Soundbar onto the screws. For secure mounting ensure the screw heads slide firmly into the narrow part of the wall mount fixings on the back of the Soundbar.

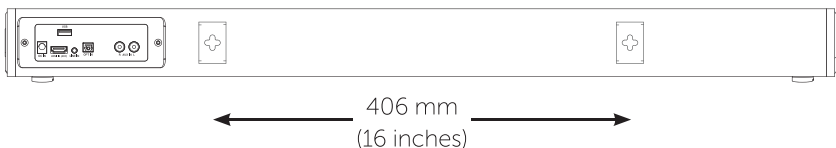

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

 
Note: If fixing to timber, follow the directions above, use a drill bit suitable for wood but only drill a small pilot hole for each screw and do not use the rawl plugs provided.

Note: If fixing to hollow plaster board walls, use a drill bit suitable for wood and replace the rawl plugs with wall anchors appropriate for the application. Locate the fixing points into wall studs and cross braces where possible.

This page is left intentionally blank

Other information

4

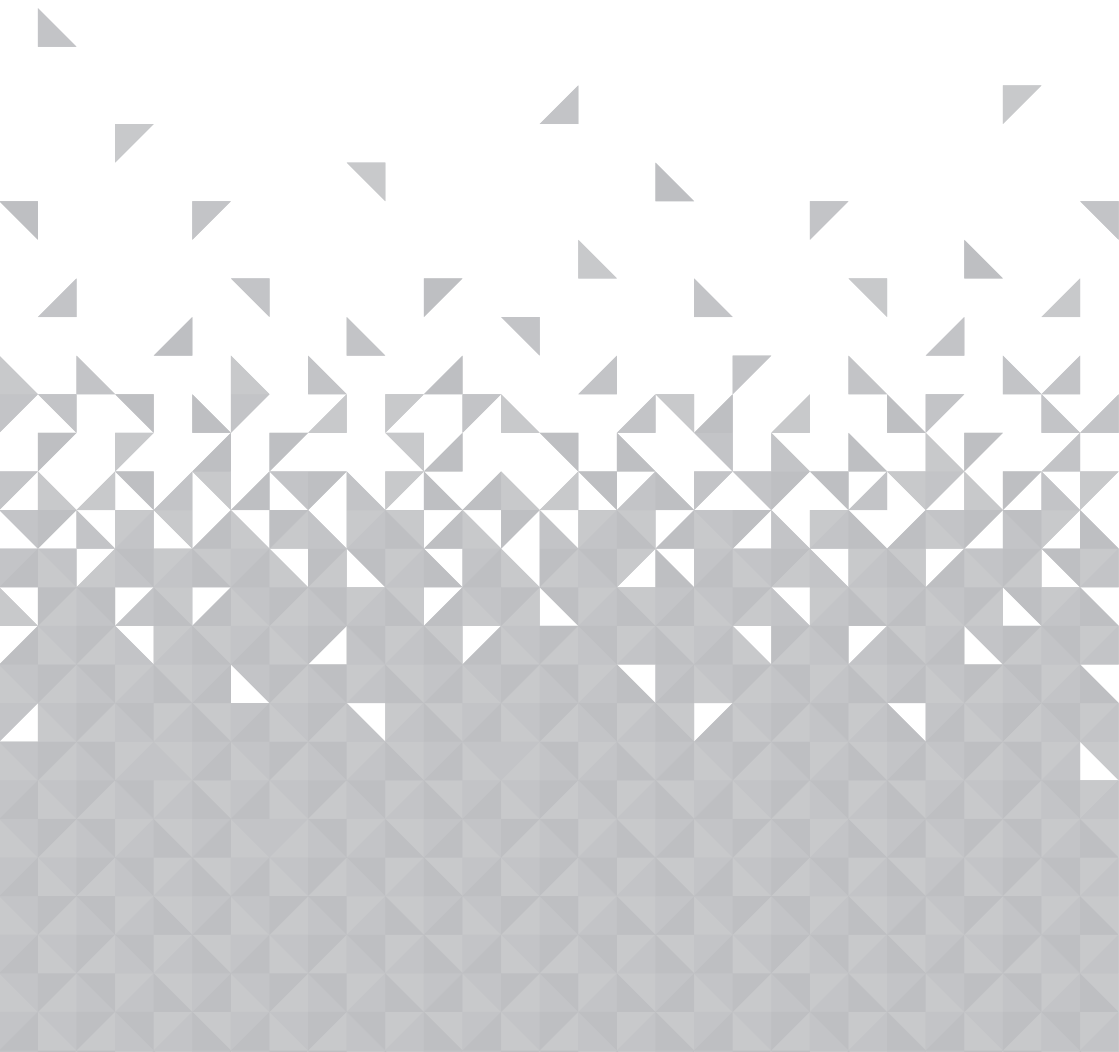

Other information

Helpful technical information

Technical specification

Power output	2 x 30W + 60W RMS @10% THD
Frequency response	20Hz - 20kHz +/- 4dB
Input sensitivity	Line in: 800mV, Aux in 1000mV
Main unit	
Power supply (x2 adapters)	Input: 100-240V ~ 50-60Hz Output: 24V 2A
Power efficiency/ 10% load	>=86.76%
Power adapter make and model	Jiedong Electron Factory JDA2400200WZ
Power consumption	69.2W
Standby power consumption	≤ 0.5W
Dimensions	Soundbar: 810 x 84 x 72 Subwoofer: 195 x 300 x 254mm
Mains cable length	1.5M
Remote control	
Battery	2 x AAA
Bluetooth	
Bluetooth compatibility	A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP, SMP, ATT, GAP, GATT, RFCOMM, SDP, L2CAP PROFILE
Bluetooth version	V5.1
Pairing name	BUSH SR190DG
Frequency range	2.402GHz-2.480GHz
Bluetooth distance	10m
Max RF power	BDR+EDR:-1.63dBm Max BLE:-1.54dBm Max.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Other information

Helpful technical information



 
Declaration of Conformance

Hereby, Argos Ltd, declares that this SR190DG Soundbar with Wireless Subwoofer is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU and UK Radio Equipment Regulations 2017. The complete declaration of conformity can be obtained from www.argos-support.co.uk

The BluetoothR word mark and logos are registered trademarks owned by BluetoothSIG.Inc.and any use of such marks by Sainsburys Argos is under license. Other trademarks and trade names are those of their respective owners

This page is left intentionally blank

Product support 5

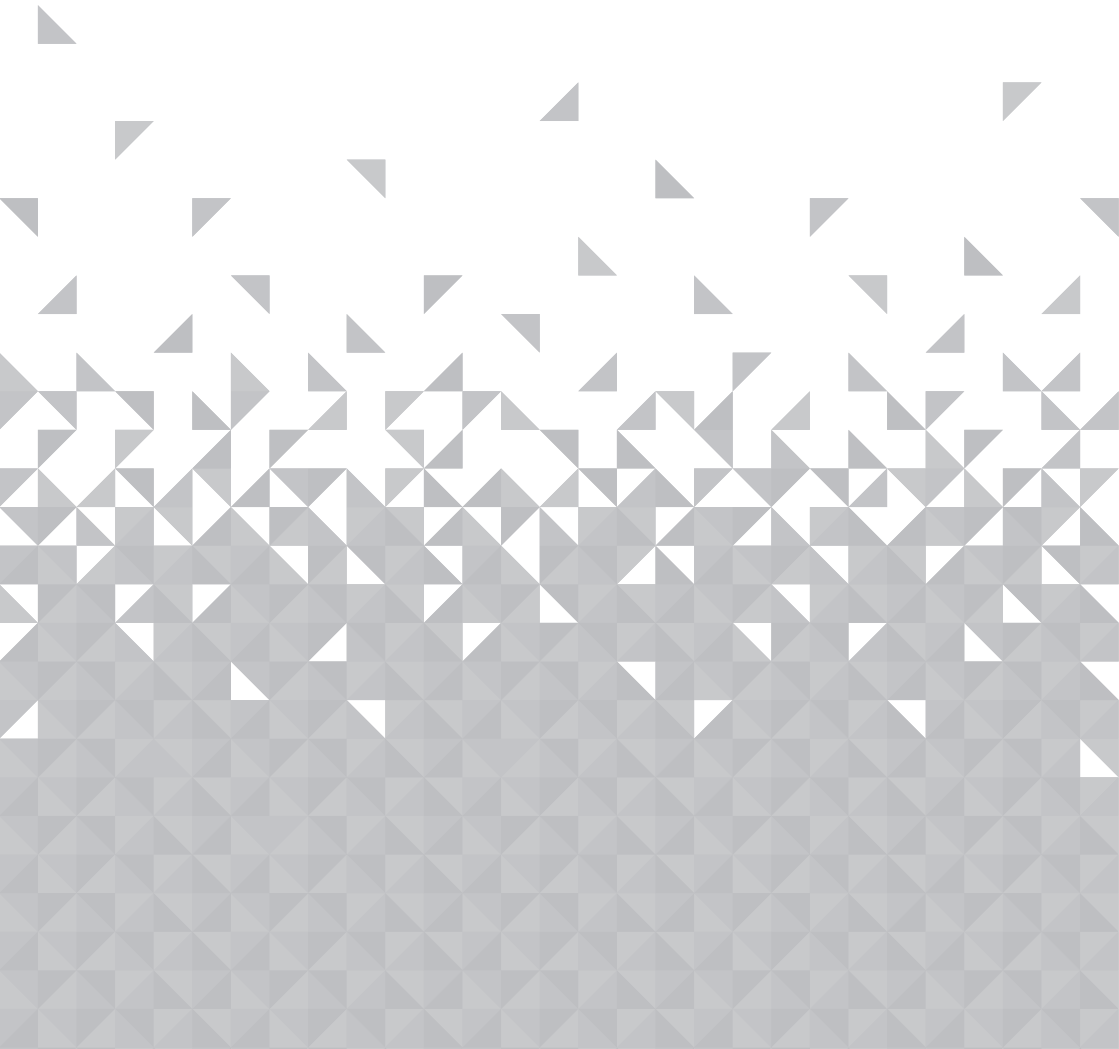

Product support

Help is always at hand

Troubleshooting

No power:

- Check the power plug connection at the back of the Soundbar and at the wall socket.
- Check that you are not in Standby mode. Press and release the Power button on the Soundbar or on the remote control.

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the Soundbar for Bluetooth functionality, 10 metres or less (33 feet or less).
- Check that the device you are attempting to pair with supports A2DP stereo audio transmission.
- Move any other unnecessary Bluetooth devices/electrical equipment away from the Soundbar and if possible, turn them off or disable their Bluetooth functionality.

No sound / sound distortion:

- Adjust the volume
- Increase the volume on the secondary device and on your Soundbar.
- Check that you are in the correct mode for the music that you wish to listen to.

Remote control does not work:

- Reduce the distance between the remote control and the Soundbar.
- The remote control batteries may be exhausted. Replace the remote control batteries.
- The remote control needs clear line of sight, without obstacles, to function correctly. Direct sunlight or other bright light sources shining on the remote sensor may affect the performance.

Soundbar powers off:

- Your Soundbar has been designed to automatically go to Standby mode after approximately 15 minutes without an audio signal, to save power. Press the Power button on the Soundbar or on the Remote control to turn your Soundbar back on again.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Soundbar is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Product support

Help is always at hand

Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited, London, EC1M 6HA, UK. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

This page is left intentionally blank

This page is left intentionally blank

BUSH



Contact:

www.bush-support.com

Helpline: 0345 600 3021

技术要求:

- 1.名称: SR190DG-32-120说明书
 - 2.尺寸: 148x210mm
 - 3.材质: 80G书写纸
 - 4.颜色: 单黑印刷 骑马钉
 - 5.数量: 1台/说明书
- 禁止包装含矿物油