

#### Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

# A Safety and Care Advice

#### **Important** - Please read these instructions fully before starting assembly

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

- Unit weight: 6.9kgs.
- Maximum safe weight of user: 110kgs.
- Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers *for inserting screws*,

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

#### Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

#### Care and maintenance

• Please clean the product using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish. • Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.

## **Components - Parts**

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** 

#### Please check you have all the parts listed below



### **Components - Fittings**

Please check you have all the fittings listed below

*Note:* The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	B ()_111111111100>	CC
M8 x 55mm Bolt x 9	50mm Screw x 6	Spring washer x 9
Flat washer x 9	Allen key x 1	

#### Ruler - Use this ruler to help correctly identify the screws

 $0 \quad 5 \quad 10 \quad 15 \quad 20 \quad 25 \quad 30 \quad 35 \quad 40 \quad 45 \quad 50 \quad 55 \quad 60 \quad 65 \quad 70 \quad 75 \quad 80 \quad 85 \quad 90 \quad 95 \quad 100 \quad 105 \quad 110 \quad 115 \quad 120 \quad 125 \quad 130 \quad 135 \quad 140 \quad 145 \quad 150 \quad 155 \quad 160 \quad 165 \quad 170 \quad 100 \quad 10$ 

## **Assembly Instructions**

### Step 1

#### Attaching backrest

Place the backrest on a flat protected surface.

Peel off bottom cloth cover of seat by pulling the cloth from the back side of the seat.

Position the seat 4 on the backrest 1 as shown and fix using bolts (A), spring washers (C) and washers (D). Tighten bolts using allen key (E).

#### Note:

Use oval head of allen key on tight angles.



### Step 2

## Attaching side stretchers

Position the side stretchers 6 and insert it into holes on the back rest 1 as shown.



#### Note:

For the correct assembly of the side stretcher 6 to the backrest, the green arrow sticker shall be pointing up.

## **Assembly Instructions**

### Step 3

#### Attaching front legs

**a:** Correctly position the front legs **2** & **3** and insert it into holes on the seat **4** as shown.



*Note:* Identify the front right leg 2 which is labeled with 'R' sticker and the front left leg 3 with 'L' sticker.

**b:** Carefully move up the front legs and insert the side stretchers **6** into holes on the front legs as shown.



### Step 4

## Attaching front stretcher

Position the front stretcher 5 and carefully insert it into holes on the front legs 2 & 3 as shown.

## Assembly Instructions

### Step 5

#### **Fixing front legs**

Secure the front legs 2 & 3 to seat 4 using bolts (A), spring washer (C) & washers (D). Tighten bolts using allen key (E).

#### Note:

Use oval head of allen key on tight angles.



### Step 6

#### **Fixing stretchers**

Carefully turn the bar stool upside down on a raised protected surface.

Secure the stretchers **5** & **6** using screws **3** and tighten using a crosshead screwdriver.

Re-attach the bottom cloth cover as shown and secure with the fasteners attached.

Carefully turn the bar stool upright and place on a flat surface.

#### Assembly is complete.





If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800