

# LCD Alarm Clock

CAT NO.: 1182862

## Care & Instruction Manual


PLEASE READ THESE INSTRUCTIONS CAREFULLY & RETAIN FOR FUTURE REFERENCE

### Warnings

- Keep out of reach of children.
- Batteries should only be installed by an adult.

### Installation

1. Place your clock face down on a flat surface.
2. Remove the battery cover at the back of the clock.
3. Insert 2 x AAA batteries into the battery compartment by observing the correct "+" and "-" polarity.
4. Replace the battery cover.

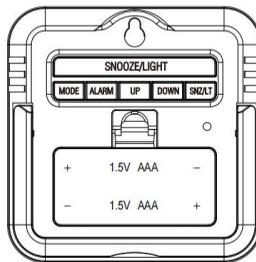

### Manual Time Setting

- Hold MODE button for 2 seconds, then press UP or DOWN buttons to adjust the setting and press MODE button to confirm each setting.
- The setting sequence is shown as follow: Hour, Minute, Year, Month, Date, Language.

### Daily Alarm Setting

- Hold the ALARM button for 2 seconds to enter ALARM time setting. Press UP or DOWN button to adjust the ALARM time and press ALARM button to confirm each setting.
- Press ALARM button to show alarm time, then press ALARM to switch alarm ON or OFF. If it is ON, 🕒 icons would be shown on the screen.
- Alarm duration: 2 minutes.
- When the alarm rings, press SNOOZE/LIGHT button to activate snooze function, the

alarm will repeat every 10 minutes, with **Z** icon indicating. Or press any other button to stop ringing.

## Others Information

- Press MODE button to switch date or year display.
- Press UP button to switch 12/24H display.
- Press DOWN button to switch the temperature unit from °C or °F.
- Default temperature unit is °C.
- Indoor temperature detecting range: 0°C-60°C (32°F- 140°F) , resolution: 0.1°C (0.2°F), detecting period: 30s
- Default language is English. German, Italian, French, Dutch, Spanish and Danish are optional.
- Press SNOOZE/LIGHT to activate backlight for 5s.
- No day light saving time (DST) setting.

## Care instructions

- Wipe the clock with a soft dry cloth only.
- Replace the battery every 12 months or when the clock stops.

## Battery safety & disposal

- Dispose of any used batteries responsibly by taking it to your local authority household waste recycling facility.
- Don't dispose of batteries in a fire as they may explode.
- This clock will only take 'AAA' 1.5V batteries in this clock.
- Make sure you've inserted the batteries correctly, so you have the correct polarity (+ and -). You should only use batteries that are the equivalent of those recommended above. Don't use rechargeable batteries with this item. And never mix old and new batteries, change them at the same time.



### Recycling



We expect this clock to give you many years of use, but when you've finished with it, please don't just throw it in the bin. Do your bit for the environment by recycling electrical items.

Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) click "bank locator" and type in to find your nearest recycling site.

Produced in China. Sainsbury's Supermarkets Ltd. Argos Limited, London, EC1M 6HA, UK.

Sainsbury's (NI) Ltd and Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally,

Belfast, BT8 6FX, UK.

[help.sainsburys.co.uk/help/contact-us](http://help.sainsburys.co.uk/help/contact-us)

[argos.co.uk/help/contact-us](http://argos.co.uk/help/contact-us)