

INSTRUCTIONS FOR USE

Inflate balloons 1-2 hours before your party starts.


1. Read all Warnings before use. Remove Helium tank from Box.
2. Turn top handle on tank counter clockwise to open valve fully (approximately 4 turns).
3. Slide balloon neck onto rubber-tipped nozzle until neck fits tightly around nozzle.
4. Hold balloon neck firmly around nozzle. Bend nozzle gently to inflate. Fill balloon to desired size.
5. Straighten nozzle to stop inflation.
6. Pinch balloon tightly at base of balloon neck and slide off nozzle.
7. Tie a knot in balloon neck and attach ribbon or string. Do not release ribbon/string or balloon will float away.
8. When finished, be sure to close top valve tightly by turning clockwise. Press nozzle to release any residual pressure. (Store in original box.)
9. When there is no more helium gas in tank, see Recycling/Disposal Instructions.

Tank Disposal Instructions:

Release all unused gas before disposal. Please take the empty cylinder to a household recycling centre or civic amenity site. If in doubt, contact your local council for advice.

The number of balloons you can inflate depends on the size and shape of the balloon you choose to create.

Do not over-inflate balloons.

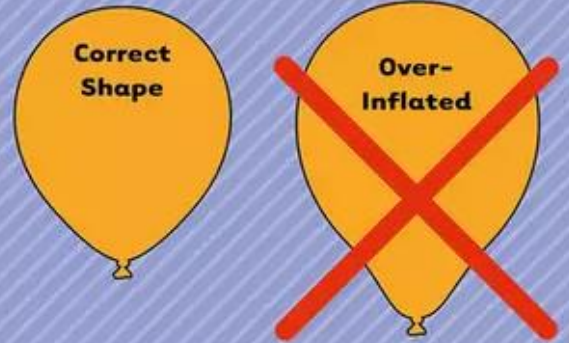

Note approximate balloon float times below:

- 9" Latex Balloons – approx. float time 6-8 hours
- 10" Latex Balloons – approx. float time 12-14 hours
- 11" Latex Balloons – approx. float time 12-14 hours
- 18" Foil Balloons – approx. float time 1 week

Balloon inflation figures are estimates. Actual yield may vary 10% or more. Float times may vary greatly depending on inflation size, temperature, elevation and atmospheric conditions. Float times indicated are indoor estimates at room temperature.

Balloon Type/Size	Number of Balloons	Average Float Time
9" Latex	50	6-8 Hours
10" Latex	40	12 - 14 Hours
11" Latex	25	12 - 14 Hours
18" Foil	20	1 Week

