Samuel Shorty Bunk Bed

Assembly Instructions - Please keep for future reference

162/4131

188/9299

170/8253

-IMPORTANT NOTE:

The top surface of the mattress should not come above this line.



Dimensions

Width - 181cm Depth - 82cm Height - 160cm



IMPORTANT NOTE:

Do not fully tighten all bolts until all parts of the bed are assembled.

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 640 0800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

• Unit weight: 32.5kgs.

Warnings

• READ CAREFULLY - RETAIN FOR FUTURE REFERENCE

- Regularly check and ensure that all bolts and fittings are tightened properly.
- Always use the ladder for entering and leaving the upper bunk.
- The recommended mattress size is L1750 x W750 mm.
- Ensure thickness of mattress does not exceed 175 mm.
- Refrain from using the bunk bed if any structural part is broken or missing.

- Please prohibit more that one person on the upper bunk.
- Please advise your children to only enter and leave the upper bunk by using the ladder.
- Please prohibit children from jumping on the upper and lower beds.
- WARNING: Children can become trapped between the bed and the wall. To avoid risk of serious injury the distance between the top safety barrier and the wall shall not exceed 75mm or shall be more than 230mm.
- WARNING: Do not allow children under 6 years of age to use the upper bunk due to risk of injury and falls.
- STRANGULATION HAZARD -Never attach or hang items such as ropes, strings, cords, harnesses and belts to any part of the bunk bed.
- THIS BED COMPLIES WITH EN747-1:2012 / EN747-2:2012

Manufacturer: BL Packaging Co. Ltd.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

 
Components - Parts

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 640 0800

Please check you have all the parts listed below



1 End post x 4 (Ø4.5 x 160cm)



3 Lower side rail x 2 (75 x 18.5 x 3cm)



 
Upper front safety rail (173 x 41.5 x 2.5cm)



2 Upper side safety rail x 2 (73.5 x 35.5 x 3.5cm)



4 Lower rail x 2 (173 x 7 x 2.5cm)



6 Upper back safety rail (173 x 41.5 x 2.5cm)



8 Ladder (93.5 x 34.5 x 3cm)






7 Slat x 48 (77.5 x 2.5 x 3cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

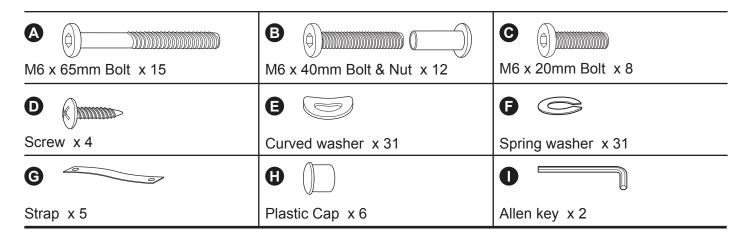

Tools required

 

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170



Friendly Tips

- Do not fully tighten all bolts until all parts of the bed are assembled.
- Assemble lower rails to headboard & footboard (end panels) first, followed by the upper safety rails.
- One person must hold on the rails while another person is assembling it and fitting bolts to end posts.
- When assembling slats, make sure it is aligned to the holes on the upper and lower rails before pushing it firmly down.
- After all the parts are positioned, you can fully tighten all bolts.

Step 1

Assembling end panels


Position end posts 1, upper side safety rails 2 and lower side rails 3 as shown.




P Ensure to position the rails with middle holes on the bottom as shown.

- a: Attach lower side rail
 into holes on end
 posts in and fix using
 washers and bolts
 A. Fasten bolts using
 allen key in but do not
 fully tighten at this
 stage.
- b: Attach upper side safety rail 2 to end posts & fix using washers & and bolts o. Fasten bolts using allen key but do not fully tighten at this stage.

Repeat above steps to assemble the other end panel.

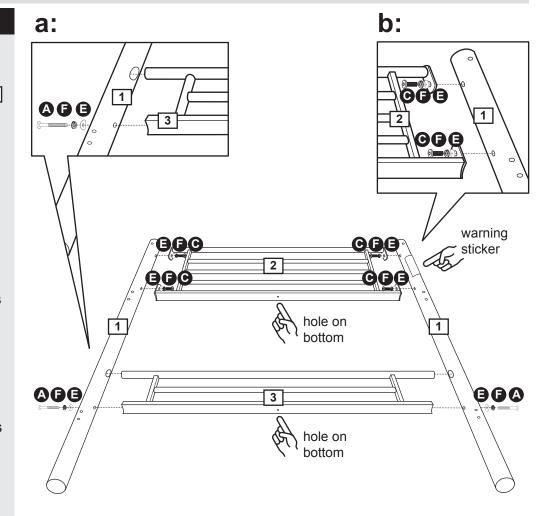

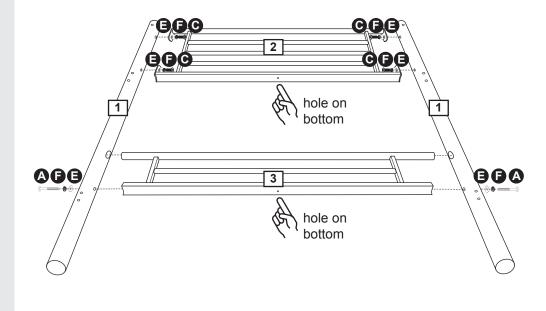



Important note: Do not fully tighten bolts at this stage.

Step 2

Assembling lower rails





Important note: Determine your preferred upper bunk bed entry (left or right).




Ensure to position holes (for ladder assembly) on the lower rails 4 according to your preferred upper bunk bed entry as shown.

With the help of an assistant position lower rails 4 to end panels as shown and fix to end posts 1 using bolts 4, bolts & nuts 3 and washers 4. Fasten bolts & nuts using allen keys 1 but do not fully tighten at this stage.

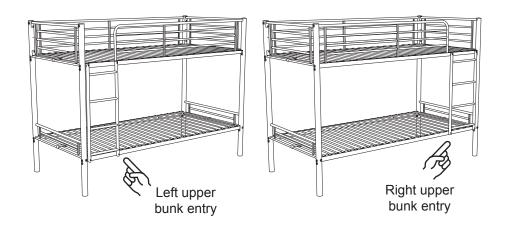

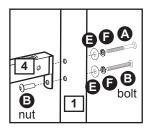

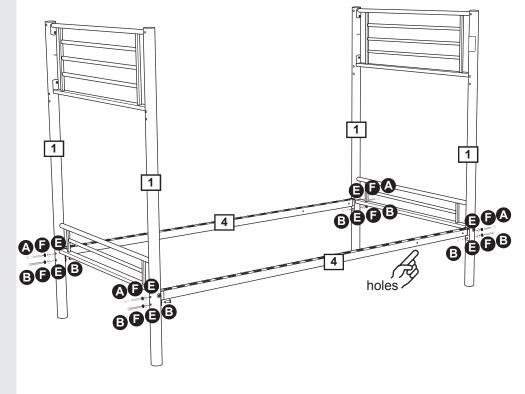



Important note: Do not fully tighten bolts at this stage.

Step 3

Assembling upper front safety rail





Ensure to position holes (for ladder assembly) on the upper front safety rail 5 according to your preferred upper bunk bed entry as shown.

a: With the help of an assistant, attach upper front safety rail 5 to end post 1 using bolts 4 & washers 5 & 6. Fasten bolts using allen key 0 but do not fully tighten at this stage.

b: Attach upper front safety rail 5 to end post 1 using bolts A, bolt & nuts 3 and washers & F. Fasten bolts & nuts using allen keys 1 but do not fully tighten at this stage.

A 6 6 5

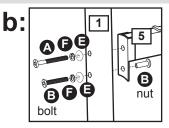


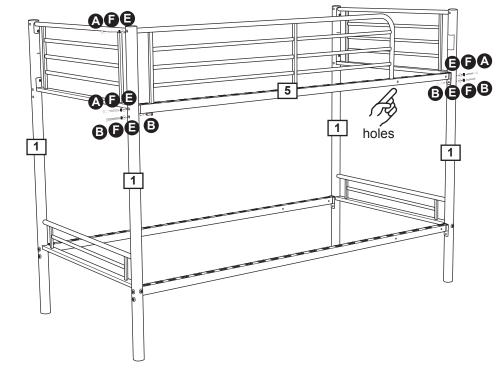

Step 4

Assembling upper back safety rail

Repeat step 3 to assemble the upper back safety rail 6 to left-hand and right-hand end panel as shown.

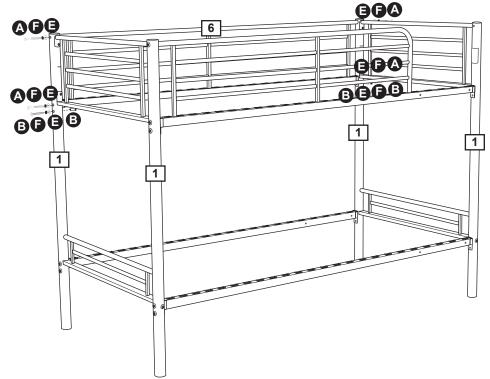



Important note: Do not fully tighten bolts at this stage.

Step 5


Assembling ladder



Important note:

Make sure to correctly position the ladder. The arrow sticker on the top edge must be positioned at the top rail as shown.

Attach the ladder 8 to upper front safety rail 5 & lower rail 4 and fix using bolts and nuts 3 as shown. Fasten bolts using allen keys 1 but do not fully tighten at this stage.

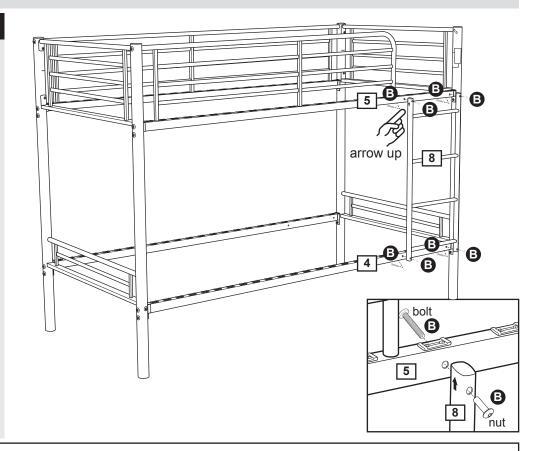



Important note: Do not fully tighten bolts at this stage.

Step 6

Assembling upper slats

Insert slats 7 into holes on upper safety rails 5 & 6. Lock it into position by pushing firmly down with your hand.



Note: Make sure the slat is aligned to the hole before pushing it firmly down.




Step 7

Assembling lower slats

Insert slats 7 into holes on lower rails 4. Lock it into position by pushing firmly down with your hand.



Note: Make sure the slat is aligned to the hole before pushing it firmly down.

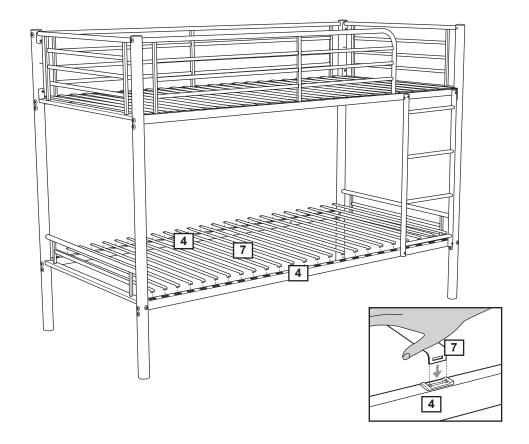



Step 8

Securing slats

Attach straps **6** around end slats **7** and bottom tube of upper side safety rails **2** as shown and fix through holes using screws **0**. Tighten screws using a crosshead screwdriver.

Repeat above steps to attach other straps to lower side rails 3.

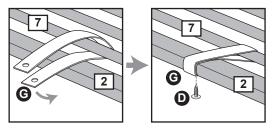


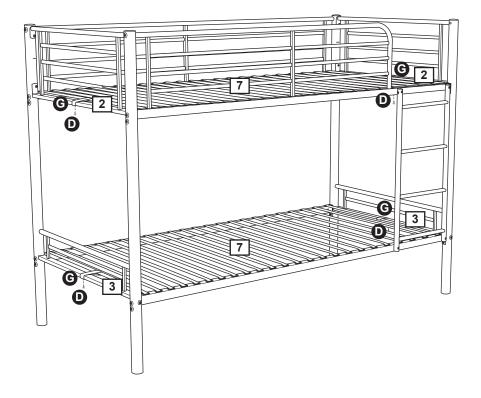

Step 9

Filling holes

Insert plastic caps ① into holes on the top of end post ① and lower rail ② as shown.

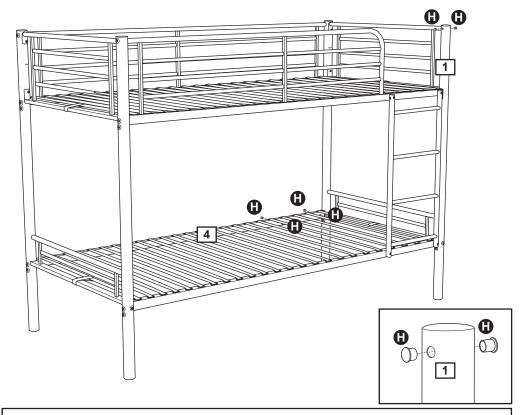

Step 10

Fixing to wall

This unit must be fixed to a wall.

Move the bunk bed into position on the wall. Position the strap **G** to top post of upper back safety rail **6** to mark fixing holes on the wall. Remove the wall strap then drill holes and insert appropriate wall plugs. Reposition strap and fix using appropriate screws for the wall.




Warning:

Before drilling, check wall for hidden pipes and cables. Consult a qualified specialist if unsure.

Assembly is complete.



Important note: After all the parts are positioned, you can now fully tighten all bolts fixed on previous steps.

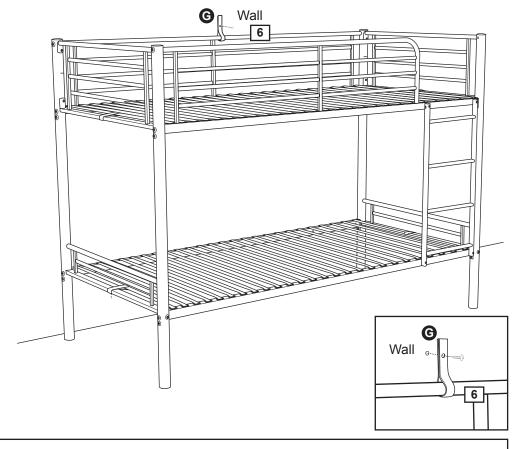

If you need help or have damaged or missing parts, call the **Customer Helpline**: **Argos = 0345 640 0800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.

 
Hints:

- 1: **General rule**: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3**: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4**: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5**: Ensure wall plugs are well ftted and are a tight ft in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug




For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug




For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug




For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fxing allows it to be fxed to the wall rather than the plasterboard. Always check the fxing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

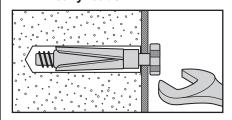

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Safety: Always check the ftting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.