

Elaina

habitat®

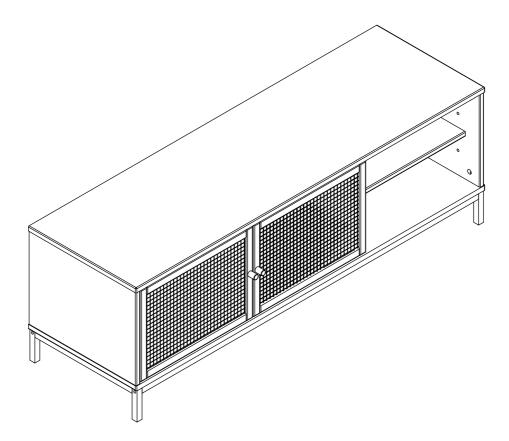

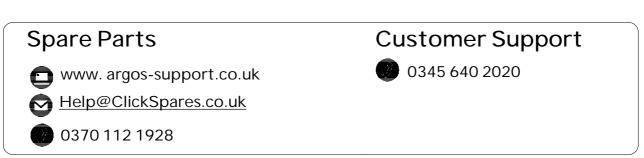

A Safety and Care Advice

Product Details

Elaina Woven front TV Unit 1970191

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• This product has been constructed to be used in the domestic environment only and not for commercial purposes.

Care and maintenance

• Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.

• Use a dry cloth to clean the product, furniture polish is not recommended.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• We do not recommend the use of power drill/drivers for inserting screws

as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.


• From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten. • This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Additional Guidance

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.
- Maximum loading weight: 40kgs.
- This product is compliant EN 14749; BS4875-7.


Fittings (Shown to scale)

Bag 1

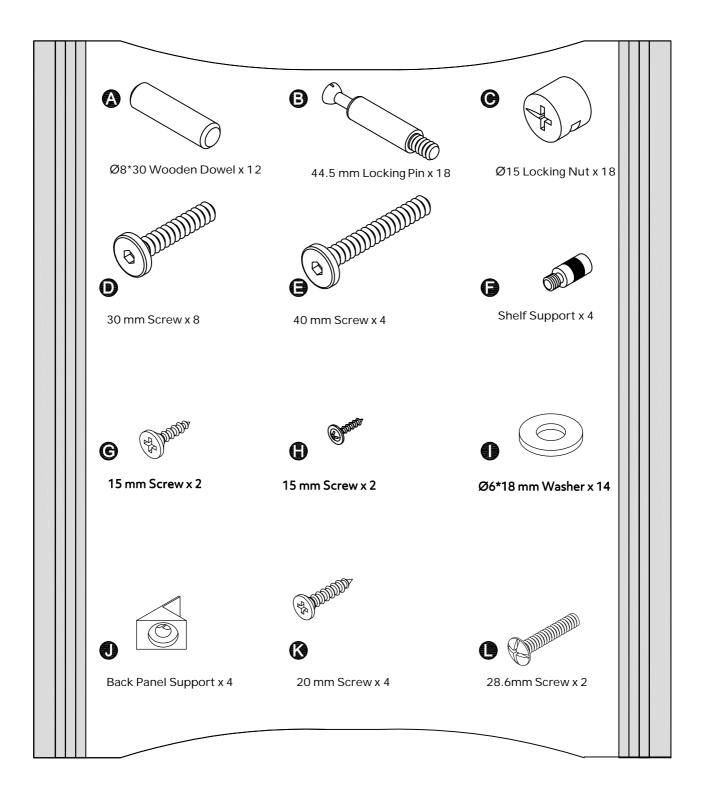


Fittings (Shown to scale)

Bag 2

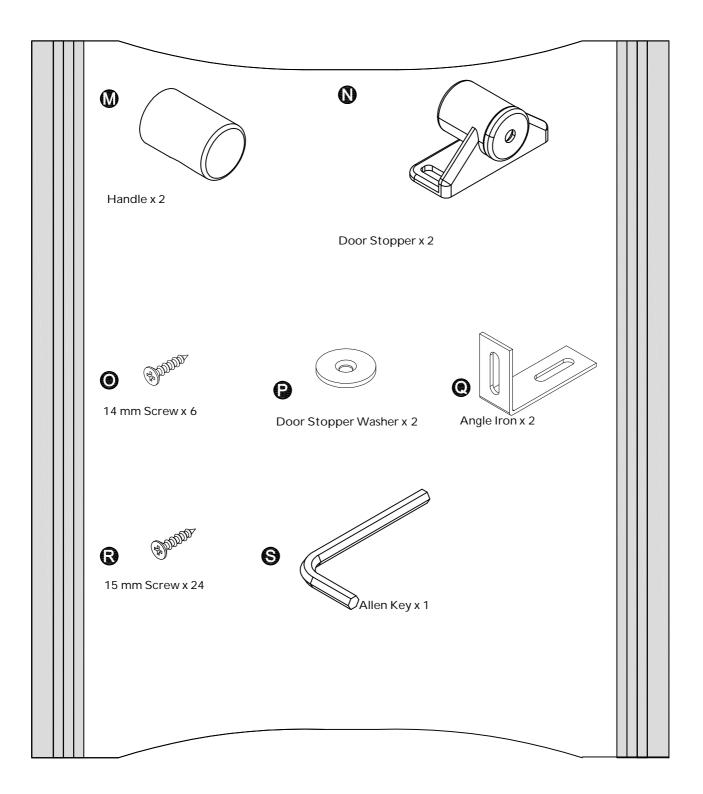


Hardware

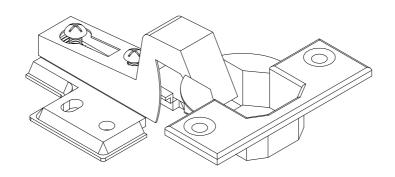




Door Hinge x 2

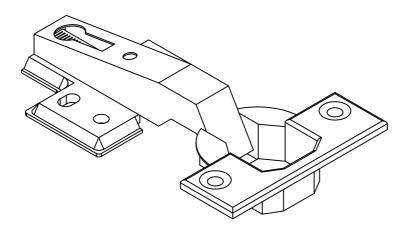




Door Hinge x 2

Tools required

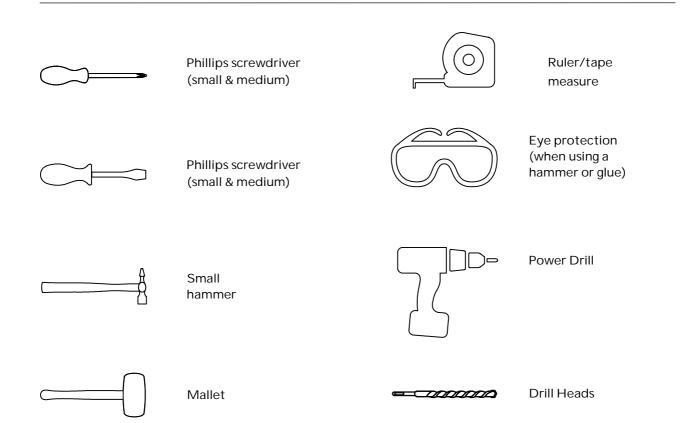



Panels

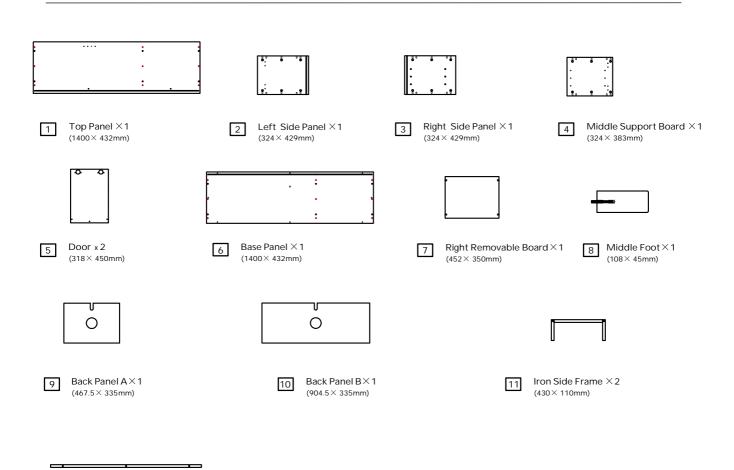





6

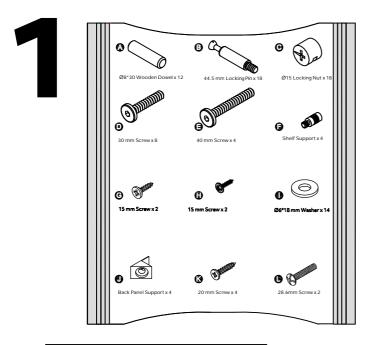


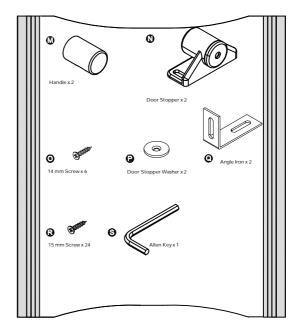



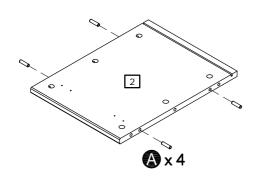


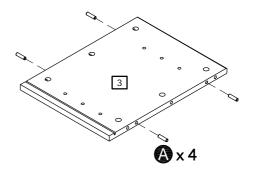


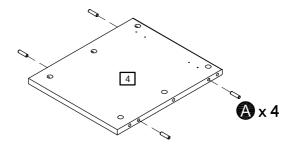



2 Dame. 0 0 ₿ 14 mm Screw x 4 Door Stopper x 2 44.5 mm Locking Pin x 18 m , el G 0 ŀ 0 15 mm Screw x 2 Ø6*18 mm Washer x 2


Angle Iron x 2

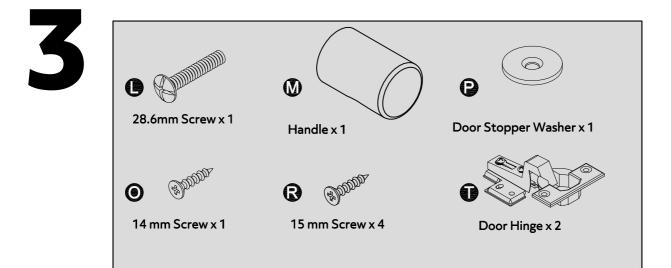


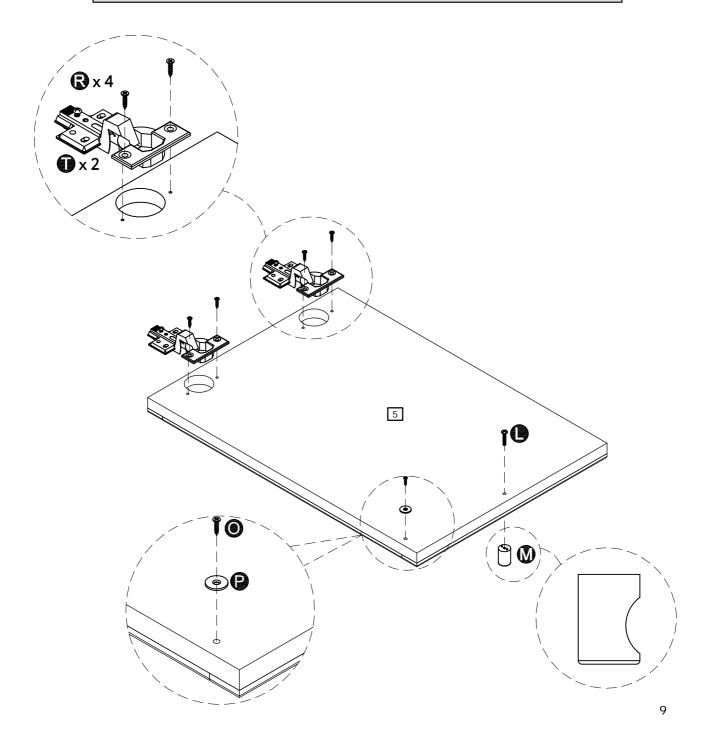


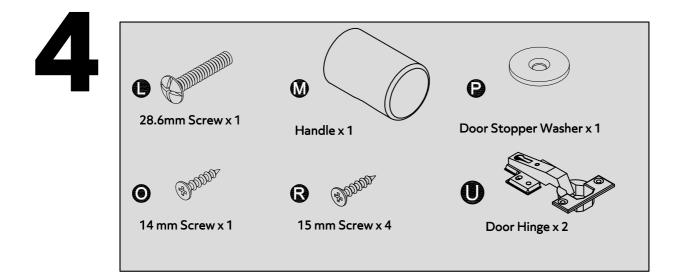


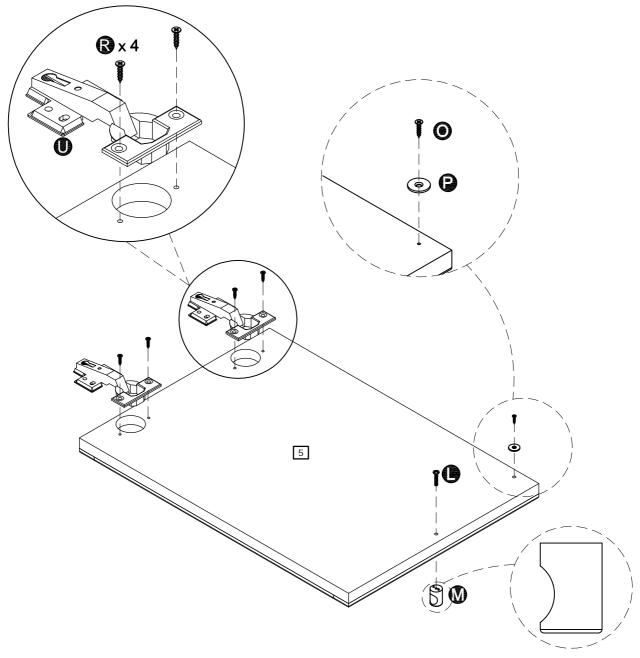


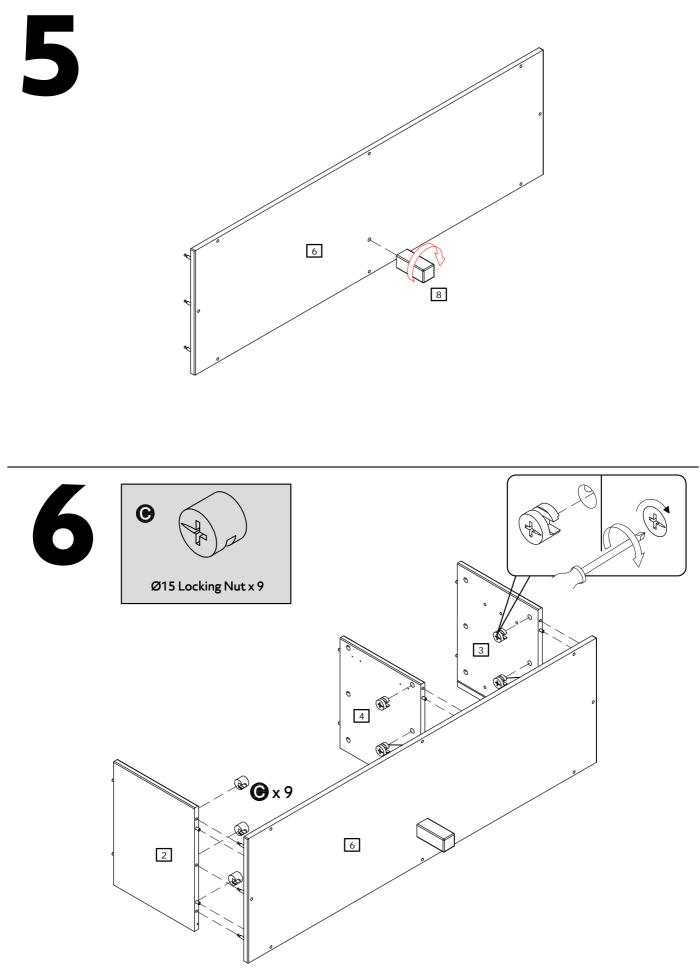


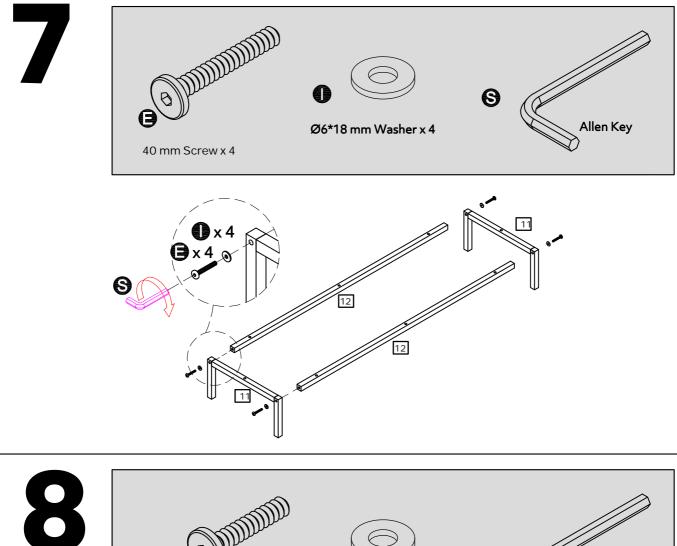


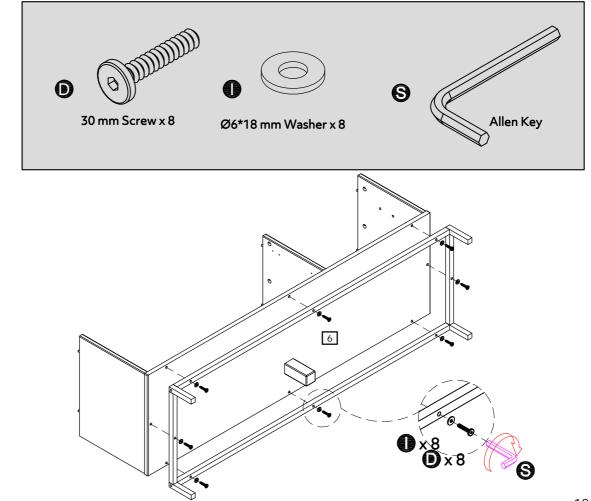


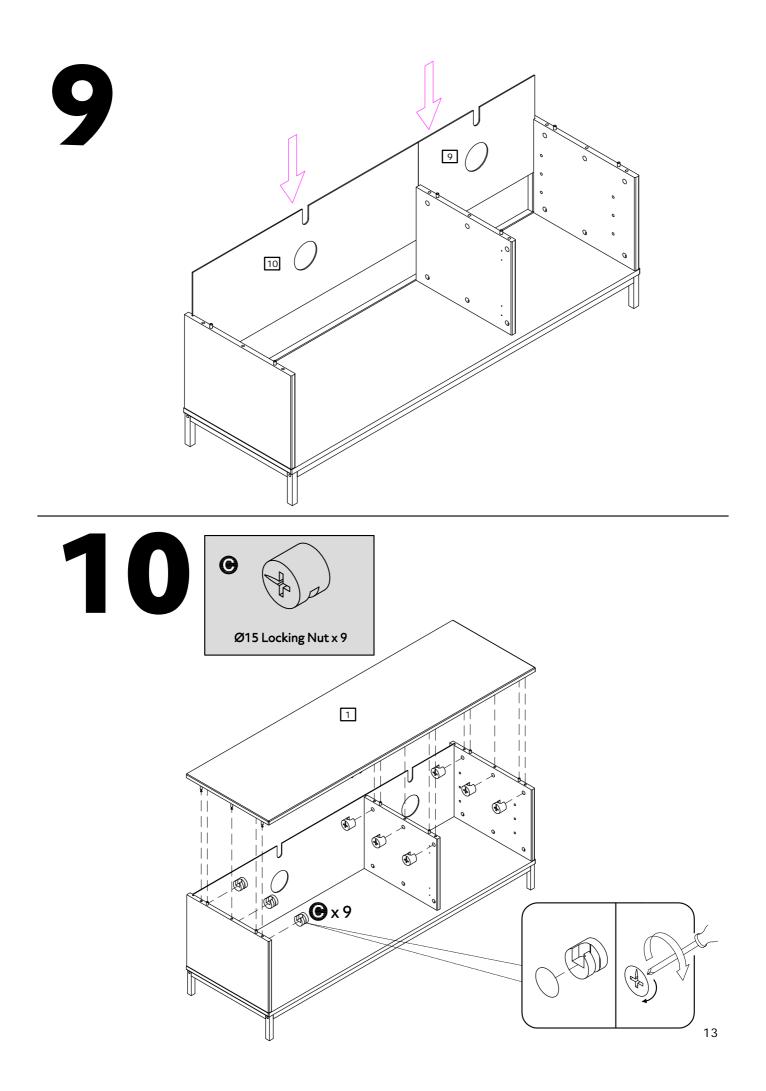


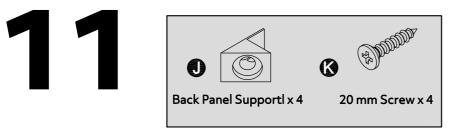

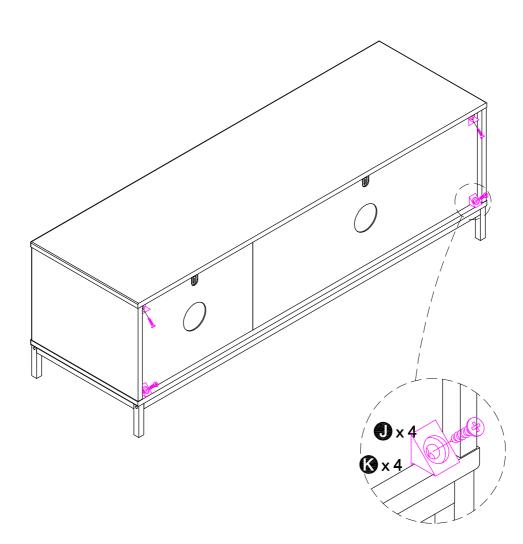

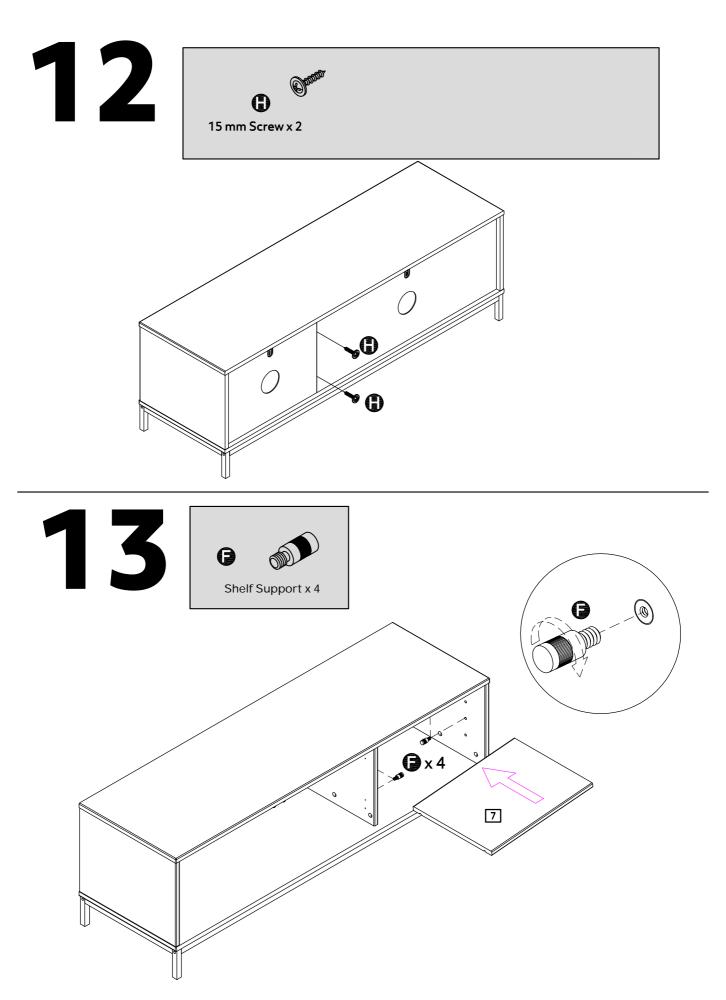

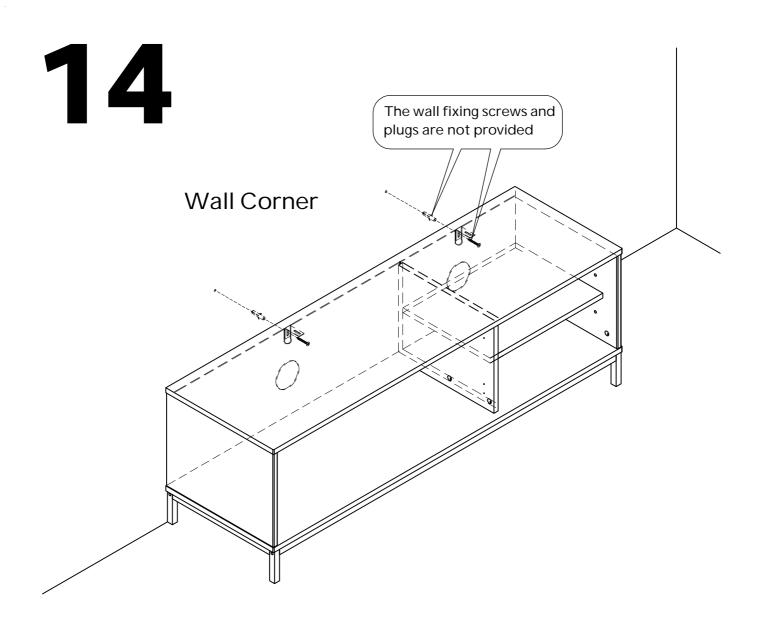

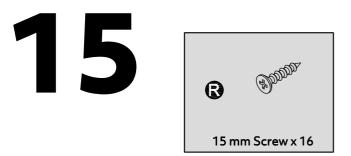

With the unit in its final position, the door can be adjusted to fit by moving the hinges up and down on the unit side, and adjusting the screw in the centre of each hinge to alter the angle and fit of the door in its frame.

