

# REMINGTON®

## Curl & Straight Confidence Hairdryer





**D5706**

 [www.remington.co.uk](http://www.remington.co.uk)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

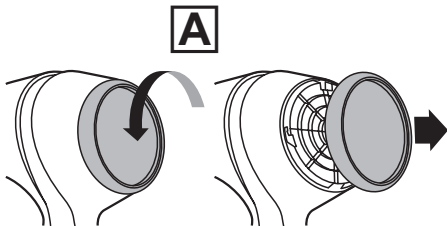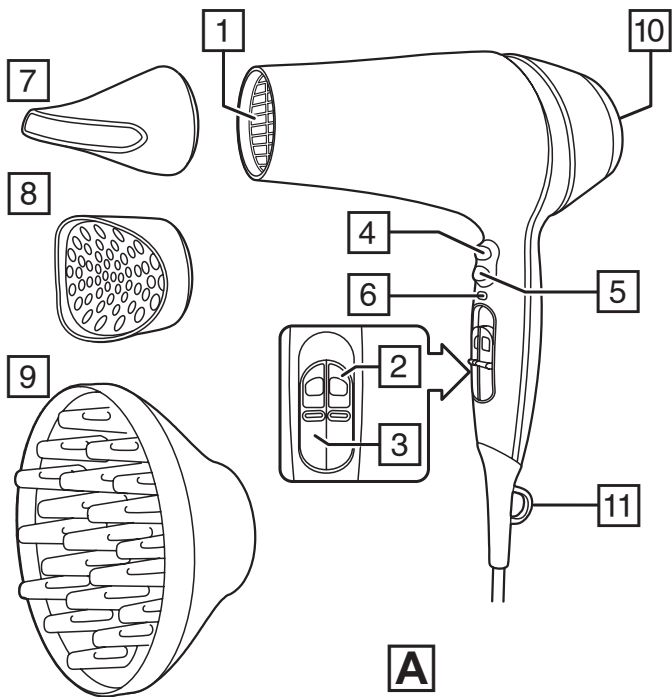

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
  - ⊘ Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
  - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom\*.
- \* Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
  - Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
  - Keep direct airflow away from eyes or other sensitive areas.

- Do not allow any part of the appliance touch the face, neck or scalp.
- During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- Always ensure that the rear grille/filter is clear of any hair, fluff or other debris before use. A blocked grille/filter can cause the appliance to overheat.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

- |                                       |                                   |
|---------------------------------------|-----------------------------------|
| 1. Grille                             | 7. Smoothing attachment           |
| 2. Heat selector switch (I, II, III)  | 8. Curling attachment             |
| 3. Speed selector switch (0, II, III) | 9. Diffuser attachment            |
| 4. Cool shot                          | 10. Inlet grille                  |
| 5. Turbo function                     | 11. Hang up loop                  |
| 6. Ion indicator light                | 12. 45 mm round brush (not shown) |

---

## INSTRUCTIONS FOR USE

---

- Wash and condition your hair as normal.
  - Squeeze out excess moisture with a towel and comb through.
  - Hairsprays contain flammable material – do not use while using this product.
  - Fit accessory attachments to the front of the hairdryer then twist clockwise to lock in place. Take care when you do this because the attachments can become hot during use.
1. Plug the product into the mains power supply.
  2. Switch your hairdryer on and select the desired speed setting using the speed selector switch.
  3. Select the desired heat setting (low I, medium II) or high III) using the heat selector switch.
  4. For the fastest air flow use the turbo function. To operate, press the turbo function button (III) and hold it there. Release the button to return to normal drying.
  5. After use, turn the appliance off and unplug it.

### How to create curls with the curling attachment

1. For best results, dry your hair as normal until it is about 70% dry. Then turn off your dryer and section your hair into manageable areas.
2. Fit the curling attachment to the front of the hairdryer then twist clockwise to lock in place. Take care when you do this because the attachments can become hot in use.
3. Starting on the lower areas of hair, working on one section at a time brush through with the round brush and then wrap hair around the barrel starting at the ends.
4. Select the high heat (🔥) and low speed setting (🌀) using the speed and heat selector switches.
5. The shape of the curling nozzle maximises the air and heat coverage around the brush. For best results seat the brush, with hair wrapped, directly within the nozzle until the section is 100% dry.
6. When the section is dry, press the cool shot (❄️) button upwards and hold it for a few seconds to set your curl in place.
7. Switch off the dryer and carefully unwind the section of hair from the brush.

### How to create smooth styles with the smoothing attachment:

1. Repeat step 1 as above.
2. Fit the smoothing attachment to the front of the hairdryer then twist clockwise to lock in place. Take care when you do this because the attachments can become hot in use.
3. Select the high heat (🔥) and high speed setting (🌀) using the speed and heat selector switches.
4. Starting on the lower areas of hair using the round brush, work on one section at a time. Grip the underneath of the hair with the brush and run the smoothing nozzle down the hair until the section is 100% dry.
  - TIP: Angle the nozzle downwards to minimise frizz and fly aways.
5. When the section is dry, press the cool shot (❄️) button upwards and run the nozzle down the section again to set your style in place.

---

## TIPS

---

- For fast drying use the high heat / high speed function.
- To enhance natural curls and waves, attach the diffuser to the dryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.
- To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a medium heat / low speed setting.  
Caution: Do not use the diffuser on the highest heat setting (🔥).

---

## STORAGE, CLEANING AND MAINTENANCE

---

- When finished unplug the appliance and allow to cool before cleaning and storing.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the inlet grille.
- Remove the grille as shown (FIG A), clean with a cloth or soft brush, then replace it.

---

## OVERHEAT PROTECTION

---

In the event of overheating, the appliance may either stop unexpectedly or start to blow cold air. Overheating is usually caused by a blocked grille/filter. If this happens, immediately unplug the appliance and refer to STORAGE, CLEANING AND MAINTENANCE to clean the grille/filter. If, after doing this overheating continues to happen, stop using the appliance and contact Customer Service.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE


---

### United Kingdom

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK  
[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12  
<https://ie.remington-europe.com>

**Ref. No. D5706**

**Type No. D14A**

19/UK/ D5706 T22-7000837 Version 03 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2019 Spectrum Brands, Inc.