

## Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children aged less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.

Do not insert or allow fingers or any other objects into grill to avoid a mechanical

danger when in use. Do not block air intakes or exhaust openings in any manner. Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands. Do not leave the product unattended whilst connected to the mains power supply or when in use.

Adequate clean water should be put into the tank within the water level limits as shown by the water level indicator. DO NOT add water whilst the power is on.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand. Do not use the product for anything other than its intended use.

Do not cover the product.

Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface. Use of an extension cord with the product is not recommended.

Do not run cord under carpeting and do not cover cord with throw rugs, runners or the like. Arrange cord away from high traffic area and where it will not be tripped over. This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

**WARNING:** If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

## Care and Maintenance

**STEP 1:** Unplug the Air Cooler from the mains power supply before attempting any cleaning or user maintenance.

**STEP 2:** The water tank must be drained of any water after each use. To do so, remove the plug from the bottom rear of the unit. Once the water tank has been drained, wipe away any excess water with a soft cloth.

 
**STEP 3:** The removable honeycomb filter should only be rinsed in clean water.

**STEP 4:** Wipe the Air Cooler with a soft, damp cloth and dry thoroughly. Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the Air Cooler, as this may cause damage.

**NOTE:** Clean the Air Cooler and all of its parts regularly to reduce the risk of limescale and bacteria forming.


**WARNING:** Should the product fall or be pushed over while there is water in the tank, it must be unplugged from the mains outlet immediately as a first action. The unit should be righted promptly and dried thoroughly before it is used again.

## Description of Parts

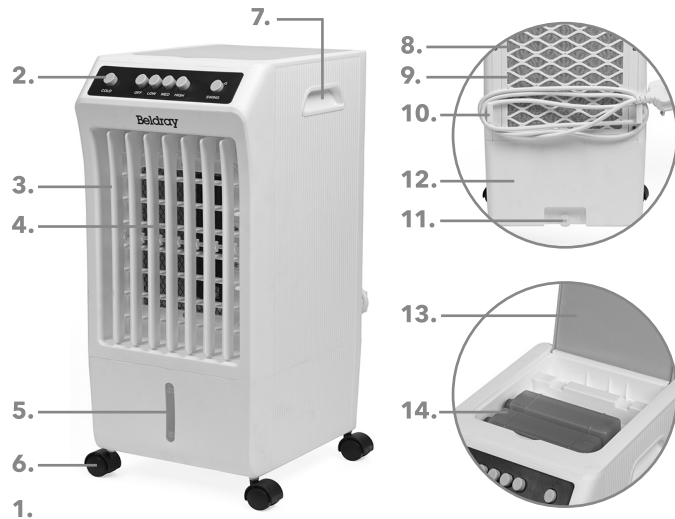

- |                         |                               |
|-------------------------|-------------------------------|
| 1. Air Cooler Main Unit | 8. Removable Honeycomb Filter |
| 2. Control Buttons      | 9. Removable Mesh Filter      |
| 3. Vertical Grill       | 10. Cable Holders             |
| 4. Horizontal Grill     | 11. Water Reservoir Plug      |
| 5. Water Level Window   | 12. Water Reservoir           |
| 6. 360 ° Castor Wheels  | 13. Filling Reservoir Lid     |
| 7. Carry Handles        | 14. Ice Packs                 |

## Button Control Diagram

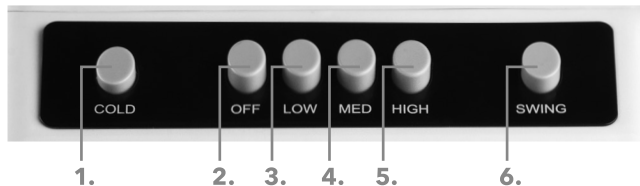 

- |                     |                          |
|---------------------|--------------------------|
| 1. Cold Button      | 4. Medium Speed Button   |
| 2. Off Button       | 5. High Function Button  |
| 3. Low Speed Button | 6. Swing Function Button |

## Instructions for Use

### Filling the Air Cooler

**STEP 1:** Switch off and unplug the Air Cooler from the mains power supply.

**STEP 2:** Ensuring the water tank plug is firmly in place, remove the mesh filter and the honeycomb filter and fill the water tank with cold, clean water. The water level should be no lower than the min. fill line and no higher than the max. fill line.

**NOTE:** The water will run over the removable honeycomb filter before draining into the water tank so be careful

to ensure the max fill is not exceeded.

**STEP 3:** The two ice packs can be used to achieve quicker, additional cooling; they should be  $\frac{2}{3}$  full of water and left to freeze for approx. 8 hours before use. Place them into the water tank before it has been filled with water.

**CAUTION:** Do not fill the Air Cooler with any liquid other than cold, clean water. Do not use any additives in the water.

## Using the Air Cooler

**STEP 1:** Plug in and switch on the Air Cooler at the mains power supply after placing it on a stable flat surface.

**STEP 2:** To turn on the Air Cooler, press either '**LOW**', '**MEDIUM**' or '**HIGH**'.

**STEP 3:** Activate the swing function by pushing '**SWING**'; the vertical grills of the Air Cooler will begin to turn left and right. To stop the vertical grills from turning, press '**SWING**' once more.

**STEP 4:** Activate the cooling function by pushing '**COOL**'. To stop the cooling function, press '**COOL**' once more.

**WARNING:** Please do not activate the cooling function if there is insufficient water in the tank, as this may damage the water pump.

**NOTE:** When positioning the Air Cooler, do not lift it by the front panel; move it using the handles and the 360 ° castor wheels.

## Storage

Drain the water tank and allow the Air Cooler to cool before storing in a cool, dry place.

Loosely wrap the cord around the Air Cooler; do not wrap it tightly as this could cause damage.

## Specifications

Product code: EH3674

Input: 220-240 V ~ 50/60 Hz

Output: 65 W

Water tank capacity: 6 L

If this product does not reach you in an acceptable condition please contact our Customer Services Department at [www.beldray.com](http://www.beldray.com). Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Go to [www.beldray.com/manuals.html](http://www.beldray.com/manuals.html) and search **EH3674** to access the instruction manual for your product.

\*To be eligible for the extended guarantee, go to [guarantee.upgs.com/beldray](http://guarantee.upgs.com/beldray) and register your product within 30 days of purchase.

## Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

FULL INSTRUCTION MANUAL AT  
[www.beldray.com/manuals.html](http://www.beldray.com/manuals.html)  
PRODUCT CODE: **EH3674**

est 1872  
**Beldray**®

**6 LITRE**  
**AIR COOLER**  
QUICK START GUIDE

Find us on **f**

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)

**UK** **CA** **CE**



Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.


**Germany.** 51149 Köln.

MADE IN CHINA.


[www.beldray.com](http://www.beldray.com)

©Beldray trademark. All rights reserved

CD011122/MD000000/V1

 <p>Manchester OL9 0DD United Kingdom <a href="http://www.upgs.com">www.upgs.com</a></p> <p><b>ULTIMATE PRODUCTS</b> HOME OF BRANDS</p>	
Artworker:	Shelley Huang
Date:	01/11/2022
Project Name:	HCC220829 ARG EH3674 Beldray
Type of Artwork	Quick Guide
Size:	A4 Folding Leaflet Double-sided
Software Used:	Indesign CC
Typefaces:	Avenir Next

 <p> <input type="checkbox"/> Cyan  <input type="checkbox"/> Magenta  <input type="checkbox"/> Yellow  <input checked="" type="checkbox"/> Black  <input type="checkbox"/> PMS  <input type="checkbox"/> PMS  <input type="checkbox"/> PMS  <input type="checkbox"/> PMS         </p>	<p><b>Artwork Version 1</b></p> <p><b>Artwork Scale 1:1</b></p> <p><small>©2022 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.</small></p>
---	--

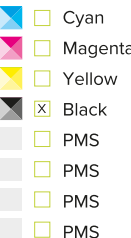DO NOT PRINT THIS PAGE  
ARTWORK REFERENCE ONLY