



ACCURIST  
LONDON

Instruction Guide  
and  
2 year Guarantee

IA07

## Service and Repairs

Your ACCURIST watch is guaranteed against defects in materials and workmanship for a period of 2 years from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components free of charge.

### **IMPORTANT** - Not covered by Guarantee

1. Batteries, straps and bracelets.
2. Damage caused by accident, misuse or lack of care.
3. Water penetrations except in watches marked as "Water Resistant".

### **SERVICING AND REPAIRS UNDER GUARANTEE**

Please post your watch, together with the Retailer's Sales Receipt or proof of purchase, the completed Guarantee slip, and a brief note to explain the nature of the fault, by Registered Post or Recorded Delivery to the address shown. Do not send the presentation box as this will NOT be returned.

### **SERVICING AND REPAIRS OUTSIDE OF GUARANTEE**

Available at a reasonable charge after an estimate has been sent by T.P. (UK) Ltd. Send your watch to us by Registered Post or Recorded Delivery to the address shown.

### **Important Note**

**It is important to identify your watch correctly. If, after reading this Instruction Guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on 0116 288 2500.**

T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester  
LE18 2EZ  
United Kingdom.

## Water Resistance

If your watch is water resistant, it will clearly state "Water Resistant" or have a static water pressure indication (e.g. "30/50/100/200 metres") on the dial and/or case back.

If it is not marked as water resistant, it should not be allowed to come into contact with water or be worn in conditions that could expose it to moisture (e.g. washing, heavy rain etc.). Certain chemicals in water may damage the watch seals. To maintain water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by T.P. (UK) Ltd.

### **IMPORTANT**

**Buttons must not be operated while in contact with water.**

### **WATER RESISTANT or RESISTANT TO 30 METRES**

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used whilst bathing or swimming.

### **WATER RESISTANT TO 50 METRES**

As 30 metres plus bathing or swimming.

 
### **WATER RESISTANT TO 100 METRES**

As 50 metres plus pool side diving and snorkelling, but not high board or scuba diving.

### **WATER RESISTANT TO 200 METRES**

As 100 metres plus scuba diving, but not high board diving.

## Timekeeping mode

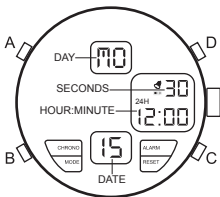

## Features

- 10 digits to display hour, minute, second, date, month and day of the week.
- 12 hour / 24 hour selectable format.
- Daily alarm and hourly chime signal.
- Stopwatch
- EL backlight

# Digital Instructions

## **Using the backlight**

Press the 'A' button to activate the back light. Illumination will last for 3 seconds.

## **Selecting the time format**

When in timekeeping mode, press the 'C' button to toggle between 12 hour and 24 hour time format. 24 hour is selected if the time display shows 24H.

## **Setting the time and date**

1. Press the 'B' button to enter time setting mode.
2. When the seconds display is flashing, press the 'D' button to reset to zero. Press the 'C' button to continue.

*\* If the value in the seconds display is greater than 30, the minute value will increase by 1.*

3. When the hour display is flashing, press/hold the 'D' button to increase the value to show the correct time. Holding down the 'D' button will increase the value at a faster rate. Press the 'C' button to continue.
4. When the minute display is flashing, press/hold the 'D' button to increase the value to show the correct time. Press the 'C' button to continue.
5. When the month display is flashing, press/hold the 'D' button to increase the value to show the number that corresponds with the correct month i.e. 1 = January, 2 = February, 3 = March etc. Press the 'C' button to continue.

***\* Instructions continued overleaf.***

# GUARANTEE

**PLEASE USE BLOCK CAPITALS**

NAME

---

---

ADDRESS

---

---

---

---

POST CODE

---

DAYTIME TELEPHONE NUMBER

---

## **IMPORTANT**

**This guarantee slip should be retained by the owner of the product and should be sent to Timeproducts (UK) Ltd. together with the product and £12 to cover the handling and postage when service under Guarantee is required.**



# GUARANTEE

DATE OF PURCHASE:

Retailers stamp if required or full name and address:

Please attach the receipt or proof of purchase; failure to attach these may invalidate this Guarantee.

This Guarantee does not affect your statutory rights.

## Digital Instructions

### **Setting the time and date cont.**

6. When the date display is flashing, press/hold the 'D' button to increase the value to show the correct date. Press the 'C' button to continue.
7. When the day display is flashing, press/hold the 'D' button to show the correct day.
8. Once all of the above steps have been completed, press the 'B' button to accept and set the changes.


### **Using the alarm feature**

1. Press the 'B' button to enter the alarm setting mode (AL).
2. Press the 'D' button to turn on/off alarm (🔔) and chime hourly (🔔) functions. When the chime hourly function is turned on, a signal noise will sound every hour on the hour. Press the 'C' button to continue.
3. When the hour display is flashing, press/hold the 'D' button to increase the value to show the desired alarm time. Press the 'C' button to continue.
4. When the minute display is flashing, press/hold the 'D' button to increase the value to show the desired alarm time.
5. Once all of the above steps have been completed, press the 'B' button to accept and set the changes.


*\*If no button is pressed, the watch will eventually return to the timekeeping mode automatically.*



## Alarm mode

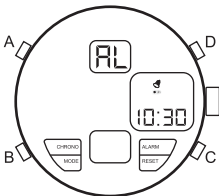

## Stopwatch mode

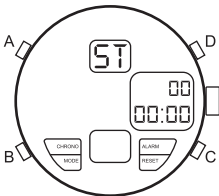

# Digital Instructions

## **Using the stopwatch feature**

*\*Display range of the stopwatch is 59 minutes and 59.99 seconds. If the timer reaches the maximum range, it will restart counting from zero.*

### **Standard timing**

1. Press the 'B' button to enter the stopwatch mode (ST).
2. Press the 'D' button to start the timer.
3. Press the 'D' button again to stop the timer.
4. Press the 'D' button to restart the timer or, when the timer is stopped, press the 'C' button to reset to zero.


### **Split timing**

1. Press the 'D' button to start the timer.
2. When the timer is counting, press the 'C' button to enter the split time function. This will display the time elapsed up until the 'C' button was pressed.

*\*The timer will continue to count in the background whilst the split time function is displayed.*

3. Press the 'C' button again to exit the split time function and display the total elapsed time. The split time function can be used as many times as required.
4. Press the 'D' button to stop the timer.
5. Press the 'C' button to reset the timer to zero.
6. Press the 'B' button to return to the timekeeping mode.

## Analogue Instructions

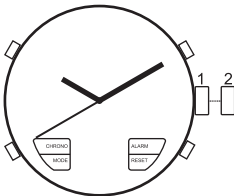

### **Setting the time**

1. Pull the crown out to position 2.
2. Turn the crown to position the hands to show the current time.
3. Return the crown to position 1.

