

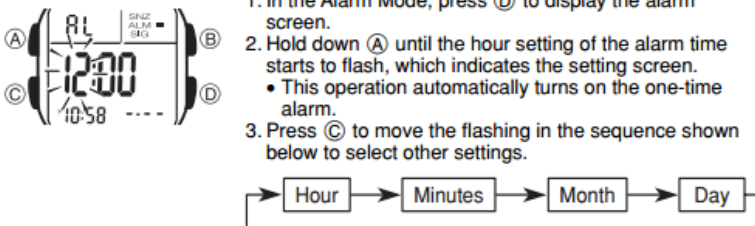
### CASIO®

#### W-96H-1AVES Specifications

- ⇒ 10 Year Battery
- ⇒ 50M WR
- ⇒ Multi -Alarm
- ⇒ Stopwatch
- ⇒ LED Light
- ⇒ Dual Time



Model variations may differ in appearance from the example above.

<b>10 Year Battery</b>	Battery power lasts up to ten-years without changing.	CASIO's advanced technology allows extended battery life for up to ten-years. All timekeeping modes and functions of the watch can be used continuously for ten-years without a battery change.
<b>Dual Time</b>	Dual Time lets you keep track of time in a different time zone	Press button <b>C</b> until display shows Dual Time Mode.
<b>Stop Watch</b>	Elapsed time, split time and final time are measured with 1/100-sec accuracy.	Press button <b>C</b> until display shows stopwatch function (STW) Start and stop the stop watch using button <b>D</b> .
<b>Multi-Function Alarm</b>	Allows you to specify the hour, minutes, day and month of the alarm.	<p><b>To set an alarm time</b></p>  <ol style="list-style-type: none"> <li>1. In the Alarm Mode, press <b>D</b> to display the alarm screen.</li> <li>2. Hold down <b>A</b> until the hour setting of the alarm time starts to flash, which indicates the setting screen.             <ul style="list-style-type: none"> <li>• This operation automatically turns on the one-time alarm.</li> </ul> </li> <li>3. Press <b>C</b> to move the flashing in the sequence shown below to select other settings.</li> </ol> <p>4. While a setting is flashing, press <b>D</b> to increase it.</p> <ul style="list-style-type: none"> <li>• To set an alarm that does not include a month (Daily alarm, Monthly alarm), set - for the month. Press <b>D</b> until the - mark appears (between 12 and 1) while month setting is flashing.</li> <li>• To set an alarm that does not include a day (Daily alarm, 1-Month alarm), set - - for the day. Press <b>D</b> until the - - mark appears (between the end of the month and 1) while the day setting is flashing.</li> <li>• When setting the alarm time using the 12-hour format, take care to set the time correctly as a.m. or p.m. (<b>P</b> indicator).</li> </ul> <ol style="list-style-type: none"> <li>5. Press <b>A</b> to exit the setting screen.</li> </ol>
<b>LED Light</b>	In low light levels, an LED automatically illuminates the watch face each time the watch is tilted 40 degrees.	
<b>Water resistant 50M</b>	Suitable for swimming but NOT snorkelling	