


# Module No. 415/587/590/593/595/596

## READING THE DISPLAY

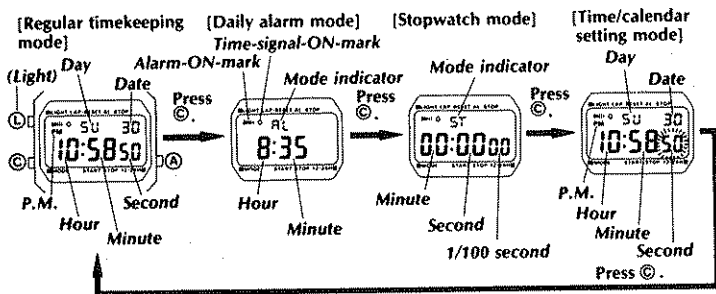

(Changeover between 12-hour and 24-hour formats) In regular timekeeping mode, with every push of **A**, the display is switched between 12-hour and 24-hour formats.

## SETTING DAILY ALARM

If the daily alarm is set, the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer, press the **C** button. If the time signal is set, the watch sounds every hour on the hour. (Sound demonstration) Press and hold the **A** button in alarm mode to sound the buzzer.




Press **L** in the daily alarm mode to set hour. One hour advances with every push of **A**.

Press **L** to set minute digits. One minute advances with every push of **A**. Press **L** to complete.\*

\*If the **C** button is pressed, the watch reverts to the regular timekeeping mode. (Quick digit advance) When the **A** button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.

## ON OR OFF SETTING OF DAILY ALARM AND TIME SIGNAL


[The alarm-ON-mark and time-signal-ON-mark appear.] [The alarm-ON-mark and time-signal-ON-mark disappear.] [The alarm-ON-mark only appears.] [The time-signal-ON-mark only appears.]

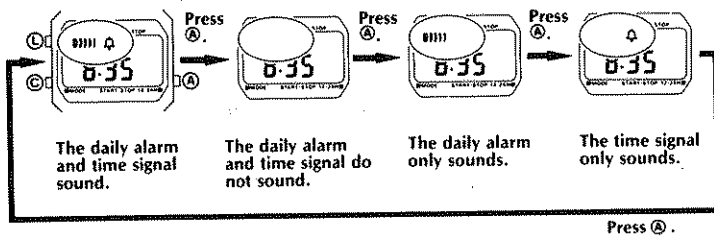


## STOPWATCH OPERATION



A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 59 minutes 59.99 seconds, for longer times reset and started again.

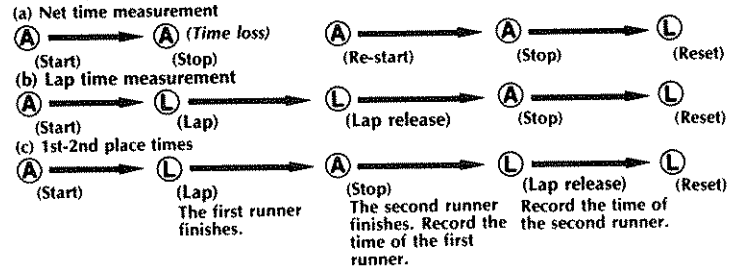

## SETTING TIME AND CALENDAR

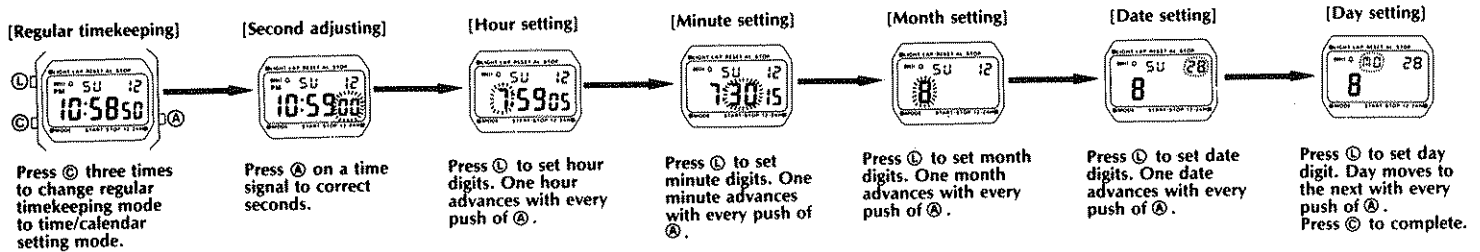

(Quick digit advance) When the **A** button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop. (Independent correction) Correction of any digit, if not required, can be skipped by pressing the **C** button repeatedly. (Auto-retrieve function) Any setting display will automatically return to the regular timekeeping mode in 1 or 2 minutes.