

MODEL NUMBER: 255/3593


## LED ALARM CLOCK

### OPERATING INSTRUCTION

Please read this before operating your unit

### SETTING KNOBS & SWITCHES

1. ALARM AUTO/OFF SWITCH
2. TIME SET BUTTON
3. HOUR SET BUTTON
4. MINUTE SET BUTTON
5. ALARM SET BUTTON
6. ALARM OFF BUTTON
7. SNOOZE BUTTON

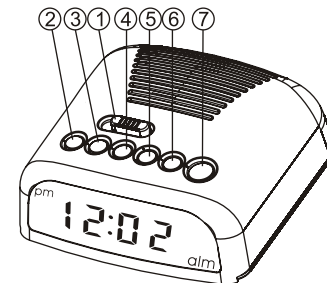

The lighting flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage"

inside the products.

### CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product


**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### POWER SUPPLY

Please check that the mains electricity power supply is the same as the AC rating indicated on the label on the base of the clock.

## **INSTALLATION:**

- This unit operates in AC mains power supply. It also has a built-in battery backup facility, which keeps the electronics clock working in the event of temporary power failure or disconnection from the mains.
- Place one 9 volt alkaline battery (type 522 or equivalent) into the battery compartment (located in the bottom of unit) and connect the corresponding terminals, (battery not included). Set the ALARM AUTO/OFF SWITCH(1) TO "OFF" position

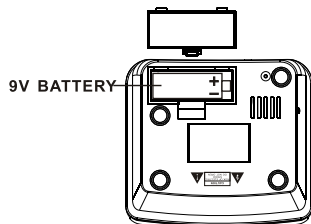

- Plug the AC line cord to a CONVENIENT AC power outlet and switch it on. the clock will flash on and off until it has been set correctly. Flashing will also occur if the power supply is interrupted when no battery is installed, or the battery is exhausted.

## **IMPORTANT**

Do not install the clock where it can fall, or be pulled or pushed into water. Never reach for an appliance after it has fallen into water Switch off at the power point and unplug immediately.

## **SETTING THE NORMAL TIME**

- Hold down the TIME SET BUTTON(2)
- Press the HOUR SET BUTTON(3) until the correct hour is shown on the clock display. NOTE: PM time is indicated by the PM light.
- Press the MINUTE SET BUTTON(4) until the correct time appear on the clock display.
- Release the buttons as time is set precisely.

## **TO SET WAKE TO ALARM**

- Slide the ALARM AUTO/OFF SWITCH(1) to "AUTO" position
- press and hold down the ALARM SET BUTTON(5), and while this button is depressed press the HOUR SET BUTTON(3) and then the MINUTE SET BUTTON(4) until it reaches the time which you wish to wake up. The wake up time is entered in its memory
- Release the ALARM SET BUTTON(5).
- The alarm will switch on automatically at the pre-set wake up time
- You can check the pre-set wake up time by pressing the ALARM SET BUTTON(5) at any time

**NOTE:** This pre-set wake up time will remain or continue to be restored in the time memory as long as the clock is connected to the power supply, and the Alarm will switch on by itself at the same time next day.

## **SNOOZE CONTROL AND TO STOP THE ALARM**

- Press the SNOOZE BUTTON(7) to stop the Alarm for a while, however, it will repeat after 9 minutes.
- To switch the Alarm off on that day, press the ALARM OFF BUTTON(6). Nevertheless, the Alarm will switch on automatically at the pre-set wake up time on the next day.
- If you do not need the Alarm, simply switch the ALARM AUTO/OFF SWITCH(1) to "OFF" position. If you wish to use the Alarm function again, switch it to "AUTO" Position

## **BATTERY BACKUP**

- By installing a 9 volt battery as described previously, the clock will continue to operate in the event of a short temporary power failure or temporary disconnection of the power cord
- The clock display will not light up, and the Alarm will not function while the AC mains power supply is interrupted.
- The battery backup system is useful for short, temporary power failures. If main power is disconnected for longer duration, the battery may become exhausted, or there may be some loss of timing accuracy. When the battery is exhausted, it should be removed from the set, to prevent damage from leakage.
- If you do not wish to use the battery backup, the clock will operate normally without a battery. However, if disconnected from the main supply, the clock display will flash when the power is reconnected and the clock must be reset as described earlier.

## **SAFETY INSTRUCTIONS**

1. Read instruction-All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instruction-The safety and operating instructions should be retained for future reference.
3. Heed Warning-All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions-All operating and use instructions should be followed.
5. Water and Moisture-The appliance should not be used near water for example. Near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Ventilation-The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. Heat-The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
8. power Sources-The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
9. Grounding or polarization-The precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
10. Power-Cord protection-Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
11. protective Attachment plug-The appliance is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
12. Cleaning-The appliance should be cleaned only as recommended by the manufacturer.
13. Nonuse Periods-The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
14. Object and Liquid Entry-Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
15. Damage Requiring Service-The appliance should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
16. Servicing-The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.