

London Clock

COMPANY



Thank you for your purchase of this alarm clock. Please read these instructions carefully and keep the manual for future reference.

INSTALLATION

1. Place your clock face down on a flat and soft surface.
2. Remove the battery cover at the back of the clock.
3. Insert 3 x new AAA batteries into the battery compartment by observing the correct "+" and "-" polarity.
4. Replace the battery cover. The default setting is 12:00, January 1st 2006.

FUNCTIONS

- Displays date, time, calendar and temperature
- 12/24hr format
- Alarm
- Temperature display
- Count-down timer
- Seven colour changing backlights
- 8 groups of world famous music

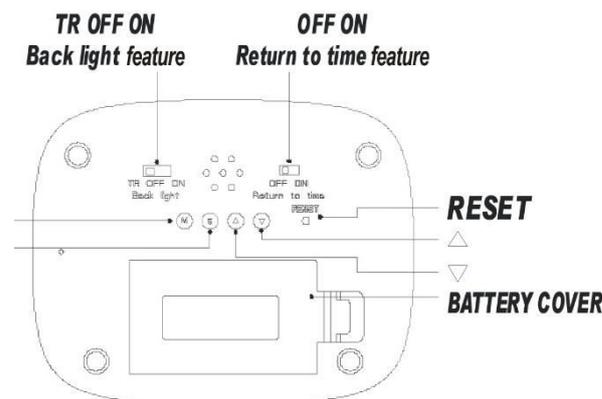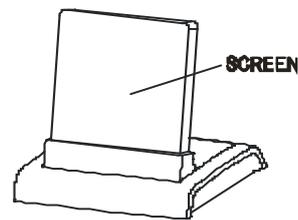

Please note that if you press the screen, the clock will cycle through the different functions of the clock. The cycle is TIME-TEMPERATURE-DATE-ALARM-TIMER.

TO SET THE TIME

1. With the clock in normal time display, press the "S" button on the bottom of the clock for 3 seconds, until the hour digit begins to flash. Use the "▲" and "▼" buttons on the bottom of the clock to select the correct hour. (Press and hold the "▲" and "▼" buttons to accelerate setting). Press the "S" button on the bottom of the clock to confirm.
2. The minute digit will now flash. Use the "▲" and "▼" buttons on the bottom of the clock to select the correct minute. (Press and hold the "▲" and "▼" buttons to accelerate setting). Press the "S" button on the bottom of the clock to confirm and return to normal time display.

TO SELECT 12/24HR

1. With the clock in normal time display, press the "S" button on the bottom of the clock to switch between 12Hr and 24Hr display.
2. If you select 12Hr format, "PM" will appear on the top left of the display to indicate afternoon time. There is no AM indication for the time before noon.

TO SET THE CALENDAR

1. With the clock in normal time display, press the "M" button on the bottom of the clock or press the screen until DATE is displayed.

London Clock

COMPANY

2. Press the "S" button on the bottom of the clock for 3 seconds, until the year begins to flash. Use the "▲" and "▼" buttons on the bottom of the clock to select the correct year. (Press and hold the "▲ and ▼" buttons to accelerate setting). Press the "S" button on the bottom of the clock to confirm.
3. The month digit will now flash. Use the "▲ and ▼" buttons on the bottom of the clock to select the correct month. (Press and hold the "▲ and ▼" buttons to accelerate setting). Press the "S" button on the bottom of the clock to confirm.
4. The date digit will now flash. Use the "▲ and ▼" buttons on the bottom of the clock to select the correct date. (Press and hold the "▲ and ▼" buttons to accelerate setting). The day will change automatically according to the date. Press the "S" button on the bottom of the clock to confirm.

TO SET THE ALARM

1. With the clock in normal time display, press the "M" button on the bottom of the clock or press the screen until AL is displayed.
2. Press the "S" button on the bottom of the clock for 3 seconds, until the hour digit begins to flash. Use the "▲ and ▼" buttons on the bottom of the clock to select the desired hour for the alarm. (Press and hold the "▲ and ▼" buttons to accelerate setting). Press the "S" button on the bottom of the clock to confirm.
3. The minute digit will now flash. Use the "▲ and ▼" buttons on the bottom of the clock to select the desired minute for the alarm. (Press and hold the "▲ and ▼" buttons to accelerate setting). Press the "S" button on the bottom of the clock to confirm.
4. Press the "S" button on the bottom of the clock again to switch the alarm on. The  icon will display when the alarm is activated.
5. To switch the alarm off, press the "S" button on the bottom of the clock. The  icon will disappear when the alarm is deactivated.
6. The alarm will last 60 seconds. When the alarm is sounding, press any button or press the screen to stop the alarm.

TO ACTIVATE THE COLOUR CHANGING BACKLIGHT

1. To activate the colour changing backlight, move the "TR/OFF/ON" switch on the bottom of the clock to the "ON" position. The backlight will remain on all the time. **PLEASE NOTE THAT CONTINUOUS USE OF THE BACKLIGHT/FEATURES WILL SIGNIFICANTLY REDUCE THE BATTERY LIFE.**
2. The "TR" switch will allow manual use of the backlight by pressing the screen or pressing "M" on the bottom of the clock.
3. The "OFF" switch will turn the backlight off.

RETURN TO TIME

1. When the "RETURN TO TIME" switch on the bottom of the clock is at the "ON" position, the time will display automatically after 10 seconds if the clock is in a different setting.
2. If the "RETURN TO TIME" switch is at the "OFF" position, the clock will permanently display the current selected setting.

COUNTDOWN TIMER

1. With the clock in normal time display, press the "M" button on the bottom of the clock or press the screen until TIMER is displayed.
2. Press the "S" button on the bottom of the clock for 3 seconds, until the minute digit begins to flash. Use the "▲ and ▼" buttons on the bottom of the clock to select the desired minute for the timer. (Press and hold the "▲ and ▼" buttons to accelerate setting). Press the "S" button on the bottom of the clock to confirm.
3. The second digit will now flash. Use the "▲ and ▼" buttons on the bottom of the clock to select the desired second for the timer. (Press and hold the "▲ and ▼" buttons to accelerate setting). Press the "S" button on the bottom of the clock to confirm.
4. When the time has been selected, press the "S" button on the bottom of the clock to begin the countdown. When the timer reaches zero, the alarm will sound. Press any button or press the screen to stop the alarm when it is sounding.

London Clock

COMPANY

TEMPERATURE

1. With the clock in normal time display, press the "M" button on the bottom of the clock or press the screen until TEMPERATURE is displayed.
2. Press the "S" button on the bottom of the clock to switch between Celsius and Fahrenheit.

SOUND

1. With the clock in normal time display, use the "▲ and ▼" buttons on the bottom of the clock to play 8 groups of world famous music.
2. Press any button to stop the music.

Please note that continuous use of the backlight will significantly reduce battery life.

Care instructions

- Wipe clock with a soft dry cloth only.
- Replace battery every 12 months or when the clock stops.

Battery safety & disposal

- Dispose of batteries and electrical products responsibly at local authority household waste recycling facility.
- **DO NOT dispose of batteries in a fire as the batteries may explode or leak.**
- Never use rechargeable batteries.
- Replace all batteries at the same time; NEVER mix new and used batteries, different types or brands.
- Never try to dismantle batteries.
- Never short circuit batteries.
- Exhausted batteries must be removed from the clock promptly.
- Remove batteries from the product before extended storage.



This symbol  indicates that this product, and any batteries, should not be disposed of in normal household waste but taken to appropriate local recycling centres, where available. Never throw batteries in a fire or attempt to open outer casing.