 


File Name	GW1338-AR-IB-A6
Description	GW1338 English menu for Argos
Colour	Black
Material	80g, 單色, 雙面印
Dimension	paper size: 296 x 210mm
Link	/Sales 2013/Argos/2014/AW14 (Cat 82)/GW1338-AR-Junior Pad/IB

Requisition	By	Date	Ver.	Description
Argos	Ivan	1-4-2014	A1	New Design
Argos	Ivan	11-4-2014	A2	format rev.
Argos	Ivan	16-4-2014	A3	layout rev. follow comments
Argos	Ivan	17.4.2014	A4	safety text rev.
Ivan	Lily	15.5.2014	A5	Modify the portion of text
Ken	Charmaine	20-5-2014	A6	rev wordings.

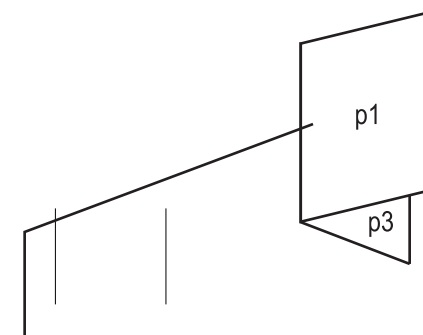

Care and Maintenance

General

1. Keep the unit out of direct sunlight and away from any direct heat source.
2. Keep the unit clean by wiping it with a slightly damp cloth
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surface.
5. Do not expose the unit to moisture or water, in case water dropped into the unit, please turn off the unit, then remove the batteries.



Disposal Information



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative

consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**
Produced for Chad Valley Toys. Country of origin: China
Address: 489 - 499 Avebury Boulevard, Central Milton Keynes, MK9 2NW.

GW1338-AR-IB-A6

4

CV BABY TABLET

User Instructions - Please keep for future reference

257/4376



Important

Age: 9 months +

Important – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.
If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**

Issue 4 - 17/04/14

1

⚠ Safety Information

Important – Please read these instructions fully before assembly or use

 
SAFETY PRECAUTIONS

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent types as recommended are to be used. Batteries are to be inserted with correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Do not dispose the battery in fire, battery may leak or explode. Battery should be replaced by adult.

BATTERY INSTALLATION & REPLACEMENT

Loose the screw by screw driver to open the battery compartment door at the back of the product. Insert/replace the new battery in the proper direction indicated inside the battery compartment. Close and screw the battery door.

Overview of Controls

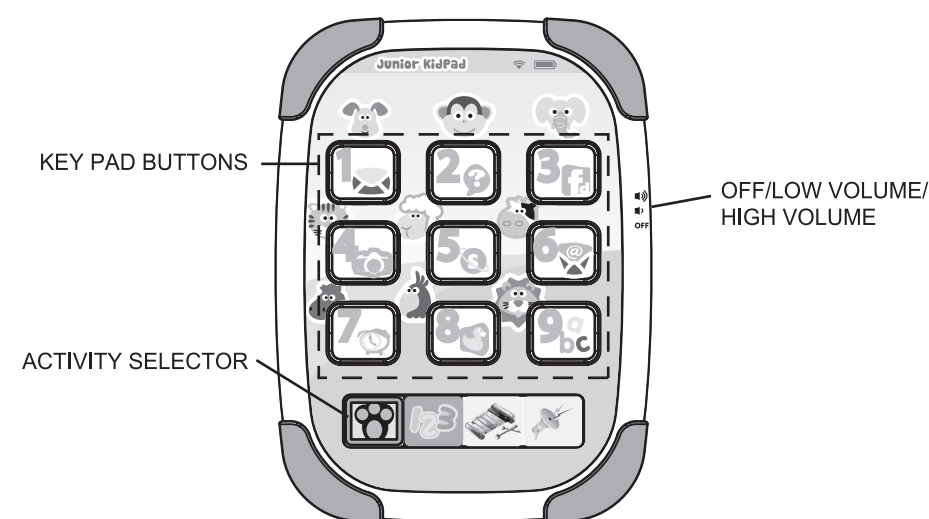

2

User Instructions

Operation

Slide this switch located on the right side to LOW VOLUME position or HIGH VOLUME position; this will also turn the unit ON. Slide the switch down completely to the OFF position to turn the unit OFF.

Activity selector

Mode 1 - Learning Animals



Slide the **ACTIVITY SELECTOR** to the first position to activate the Learning Animals activity. Press any one of the **KEY PAD BUTTONS** to listen and learn each Animal name and the cry of this Animal.

Mode 2 - Learning Numbers




Slide the **ACTIVITY SELECTOR** to the second position to activate the Learning Numbers activity. Press any one of the **KEY PAD BUTTONS** to listen and learn each Number with its counting light sequence for the Number.

Mode 3 - Learning Notes



Slide the **ACTIVITY SELECTOR** to the third position to activate the Learning Notes activity. Press any one of the **KEY PAD BUTTONS** to listen a single note. Continue to press any of the **KEY PAD BUTTONS** to play individual musical notes or wait a bit after you press any of the key pad buttons for a melody to begin playing. You can listen and sing along to the musical melody. Each key pad button plays a different individual note as well as a musical melody.

 Mode 4 - Learning Sound Effects

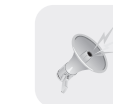


Slide the **ACTIVITY SELECTOR** to the fourth position to activate the Learning Sound Effects activity. Press any one of the **KEY PAD BUTTONS** to listen and be entertained by each different sound effect.

IMPORTANT: BATTERY INFORMATION

Installation of New Batteries

 1. Make sure the device is switched OFF.
2. Open and remove the battery compartment door by removing the screw with a Phillips head screwdriver (not included) and gently lift up.
3. Insert only three (3) "AAA" size batteries using the correct polarity (+ and -) as marked inside the battery compartment.
4. Replace the battery compartment door and gently tighten the screw. Do not over-tighten.
5. Close the battery compartment cover.

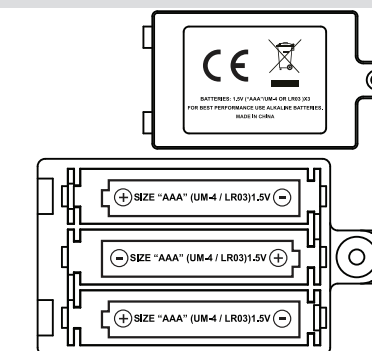

3