
HOH TOLLERTON WOODEN KITCHEN TROLLEY

Assembly Instructions - please keep for future reference

266/3304

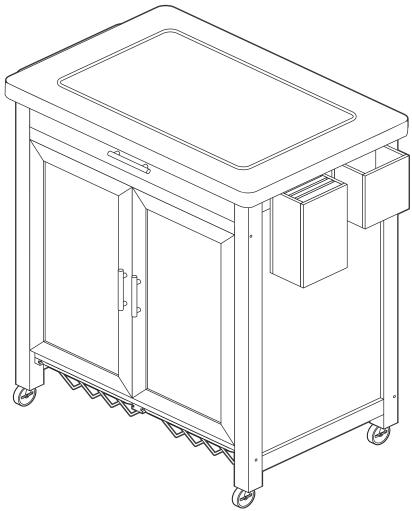



Dimensions

Width - 83cm

Depth - 48cm

Height - 89cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed opposite.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- · Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.


• Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

Please check you have all the panels listed below

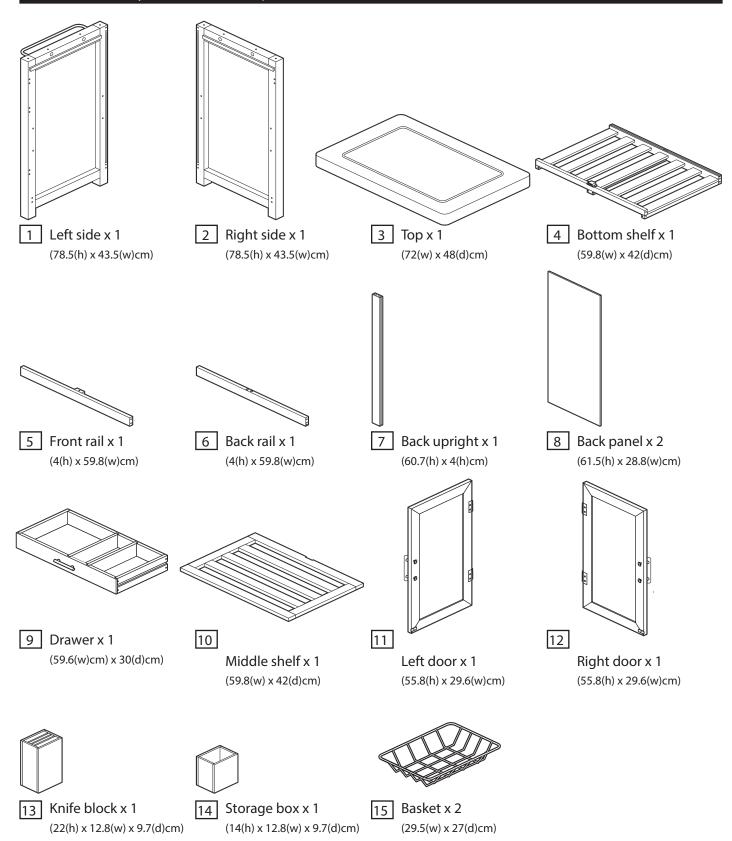


Components - Fittings

If you have damaged or missing components, call the Customer Helpline: 03456 400 800

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

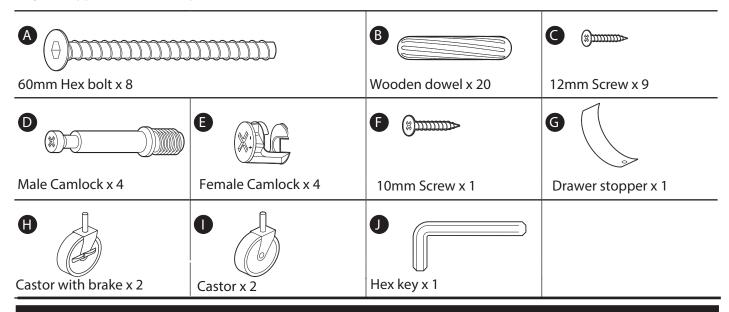

Tools required



 
Ruler – Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

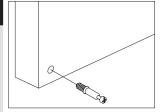

Step 3

 
Push the male camlock into the entry hole.

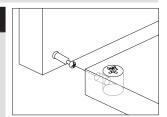

Step 2

Insert the female camlock as shown in the instructions.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

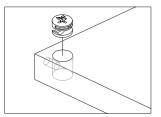


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

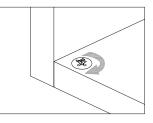

Step 1

Fix 4 x Male camlock **D**into underside of top 3 as shown using a Phillips screwdriver.

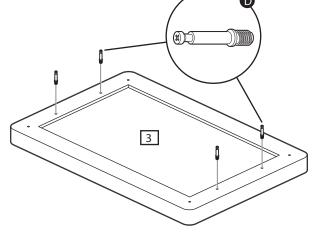

Step 2


Fix 2 x Female camlock into left side panel 1 and right side panel 2 as shown.

Note:

ensure that the arrow on top of the camlock points towards the entry hole for the male camlock. Please refere to the "Using Camlocks" section for further assistance.

Step 3

Connect bottom shelf 4 and back rail 6 to back upright 7 using 4 x wooden dowel B as shown.

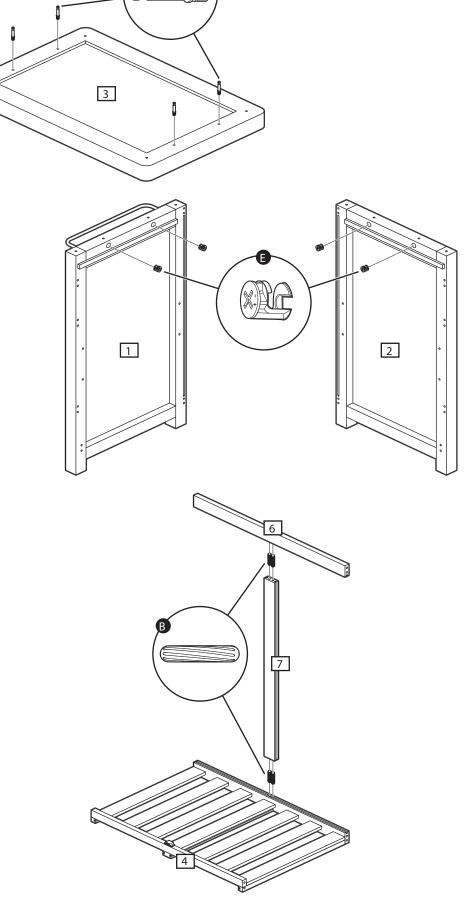

Step 4

Slide 1 x back panel 8 into the left end slots of bottom shelf 4 and back rail 6 as shown.

Step 5

Connect assembly completed at Step 4 to left side 1 using 3 x wooden dowel B and 3 x 60mm hex bolt


A as shown. Use Hex Key provided to do this

Connect front rail 5 to left side 1 using 1 x wooden dowel B and 1 x 60mm hex bolt A as shown. Use Hex Key

provided to do this

Step 6

Slide 1 x back panel 8 into the right end slots of bottom shelf 4 and back rail 6 as shown.

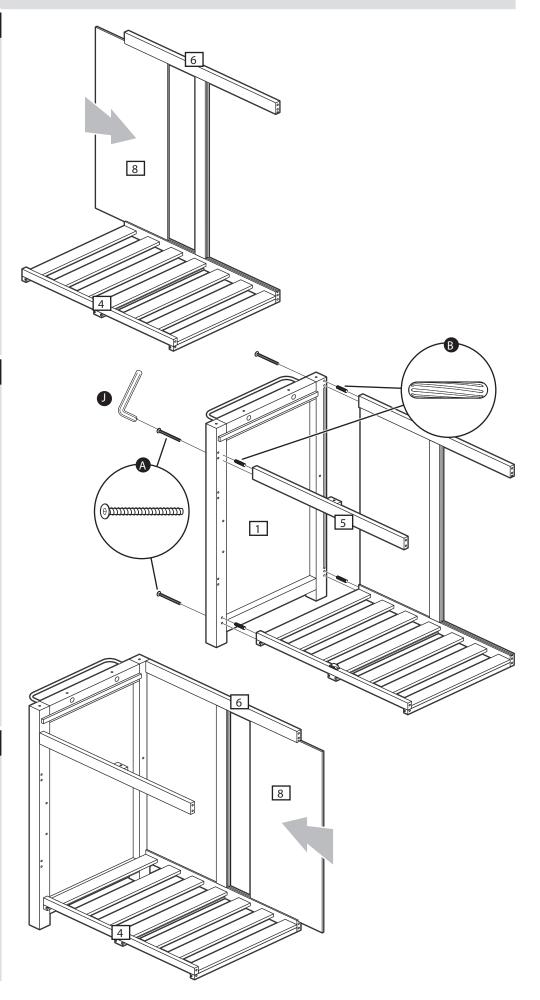

Step 7

Connect right side 2
to exposed ends of
assembly and front rail
5 using 4 x wooden
dowel B and 4 x 60mm
hex bolt A as shown
using Hex Key supplied

Step 8

Connect drawer stopper

to front rail using
1 x 10mm screw as
shown (a:).


Note: the loose end of the drawer stopper must point upwards and towards the back of the unit.

Connect top 3 to assembly using 4 x wooden dowel B as shown.

Push the male Camlock into the the adjacent entry hole


Turn the femal camlock clockwise with a screw driver. You should feel a click when the camlock is locked in place

The joint is now secure

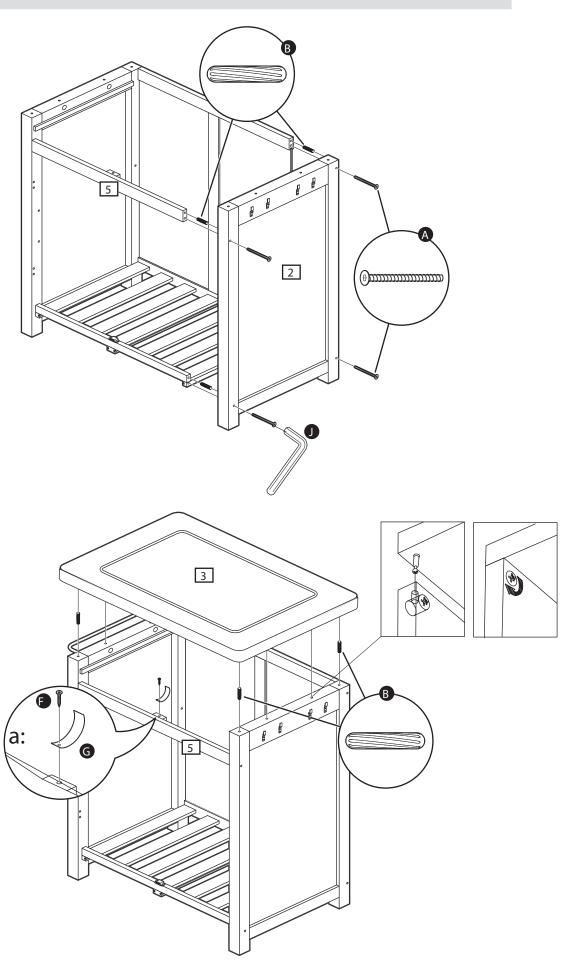

Step 9


Insert the drawer 9 as shown.

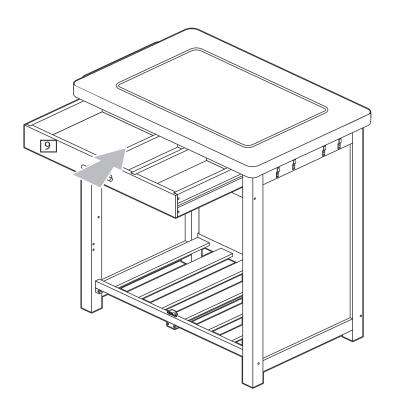

Step 10

Connect left door 11 using 4 x 12mm screws **©**


Repeat for right door 12. as shown.

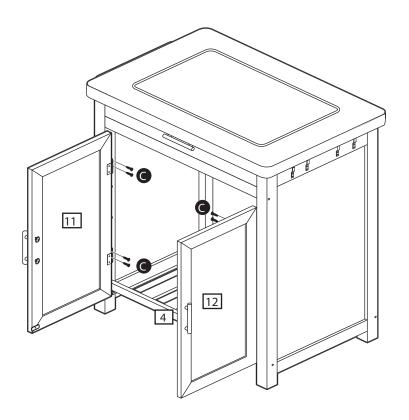

Step 11

Insert 4 x wooden dowel

into holes inside unit
and set middle shelf
on them as shown.

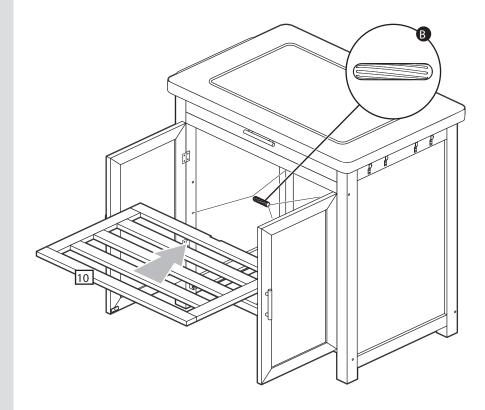


Step 12




Warning: The unit is heavy. Ask someone to help you with this step.

Insert 2 x castor with brake and 2 x castor into bottom of legs as shown.

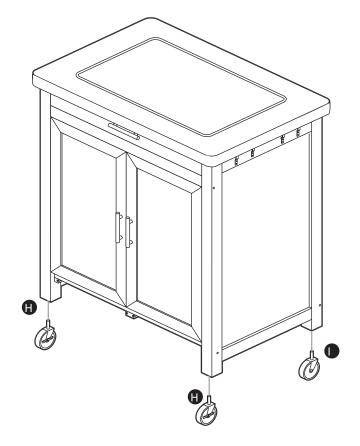

Step 13


Slide 2 x basket 15 into runners underneath bottom shelf as shown.

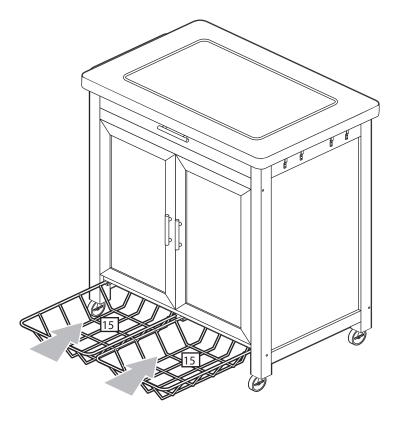

Step 14

Hang knife block 13 and storage box 14 onto hooks as shown

Assembly complete.

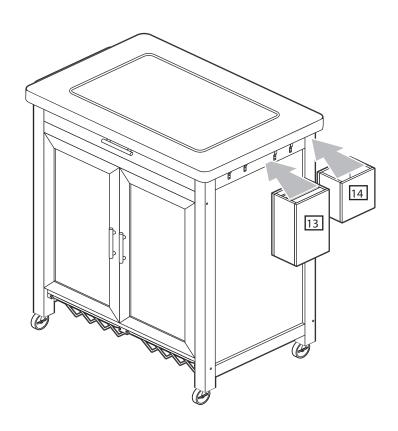

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800 Home Retail G roup, 489-499 Avebury Bouleva rd, Saxon Gate West, Central Milton Keynes, Bucks, MK9 2NW