

## ASSEMBLY & USE INSTRUCTIONS

---

**This manual applies to the following articles:**

**194672, 194673, 194676, 194677, 194678, 194681, 194683, 194684, 194688, 194689, 194691, 194693, 194694, 194696, 194698, 194699, 194700, 194701, 194704, 194703**

**Please refer to the rating label for the article no.**

**THESE INSTRUCTIONS ARE FOR YOUR SAFETY. PLEASE STUDY ALL INSTRUCTIONS AND WARNING LABELS BEFORE USING AND RETAIN FOR FUTURE REFERENCE.**

### **Caution**

- 1) PRODUCT IS INTENDED FOR INDOOR AND OUTDOOR USE.**
- 2) The plug must be kept indoors or plugged to a weatherproof outdoor socket that certified with plug in position.**
- 3) This product is intended for use in Christmas decoration only, it is not intended for household room illumination.**
- 4) Do not use this product for any other purpose than its intended use.
- 5) Do not allow the product near/ contact with a source of heat or flame, e.g. gas or electric heaters, fireplaces, candles or other similar heat sources.
- 6) Do not cover the product with cloth, paper or any other material not part of the product when in use. e.g. curtains, nets or bedding.
- 7) Do not connect the product to the power supply while the product is in the packaging.
- 8) This light set is constructed with non replaceable LED light, DO NOT attempt to replace any of the LED bulbs in the light set.
- 9) Only operate this product with the adaptor supplied.
- 10) Do not connect the light set to any other light set by cutting or joining the sets together.
- 11) Unplug the light chain when leaving the house, when retiring for the night, or if unattended.
- 12) Do not secure the wiring with sharp hooks or nails. This can cut or damage the wire insulation.
- 13) The external flexible cable or cord cannot be replaced. If part of light set or cable is damaged, the product MUST be destroyed.
- 14) Do not hang ornaments or other objects from the cord, wire or light strings.
- 15) Do not let lamps rest on the supply cord or any other wire.
- 16) To reduce risk of fire, do not deliberately reposition either lamp holder contact.

- 17) This product is for decoration use only. Not to be used by children as a toy and watch over them when near the tree.
- 18) Ensure tree is stable, place on a firm and level surface, away from where it may be knocked. And do not overload with excessively heavy decorations.
- 19) To avoid the risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- 20) Please refer to the packing or product rating label for product class, specifications and rating.
- 21) **IF YOU ARE IN ANY DOUBT ABOUT INSTALLING THIS PRODUCT, CONSULT A QUALIFIED ELECTRICIAN.**

**No tools required for assembly.**

### **Care & Use**

- 1) Before using or re-using, inspect the product carefully. Throw away the products if any parts damaged or frayed wire insulation or cords, loose connections or exposed copper wire.
- 2) Before storing the product, carefully remove the product from wherever it is placed to avoid undue strain or stress on the product conductors, connections and wires.

### **Storage**

- 1) Unplug the product from the mains socket.
- 2) Unplug the light strings from the adaptor.
- 3) Carefully place the product in its box and tape it shut. **STORE THE PRODUCT IN A COOL AND DRY LOCATION PROTECTED FROM SUNLIGHT AND WHERE THE TEMPERATURE DOES NOT EXCEED 40°.**

### **Trouble shooting**

If the product does not work properly, check these connections:

- 1) Make sure that the product is securely plugged to the power supply.
- 2) Make sure the light chain is securely connected to the adaptor.



### **Disposal and recycling**

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

PRODUCED FOR HOMEBASE LTD  
AVEBURY, MILTON KEYNES  
MK9 2NW  
TEL:0345-0778888  
[www.homebase.co.uk](http://www.homebase.co.uk)