

# INSTRUCTION MANUAL



## WINE COOLER

PLEASE SAVE THESE INSTRUCTIONS  
WARNING: READ THIS MANUAL CAREFULLY BEFORE USE.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:


### READ ALL INSTRUCTIONS BEFORE USING THIS WINE COOLER AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Ensure the cooler is unplugged before cleaning or if the cooler is not in use for an extended period of time.
- To clean the cooler use only mild detergents or glass cleaning products. Never use harsh detergents or solvents.
- It is not recommended to use this wine cooler with an extension cord or power board. Please ensure that the appliance is plugged directly into the electrical outlet.
- Do not operate this or any appliance with a damaged cord.
- When positioning the wine cooler, ensure that there is at least a 5cm clearance at the sides and a 10cm clearance at the back of the cooler as this is the main outlet for heat. This will allow for adequate ventilation.
- This cooler is designed to store wine bottles only.
- Do not store hot foods or drinks into the wine cooler as the temperature inside may not cool enough to prevent spoilage.
- Close the door immediately after putting in bottles so the inside temperature will not rise dramatically.
- Keep appliance away from any heat source or direct sunlight.
- The appliance must be placed on a flat and solid surface. It should not be laid on any soft material. To level the appliance, adjust the front legs at the bottom.

- Do not place any other appliances on top of the wine cooler.
- The Wine Cooler is an electrical appliance. To avoid injury or death from electrical shock do not operate the Wine Cooler with wet hands, while standing on a wet surface or while standing in water.
- Do not use outdoors or in wet conditions.
- Never pull the cord to disconnect it from the outlet. Grasp the plug and pull it from the outlet.
- Never lift or carry the Wine Cooler by the cord.
- Keep the cord away from heated surfaces.
- This Wine Cooler is for domestic household use only. Any other use will void the warranty.
- Do not plug into the power socket before set up is completed.
- An empty cooler can be a dangerous attraction to children. If disposing of the cooler remove gaskets, latches, lids or the entire door from your unused appliance, or take other action to ensure the cooler is harmless.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## Know your wine cooler

1. Water Tray
2. Glass door
3. Door handle
4. Temperature dial and light button.
5. Fan
6. Shelf
7. Adjustable feet

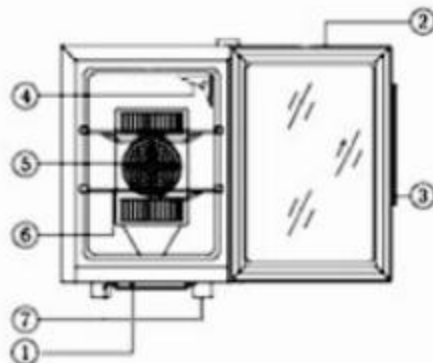

## Technical Specifications

Model #	:	LY0818A-W
Voltage Rating	:	220-240V~ 50Hz
Power Consumption	:	65 W
Temperature Cooling	:	Max. 15-18°C below ambient temperature
Volume	:	18L
Electrical Insulation	:	Class I

## Operation Guide

1. It is recommended the cooler is installed in a place where the ambient temperature is 20-25°C for best performance.
2. Ensure that there is at least a 5cm clearance at the sides and a 10cm clearance at the back of the cooler as this is the main outlet for heat ventilation.
3. Before switching on, allow the cooler to stand for 2-3 hours to stabilise the thermoelectric module after transportation.
4. Plug into the power socket. Make sure the power socket is 220-240V~ 50Hz.
5. Allow the empty wine cooler to operate for approx. one hour. This will allow the wine cooler to reach the desired temperature.
6. Temperature can be set to maximum approx. 15°C less than the surrounding ambient temperature by adjusting the temperature control dial.
7. Fill the wine cooler with your choice of wine bottles. Allow 2 hours of operation before the bottles reach the desired temperature.
8. Press the "Light button" to turn on the internal illumination light.
9. Condensed water will be collected at the water tray located at the bottom of wine cooler.

## Care and Maintenance

### Cleaning the wine cooler

- Unplug the wine cooler and remove the bottles.
- Wash the inside and outside with damp cloth.
- After cleaning, dry the unit with a soft cloth. Do not let liquid enter the chamber.
- Do not use alcohol, gasoline, abrasive powders or rough brushes to clean the wine cooler.
- Remove and clean the dust filter at the back.
- Wait until the unit is completely dry before use.

### Moving the wine cooler

- Remove all the bottles.
- Securely tape all loose items inside your wine cooler.
- Tape the door shut.
- Ensure the wine cooler stay in the upright position during transportation.

## Troubleshooting

### The wine cooler does not work

- There is a power failure. Ensure the cooler is plugged in and the power socket is turned on.
- Fuse at plug has blown. Replace the broken fuse in the plug. (With another 3amp fuse)

### Wine cooler is not reaching the desired temperature


- The cooler is placed too close to a heat source. Keep the cooler away from sunshine or other heat sources
- Not sufficient ventilation. Place the wine cooler in good ventilation.
- The door is opened too frequently or for a long period of time. Close the door and do not open the door too frequently or for a long period of time.
- The thermostat dial is set too low. Turn the dial to higher setting
- Clean if any dust at the ventilation vents at the back

## Connection to Power

- Before connecting, check that the voltage indicated on the appliance (bottom of the appliance) corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

**For your own safety read the following instructions carefully before attempting to connect this unit to the mains.**

You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

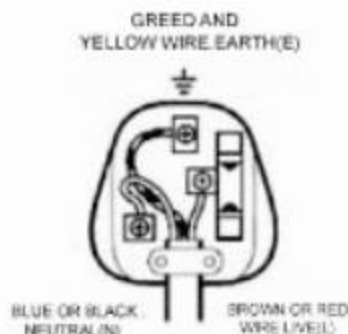

The wires in this mains lead are coloured in accordance with the following code:

Blue-NEUTRAL  
BROWN=LIVE  
GREEN+YELLOW=EARTH

## IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:



**Caution**  
To prevent electric shock disconnect from the mains before removing the cover

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. (⏏).

If a 3 Amp (BS1363) fused plug is used it must be fitted with a 3A fuse conforming to BS1362 and be ASTA approved.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

If in doubt contact a qualified electrician

## Environment



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.



## PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd  
488 - 489 Anebry Boulevard  
Central Milton Keynes  
MK9 2NW

