
Cream Gazebo With Side Panels

Assembly Instructions - Please keep for future reference

292/6625

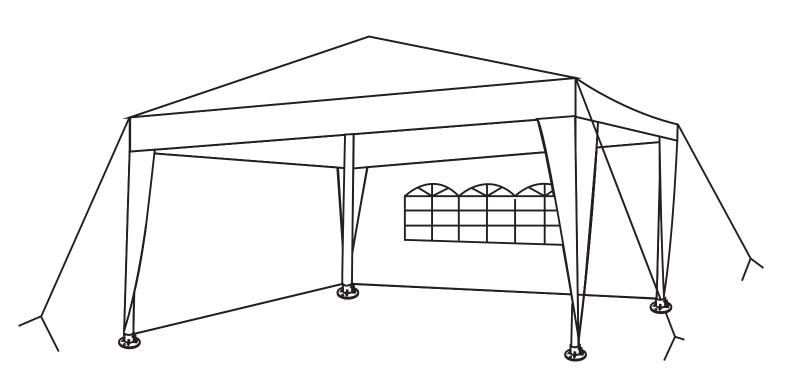

Dimensions

Width - 270cm

Depth - 270cm

Height - 250cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 640 0800**



IMPORTANT SAFETY INSTRUCTIONS

Read all instruction before using and keep for future reference

- Read these instructions carefully and familiarise yourself with the procedure before assembling the unit.
- Check that you have all the component parts following the list on the page 3 and familiarise yourself with each part before proceeding.
- Take all the fittings out of the plastic bag and separate them into their groups.
- Ensure you have enough space to lay out all the parts before assembly.
- To avoid scratching it is recommended that you assemble the unit on a soft level surface.

- Please keep children away when assembly. Please keep children under direct supervision of adult when using.
- Please do not use the gazebo under windy condition.
- Always use guy rope and pegs to secure the gazebo when using.
- This Gazebo is not a permanent structure and should be disassembled and stored away after using.
- Do not repack your Gazebo until completely dry.

- We recommend assembly by four persons under light or no wind conditions.
- •This Gazebo must not be left erect in windy conditions.
- •Keep the Gazebo Fabric away from screws, nails, staples, hooks, etc to avoid damage to the fabric and frame.
- *Warning:* The unit weight approximately 7.8 kgs.

Please lift with care.

CAUTION

Fire precautions

- Do not place the Gazebo near lights, fireplaces, gas or electric heaters, candles, radiators, or any other sources of heat, fire or flammable liquids.
- This Gazebo features a Fabric cover that is not retardant.

Safety

 To avoid any risks of suffocation to animals or children dispose of the plastic bags immediately.

- We recommend caution and common sense when in use.
- This Gazebo can burning.
- Do not use naked flames in or around the Gazebo. We recommend you advise no smoking while inside.


Cleaning

 As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products. This Gazebo has no flame retardant cooking area and should not be use to house BBQs or other cooking methods.

Components - Parts

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 640 0800


Please check you have all the parts listed below

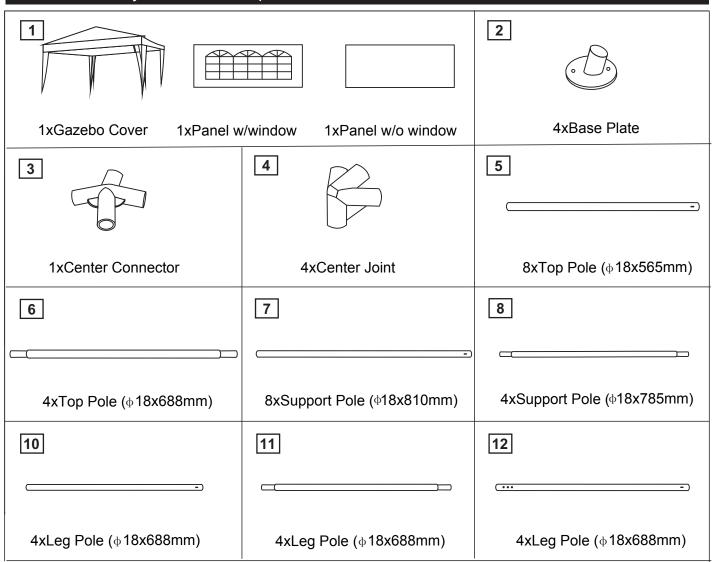

Components - Fittings

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.













Step 1

 
Assembling support poles

Insert support pole 8 into the support pole 7 ensure all the poles are fully inserted and secure.



Important note:
Because of the size of this unit we recommend that it


Ensure to locate the unite on the flat ground free from obstruction, in a sheltered area away from wind and heavy rain as this will damage the unit.



Step 2

Assembling corner joints


Use corner joints 4 to connect the support poles Ensure all the poles are fully inserted and secure.

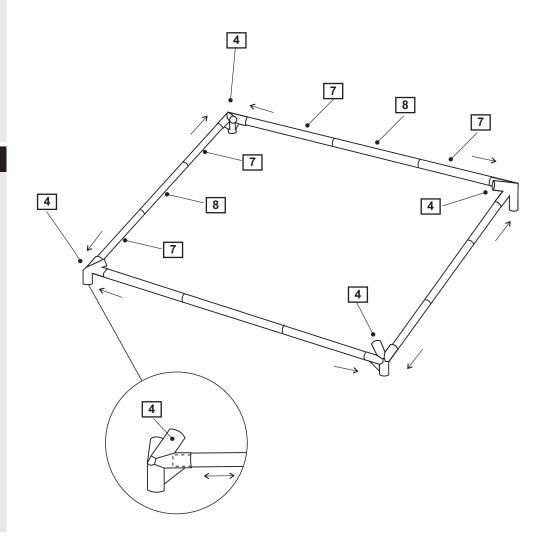

Step 3

Assembling top poles

 
Insert top poles 6 into the top poles 5. Ensure all the poles are fully inserted and secure.



Step 4

Assembling corner joints and centre connector

Connect the top pole to corner joints 4 and centre connector 3

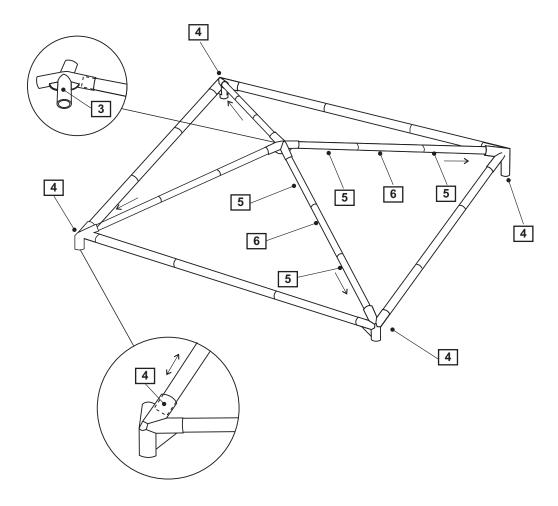

Step 5

Assembling leg poles


insert leg poles 10 into the unite. Ensure all the poles are fully inserted and secure.

Note: It would be useful to ask someone to help you at this step.

Step 6

Assembling gazebo covers

Carefully place the gazebo cover 1 over the assembled roof. Then pull the gazebo tightly over the assembled roof frame.

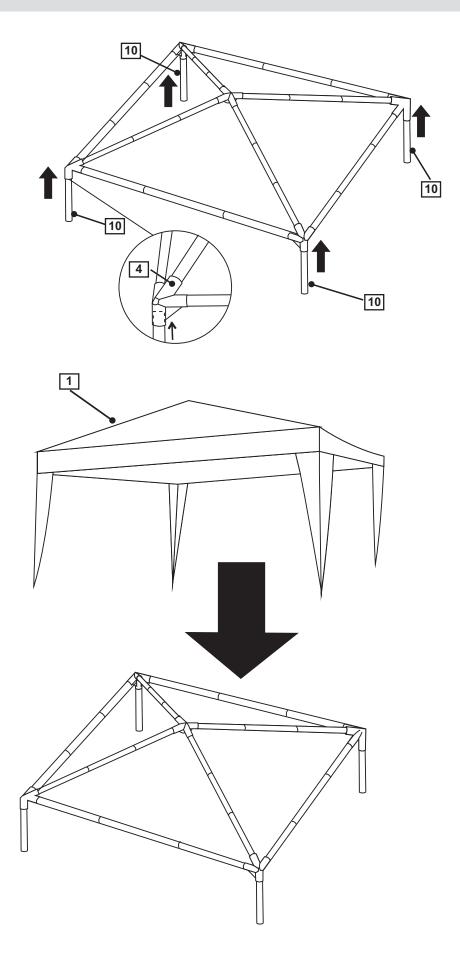

Step 7

Fixing leg poles

a: insert the base plate 2 into the leg pole 12

b: insert leg poles 12 into leg poles 11 Then insert the whole connected leg poles into the unit.Ensure all the poles are fully inserted and secure.


Note: It would be useful to ask someone to help you at this step.


Step 8

Fixing the gazebo cover

C: use the velcro tapes inside the gazebo cover to fix it onto the assembled frame

d: attach the gazebo cover's hooks into holes on the leg poles 12 Tighten by moving the hook to a lower hole.

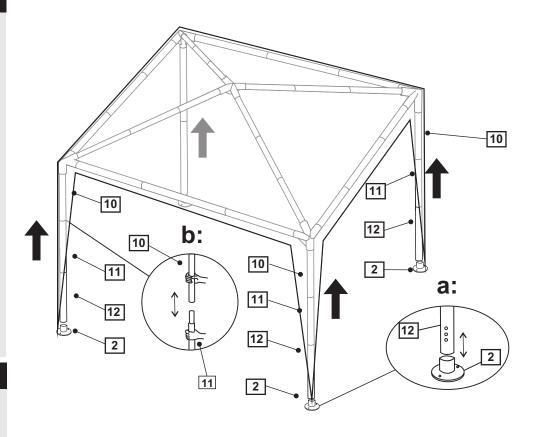

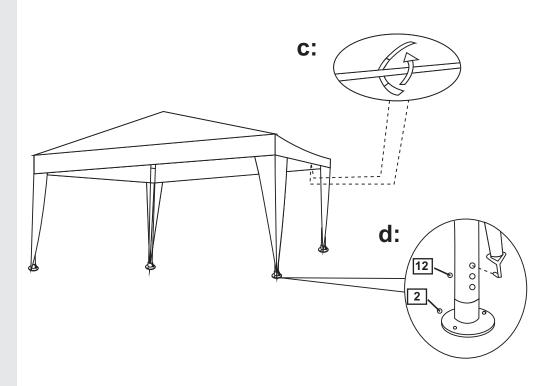

Step 9

Fitting the guy ropes


a: Attach on the guy rope os that the length of guy ropes can be adjusted.


b: attach the end of the guy rope to the corner of the top cover ring on the gazebo. Then attach the other end to peg and drive the peg into the ground.

Repeat above steps to assemble the other guy ropes.

C: use the peg**B**to fix the base plates 2

Note: the pegs are for location purposes only, they will not support the unit in high winds, see above instructions.

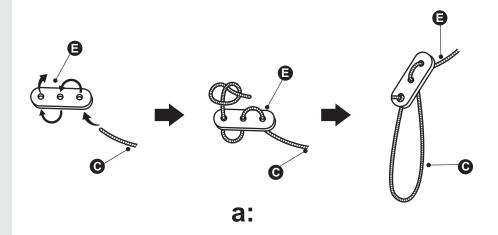

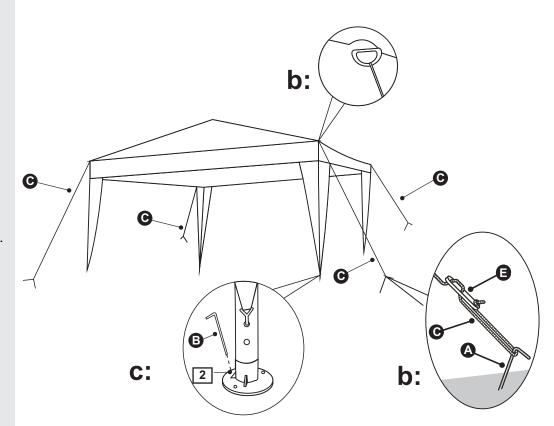

Step 10

Fitting the panels

a: Hang on the two panels at the top using the curtain ring


b: Use the velcro tapes at side of panels to fasten to the gazebo legs.

Side panels can be taken off separately.

Warning:

Do not assemble or disassemble during strong winds.

Assembly is complete.

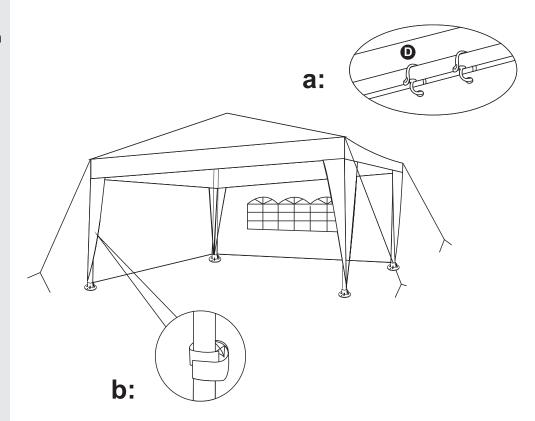



Important note: always use this product with caution and read the important safety instructions.

If you need help or have damaged or missing parts, call the **Customer Helpline**: **Argos = 0345 640 0800**