

get started

INSTANT™ **AIR FRYER 3.8L**
USER MANUAL

Instant™

Welcome

to your new Instant™ Air Fryer!

This Instant Air Fryer can help you cook delicious meals with less oil and hassle, compared to traditional deep frying. We hope you fall in love with Instant air frying and enjoy it in your kitchen for years to come!

Get started with your new Instant Air Fryer!



⚠️ WARNING

Before using your new Instant™ Air Fryer, read all instructions, including the Safety and Warranty document. Failure to follow the safeguards and instructions may result in personal injury and/or property damage.

CONTENTS

Important safeguards	2
What's in the box	6
How to use	7
Initial setup	8
Cooking	9
Cleaning	10
Troubleshooting	11
Learn more	12
Warranty	14



IMPORTANT SAFEGUARDS

⚠ WARNING

Read all instructions before using and only use this air fryer as described in this manual.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, personal injury, and/or property damage.

Placement

DO place the appliance on a countertop only. Always operate the appliance on a stable, non-combustible, level surface.

DO NOT place the appliance on or close to a hot gas or electric burner, or a heated oven.

DO NOT use the appliance near water or flame.

DO NOT use outdoors. Keep out of direct sunlight.

DO NOT place on anything that may block the vents on the appliance.

DO make sure all parts are dry and free of food debris before use.

General Use

DO NOT touch the appliance's hot surfaces, or any accessories during or immediately after cooking because they will be hot.

DO use the appliance's handles and knobs.

DO use oven mitts when removing accessories.

DO place hot accessories on a heat-resistant surface or cooking plate.

DO NOT cover basket with foil. This will cause airfryer to overheat. If using foil **DO** only use foil in bottom of cooking basket.

DO NOT move the appliance while it is in use.

DO NOT allow children or persons with reduced physical, sensory or mental capabilities to operate this appliance. Close supervision is necessary when any appliance is used near children and individuals with reduced capabilities. Children should not play with this appliance.

DO NOT use the appliance for anything other than household use. It is not intended for commercial use.

⚠ WARNING

DO NOT leave the appliance unattended while in use.

DO NOT use the appliance for more than 60 minutes in a 2-hour period.

Air Frying Cautions

When the air fryer is in operation, hot air is released through the air vents. Keep your hands and face at a safe distance from the air vents and take extreme caution when removing hot accessories from the appliance. Failure to do so may result in personal injury and/or property damage.

While cooking, the internal temperature of the appliance reaches several hundred degrees. To avoid personal injury, never place unprotected hands inside the appliance until it has cooled to room temperature.

DO NOT use a ceramic-coated or stoneware pot for air frying.

DO NOT block the vents on the air fryer. Leave at least 13 cm of space around the air fryer when in use.

DO NOT place the appliance on a stove.

DO NOT operate the appliance on or near combustible materials such as tablecloths and curtains.

DO NOT cover the air vents while the air fryer is in operation. Doing so will prevent even cooking and may cause damage to the appliance.

DO NOT overfill the air fryer. Overfilling may cause food to contact the heating element, which may result in fire, property damage, and/or personal injury.

DO NOT pour oil into the cooking container. If needed, spray food lightly with non-stick cooking spray. Using cooking oil could result in personal injury and/or property damage.

DO use caution with cooking containers made of materials other than metal or glass. Failure to do so may result in fire, personal injury, and/or property damage.

Should the unit emit black smoke during use, press Cancel and unplug the appliance immediately. Wait for smoking to stop before opening the door/basket, then clean thoroughly. For further information refer to 'Troubleshooting' in the User Manual.

DO use extreme caution when moving the appliance containing oils or other hot liquids.

⚠ WARNING

DO use extreme caution when removing the tray or disposing of hot grease.

DO NOT use this appliance for deep frying foods.

Accessories

DO use only accessories or attachments authorised by Instant Brands LLC. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of personal injury and/or property damage, fire or electric shock.

DO NOT use the included accessories in a microwave, toaster oven, convection or conventional oven, or on a ceramic cooktop, electric coil, gas range or outdoor grill.

Care and Storage

DO let the appliance cool to room temperature before cleaning or storage.

DO NOT store any materials in the appliance when not in use.

DO NOT place any combustible materials in the appliance, such as paper, cardboard, plastic, Styrofoam or wood.

DO NOT clean the appliance with metal scouring pads or steel wool. Pieces can break off and touch the electrical parts, causing a risk of shock, burns or personal injury and/or property damage.

Power Cord

A short power-supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping. This appliance has a 3-prong earthed plug. To reduce the risk of electric shock:

ONLY plug the power cord into an earthed electrical outlet.

DO NOT remove EARTH.

DO NOT let the power cord hang over edges of tables or counters, or touch hot surfaces or open flame, including the stovetop.

DO NOT use below-counter power outlets.

DO NOT use with extension cords, power converters or adapters, timer switches or separate remote-control systems.

⚠ WARNING

Electrical Cautions

The appliance contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock and/or death.

To avoid electrical shock:

Disconnect, select **Cancel**, then remove plug from power source.

Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

DO allow unit to cool before adding or removing parts or accessories.

DO regularly inspect the appliance and power cord.

DO NOT operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at **UKSupport@instantbrands.com** or by phone on:

+44 (0) 3331 230051.

DO NOT attempt to dislodge food while the appliance is plugged into an electrical outlet, as this may cause electric shock, burns or personal injury and/or property damage.

DO NOT attempt to repair, replace or modify components of the appliance, as this may cause electric shock, property damage, fire or personal injury, and will void the warranty.

DO NOT tamper with any of the safety mechanisms, as this may result in personal injury and/or property damage.

DO NOT immerse power cord, plug or the appliance in water or other liquid.

 
DO NOT rinse the appliance under tap.

DO NOT use the appliance in electrical systems other than 220-240V ~ 50-60Hz.

SAVE THESE INSTRUCTIONS


WHAT'S IN THE BOX

Air Fryer

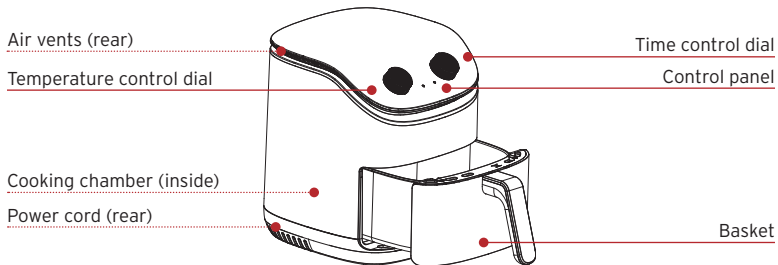

Accessories

 Cooking tray




Illustrations are for reference only and may differ from the actual product.

HOW TO USE

Control panel

 We've designed this Instant™ Air Fryer to be our simplest and easiest air fryer to use. With just two knobs to control temperature and time, you can start cooking delicious meals right away.

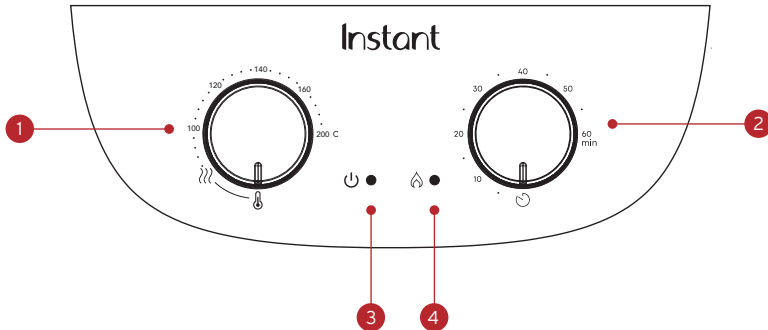

1. Temperature control knob
 - Off
 - ☞ Warm (76°C)
 - 100°C - 200°C

2. Time control knob
 - 0 min - 60 min
3. Power light
4. Heat On light

INITIAL SETUP

Unpack

1. Remove the Instant™ Air Fryer from the box.
2. Remove all the packaging material from in and around the appliance.
3. Make sure to remove all the accessories from inside the cooking chamber.

DO NOT remove the safety warning stickers or the rating label from the air fryer.

Clean before use

1. Wipe the internal cooking chamber and basket with a damp cloth – use a clean, soft cloth to dry.
2. Wash the cooking tray with hot water and dish soap, and rinse with warm, clear water and use a soft cloth to dry.

Placement

Place the air fryer on a stable, level surface, away from combustible material and external heat sources. **DO NOT** place your Instant™ Air Fryer on top of another appliance.

3. Make sure to leave at least 13 cm of space above and around all sides of the appliance to allow for sufficient air flow.

Test run

Before using your new Instant™ Air Fryer for the first time, you must perform a test run to ensure the cooker is working properly.

To perform a test run:

1. Plug the air fryer into an electrical outlet. The power light will turn on.
2. Insert the air frying basket into the cooker, but do not add food.
3. Rotate the temperature control dial to 200°C.
4. Rotate the time control dial to 15 minutes.
5. The heat on light will turn on during cooking. The air fryer will chime to let you know that timer has run out.
6. Let the unit cool. *Now you're ready to cook a meal in your Instant™ Air Fryer!*

COOKING

The Instant™ Air Fryer uses rapid air circulation to crisp or cook food, giving your meals all the rich, crispy flavour of deep frying, with little to no oil.

⚠ WARNING

HOT SURFACES

The air fryer will be hot during and after cooking. Always exercise extreme caution when removing food from the hot cooking chamber. Touching hot surfaces may result in personal injury, and/or property damage.

MUST ALLOW AIR FLOW

To prevent personal injury, do not block air intake or air vents.

What to cook in

- The cooking tray is perforated to allow for airflow and should be used for most foods, like wings and cauliflower bites.

You can place food directly on the cooking tray, without using foil or other coverings.

Prep

Cut, chop, season, marinate or batter your ingredients according to your recipe.

Cook

1. Place your food into the air frying basket, according to your recipe.
2. Insert the air frying basket into the cooker.
When the air frying basket is inserted securely, the front of the basket is flush with the front of the cooker.
3. Turn the temperature control dial to the desired temperature setting.
4. Turn the time control dial to the desired time setting.

Finish

- The air fryer will chime to let you know that cooking is complete.

CLEANING

Clean your Instant™ Air Fryer after each use. Always unplug the unit and let all parts cool to room temperature before cleaning. Before use or storing, make sure all surfaces are dry.

⚠ WARNING

To prevent electric shock, unplug before cleaning.

DO NOT immerse power cord, plug or the appliance in water or other liquid, which may result in electric shock.

Part	Cleaning instructions
Cooking tray	<ul style="list-style-type: none">• Dishwasher safe.*• The cooking tray has a non-stick coating. Avoid using metal utensils, steel wool pads or harsh cleansers when cleaning.
Removable air frying basket	<ul style="list-style-type: none">• Clean with a damp cloth and mild dish soap.• Dishwasher safe.*• Avoid using metal utensils, steel wool pads or harsh cleansers when cleaning.
Cooking chamber	<ul style="list-style-type: none">• Clean with a damp cloth and mild dish soap.• Always check the heating coil and cooking chamber walls for oil spatter and food debris, and clean as needed.• Ensure the heating coil is dry before turning on the air fryer.• To remove baked-on grease and food residue from the cooking chamber, spray with a mixture of baking soda and vinegar and wipe clean with damp cloth. For stubborn stains, allow the mixture to sit on the affected area for several minutes before scrubbing clean.
Exterior of cooker	<ul style="list-style-type: none">• Clean with a soft, damp cloth or sponge. Wipe dry.
Power cord	<ul style="list-style-type: none">• While the cooker is unplugged, use a barely damp cloth to wipe any particles off cord

**Some discolouration may occur after machine washing, but this will not affect the cooker's safety or performance.*

TROUBLESHOOTING

Problem	Cause	Solution
Air fryer will not turn on	The appliance is not properly plugged in.	Make sure the power cord is plugged into the outlet firmly.
	Outlet is not powered.	Plug another appliance into the same outlet to test the circuit.
	The air fryer basket is not fully inserted into the unit.	Make sure the air fryer basket is fully inserted.
Black smoke is coming from the air fryer	Using an oil with a low smoke point.	Cancel cooking, unplug the cooker and allow it to cool to room temperature. Choose a neutral oil with a high smoke point.
	Food residue on the heating coil, in the cooking chamber or on the accessories.	Cancel cooking, unplug the cooker and allow it to cool to room temperature. Remove all accessories from the cooking chamber and clean the cooking chamber and all accessories thoroughly. For more information, see 'Cleaning' on page 11.
	Appliance malfunction.	Contact Consumer Care.
White smoke is coming from the air fryer	Cooking foods with a high fat content, such as bacon, sausage, and hamburgers.	Avoid air frying foods with a high fat content. Check the cooking chamber for excess oil and/or fat and carefully remove as needed before air frying.
	Water is vaporising, producing thick steam.	Pat dry moist food ingredients before air frying. Do not add water or other liquid to the cooking chamber when air frying.
	Seasoning on food has blown into element.	Be mindful when seasoning food. Spray vegetables and meats with oil before seasoning to help the seasoning stick.

LEARN MORE

There's a whole world of Instant™ Air Fryer information and help just waiting for you. Here are some of the most helpful resources.

Register your product

instantbrands.co.uk/product-registration

Contact Customer Care

instantbrands.co.uk/support

UKSupport@instantbrands.com

+44 (0) 3331 230051

Instant Brands Connect App with 1000+ recipes

iOS and Android app stores

Cooking charts and more recipes

instantbrands.co.uk/recipes

Instant Brands Connect App

How-to videos, tips and more

 **Instant Brands UK**

Replacement parts and accessories

instantbrands.co.uk/productcategory/instant

Join the community



Product specifications

Model	Volume	Wattage	Power	Weight	Dimensions
AFB4002BK	3.8 Liters	1500 W	220-240V ~ 50-60Hz	3.9 kgs	cm: 35.1 L x 25.2 W x 29.6 H

WARRANTY

Instant Brands (EMEA) Limited, Instant Brands (Ireland) Limited, and Instant Brands LLC (collectively the "Company") warrant this appliance to be free from defects in workmanship and material, under normal household use, for a period of one (1) year from the date of original purchase. This Limited Warranty extends only to the original purchaser and use of the appliance in the UK and EU and must be purchased by an authorised distributor of Instant Brands. This warranty does not cover appliance use outside of the UK and EU.

Proof of original purchase date and, if requested, return of your appliance is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with the written instructions included with the appliance (which are also available at instantbrands.co.uk), the Company will, at its sole discretion, either: (i) repair defects in materials and workmanship; or (ii) replace the appliance. In the event the appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase (UK only).

The Company is not responsible for shipping costs for warranty service.

Limitation and Exclusions

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and may result in serious injury and damage. Any modification or attempted modification to your appliance or any part thereof will void the warranty, unless such modification(s) or alteration(s) were expressly authorised by the Company.

This warranty does not cover (1) normal wear and tear; (2) damage resulting from negligent, unreasonable or misuse of the appliance, improper assembly or disassembly, use contrary to the operating instructions, failure to provide reasonable and necessary maintenance, Acts of God (such as fire, flood, hurricanes and tornadoes), or repair or alteration by anyone, unless expressly directed and authorised by the Company; and (3) repairs where your appliance is used for other than normal household use and in a manner contrary to published user or operator instructions.

To the extent permitted by applicable law, the liability of the Company, if any, for any allegedly defective appliance or part shall be limited to repair or replacement of the appliance or part thereof, and shall not exceed the purchase price of a comparable replacement appliance. Except as expressly provided herein and to the extent permitted by law, (1) the Company makes no warranties, conditions or representations, express or implied, usage, custom of trade or otherwise with respect to the appliance or parts covered by this warranty and (2) the Company shall not be responsible or liable for indirect, incidental or consequential damages arising out of or in connection with the use or performance of the appliance or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of any nature or kind.

You may have rights and remedies under applicable laws, which are in addition to any right or remedy which may be available under this limited warranty.

WARRANTY

Please visit instantbrands.co.uk/product-registration/ to register your appliance. You will be asked to provide your name, your email address, the store name, date of purchase, model number and serial number (both of which are found on the appliance). This registration will enable us to keep you up-to-date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understood the instructions for use and warnings accompanying the appliance.

Warranty Service

To obtain warranty service, please contact our Customer Care Department by creating a support ticket online at [Instantbrands.co.uk/support/](https://instantbrands.co.uk/support/). If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Brands is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

Instant Brands (EMEA) Limited, 1
Christchurch Way, Woking, Surrey,
GU21 6JG, UK.

Email: UKSupport@instantbrands.com

Telephone: +44 (0) 3331 230051

This warranty was last updated on 1 September 2019 for all products sold from [1 November 2019]. If your product comes with our older warranty version, your warranty will continue to be honoured.

Recycling

This appliance complies with the WEEE Directive 2012/19/EU on the disposal of electrical and electronic equipment (WEEE). This appliance complies with the European directive for electromagnetic compatibility (EMC) 2014/30/EU and its revisions, as well as Low Voltage Directive (LVD) 2014/35/EU and its revisions. This marking indicates that this product should not be disposed of with other household waste throughout the UK and EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material sources. To return your used device, please use the return and collection systems or contact Customer Care for further recycling and WEEE information.



Instant Brands (EMEA) Limited
1 Christchurch Way, Woking, Surrey,
GU21 6JG, UK

instantbrands.co.uk

© 2022 Instant Brands LLC
856-0119-11

INSTANT is a registered trademark
of Instant Brands Holdings Inc.