





EN LED ALARM CLOCK OPERATING INSTRUCTIONS

Thank you for your purchase of this quality clock. Please read these instructions carefully and keep in a safe place for future reference.

Top view

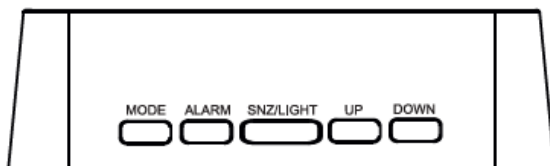

Back view

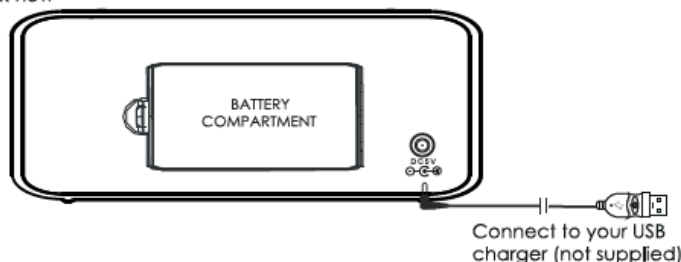

ACTIVATING THE CLOCK

Remove the protective film from the LED screen.

To activate the clock you can use either the battery or USB power.

Battery power: Insert 3 X AAA batteries into the battery compartment, taking care to observe the polarity.

Note. On battery power the digits will only light up for 10 seconds after pressing any button.

USB power: Insert the DC jack of the supplied USB lead into the back of the clock and connect other end to your USB charger (not supplied), now plug the charger into a standard household outlet.

Note. On USB power the digits will light up continually.

Important note. If the clock runs on the battery power, press any button to activate the display before setting any options. It is recommended to use USB power when setting the clock.

SETTING THE TIME

Press and hold the MODE button until the hour digits will flash. Press UP or DOWN button to set the hour, ensuring AM/PM is set correctly.

Press the MODE button once again, the minute digits will flash. Press UP or DOWN button to set the minutes.

Press the MODE button once again, the 24Hr will flash. Press UP or DOWN button to select between 12/24 format.

Press the MODE button once again to exit.

SETTING THE ALARM

Press and hold the ALARM button until the hour digits will flash. Press UP or DOWN button to set the desired alarm hour, ensuring AM/PM is set correctly.

Press the ALARM button once again, the minute digits will flash. Press UP or DOWN button to set the minutes.

Press the ALARM button once again, the display will show '05' and flash. Press UP or DOWN button to set snooze time duration from 5 to 60 minutes.

Press the ALARM button once again to exit.

TO TURN ON/OFF THE ALARM

Press the ALARM button once to turn on/off. When the alarm is activated AL icon will show.

When the alarm sounds press any button (except the Snz/Light) to stop the alarm until same time next day.

USING THE SNOOZE FEATURE

When the alarm sounds, press the SNZ/LIGHT button to snooze the alarm for preset snooze time (default snooze duration is 5 minutes).

The AL icon will flash. To stop the snooze function, press any button (except the Snz/Light).

TO VIEW THE TEMPERATURE DISPLAY

In normal time mode, press the MODE button once.

To automatically switch between time and temperature display every 5-10 seconds, press the MODE button once, the temperature will show. Then press and hold MODE button until the clock beeps.

TO ADJUST THE LED DISPLAY BRIGHTNESS

Press UP button to select between High→Medium.

TO USE THE NIGHT MODE

With the Night mode switched on the LED display will automatically dim between 6pm and 6am.

Press the MODE button twice, 'OFF' indicator will show, press UP or DOWN button to set the Night mode ON or OFF.

SETTING THE NIGHT MODE TIME MANUALLY

Press the MODE button twice, ensure the Night mode is set to ON.

Press and hold the MODE button, the hour digits will flash, press UP or DOWN button to set Night mode starting hour.

Press the MODE button once again, the minute digits will flash, press UP or DOWN button to set Night mode starting minutes.

Press the MODE button once again, the hour digits will flash, press UP or DOWN button to set Night mode finish hour.

Press the MODE button once again, the minute digits will flash, press UP or DOWN button to set Night mode finish minutes.

Press the MODE button to exit the Night mode setting mode.

CHANGING THE BATTERIES

It is recommended that you replace the batteries annually even if the product is still running. Only use 3 X AAA (1.5V) Alkaline batteries in this clock. Do not mix old and new batteries, different types or brands. Remove the batteries if the clock is stored or not in use. Remove exhausted batteries from the product.

Warning: Do not recharge non-rechargeable batteries.

Please dispose of used battery in a responsible manner. For more information please contact your local authority.

SAFETY

This electric clock may represent a hazard for young children. Keep this clock out of reach of small children to avoid risk of shock or possible choking hazard from small parts.

MAINTENANCE

A soft cloth may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

YOUR GUARANTEE

Your clock is guaranteed for 2 years from the date of purchase against any faults arising from defective materials or manufacture. Damage caused through careless handling, misuse or in transit is expressly excluded. Should this clock fail within 2 years please return it to your retailer.

Environmental Protection

Disposal of electrical & electronic equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate collection point. If you are unsure of where this is contact your local authority. Improper disposal may be harmful to the environment.

