


## MEET YOUR FIRE 7 KIDS



## ACTIVATE YOUR FIRE 7 KIDS

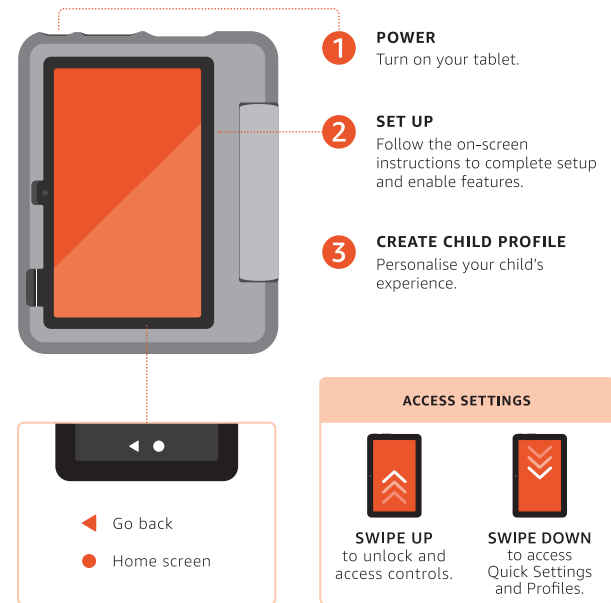

## REMOVE THE CASE IF NEEDED



PUSH OFF UPPER CORNERS TO REMOVE THE CASE

### CLEAN YOUR TABLET




Remove the case and clean with a dry, non-abrasive cloth.

### EXPAND YOUR STORAGE



Remove the case to install a microSD card. *microSD card sold separately.*

## ENJOY YOUR FIRE 7 KIDS

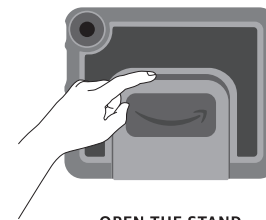

OPEN THE STAND



STAND ORIENTATIONS



Access the **Parent Dashboard** to customise parental control settings and content at <https://parents.amazon.co.uk>.

