



AH Ashbourne bathroom mirror


SKU 3123939

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference.

Siting Instructions

This fitting is IP44 rated, suitable for Zones 2 and Outside Zones except where likely to come in to direct contact with water jets. An example of exceptions would be in a shower cubical or an area where water jets are used for cleaning purposes.

 This product can be mounted either vertically (portrait) or horizontally (landscape)

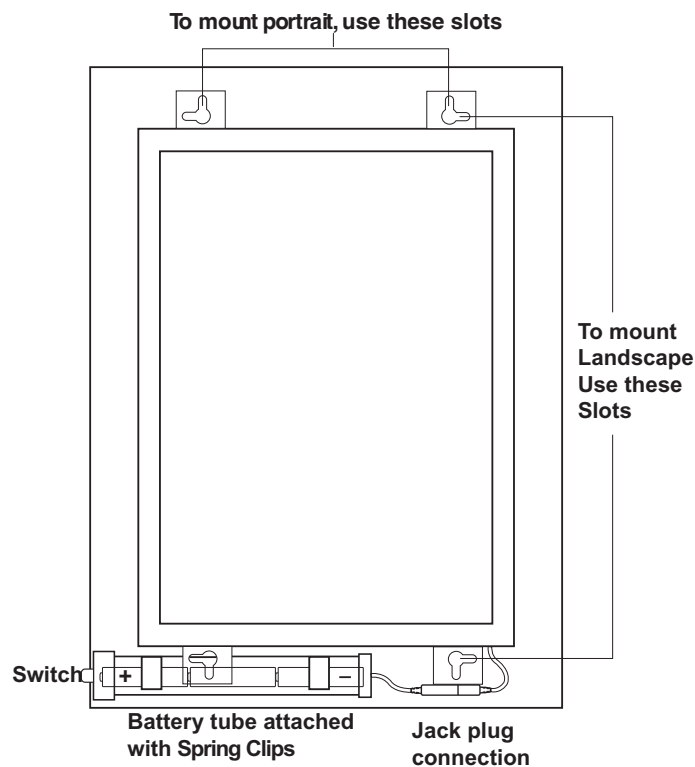

Fitting/replacing the batteries

This product requires 3x 1.5V AA batteries

The performance of the product will depend on the quality and type of batteries used. Always use good quality batteries.

The battery tube is attached to the rear of the mirror with Spring Clips for ease of fitting the batteries. It can also be completely removed from the product - by disconnecting the jack plug and socket.

Loosen 2 screws on battery tube switch end. remove lid, insert batteries, observing correct polarity (+ end of batteries towards switch end). Refit lid, secure screws and switch-on to test.

Installation:

1. Decide if the mirror is to be installed landscape or portrait. This mirror fixes to the wall by locating the keyhole shaped slots over the mounting screws in the wall. It is important to get the screw positions correct to ensure easy and secure fitting.
2. Measure the distance between the hole centres on the fixing lugs. Mark the positions of the screw holes on the wall. Check for concealed pipes and wiring before drilling. Use suitable drill bits for masonry and ceramic tiles.
3. Supplied wall plugs are for solid walls only. For all other wall types ensure correct fixings are used. Fit appropriate wall fixings and fit supplied screws. Screw heads must protrude approx 3-5mm from the wall to enable lugs to fit over adequately.
4. Fit mirror onto screw heads - check the screw heads are securely located into the keyhole slots.
5. Switch mirror on.

Care & Use:

- Wipe clean with a soft dry cloth. Never use scourers, abrasives or chemical cleaners. Do not allow moisture to come into contact with electric parts.
- Batteries are to be inserted with the correct polarity.
- Different types of batteries (alkaline, ordinary or rechargeable) or new and used batteries are not to be mixed.
- Exhausted batteries are to be removed from the product to prevent leakage.
- The supply terminals of batteries are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Do not dispose of used batteries with your household waste.
- Please recycle where facilities exist. Check with your local authority for recycling advice.

“WARNING”

- Handle with care.
- Do not place very hot or very cold items directly on glass surfaces.
- Do not sit or stand on glass surfaces.
- Do not strike the glass with hard or pointed items, or use the glass as a chopping surface.
- Do not use abrasives cleaning agents, as these may scratch the glass.
- Clean glass with a damp cloth. Use only water / glass-cleaner. Wipe dry with clean a cloth.
- If the glass is chipped or broken, stop using the product.
- Always supervise young children around glass products.

Recycling electrical products

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal.

Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.



Produced in China

 
Argos Limited, London, EC1M 6HA, UK. [Argos \(N.I.\) Ltd](http://Argos(N.I.)Ltd),
Forestsides Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

If you require any further assistance, you can contact us
on **0345 640 2020** or visit **argos.co.uk/help/contact-us**

HOME

A Guide to

Wall Mounting & Fixings

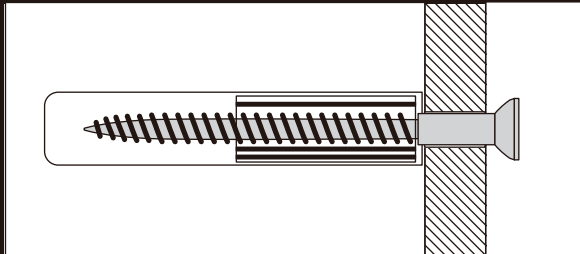

IMPORTANT:

When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
HINTS:

- 1) General Rule  Always use a larger screw and wall plug if you are not sure.
- 2) Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
- 5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug General Wall Materials

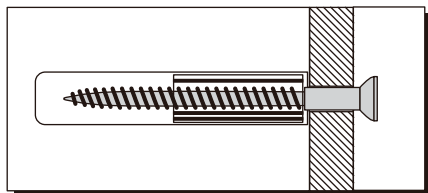


These come in various sizes and are made from plastic or sometimes wood fiber.

 No.2 "General Purpose" Wall Plug Aerated / Breeze Block

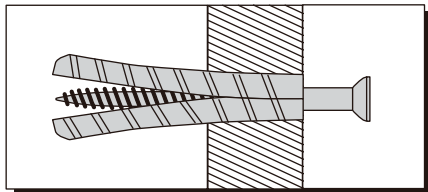


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, a General Purpose Plug can be used.

 No.3 "Shield Anchor" Wall Plug Heavy Loads

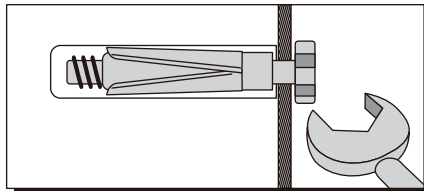


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

 No.4 "Cavity Fixing" Wall Plug

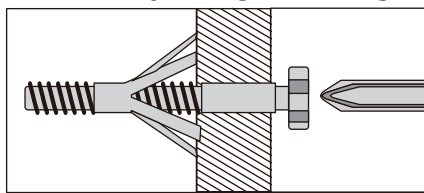


For use with plaster board partitions or hollow wooden doors.

 No.5 "Cavity Fixing - Heavy Duty" Wall Plug

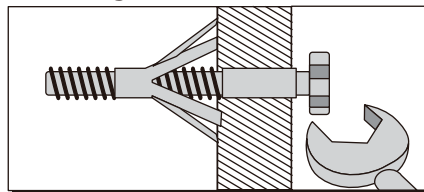

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

 No.6 "Hammer Fixing" Wall Plug

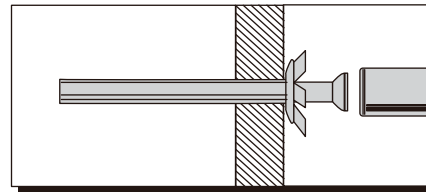

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

SAFETY

Always check the fitting and location to ensure your safety in and around the home.

FITTING

From time to time check the fitting to ensure the wall plugs or screws do not become loose.