
## Jenson

## Gloss

313/7815

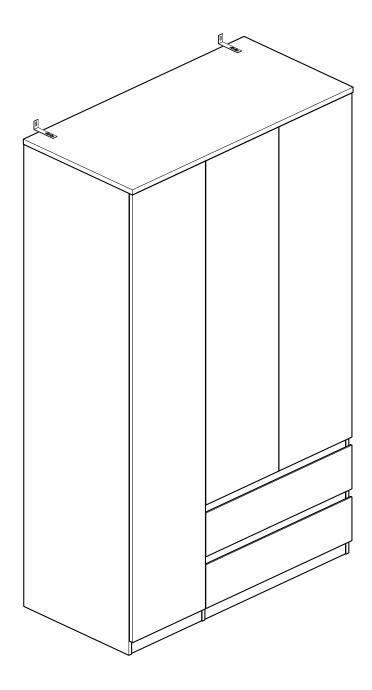

## IMPORTANT - Retain these instructions for future reference

## **Spare Parts**

Visit: www.argos-support.co.uk

Email: Help@ClickSpares.co.uk

Call: 0370 112 1928

## **Customer Support**


Call: 0345 640 2020



Important - Please read these instructions fully before starting assembly

- Warning: This unit weighs approximately 110kgs. Please lift with care.
- · Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.
- Installation shall only be carried out exactly according to the manufacturer's instructions otherwise a safety risk can occur if incorrectly installed.
- Do not use this item if any components are missing or damaged.
- Regularly check all fastenings to ensure they are properly tightened.

- WARNING: To prevent possible overbalancing this unit must be secured to a wall using the 2 overbalance protector kits supplied.
- A unit that is allowed to topple can cause serious or fatal injury. In addition to wall fixing the unit, place heavy items on the lower shelves, do not put any heavy objects on top of the unit and never allow children to climb or hang on drawers, doors or shelves.

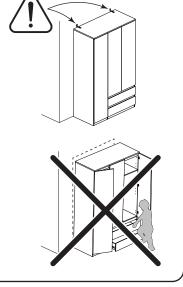

• Refer to guide after section 36 for wall fixing information.

## Care Advice

- Check you have all the components and tools listed on relevant pages.
- Remove all fittings from the specified plastic bag and separate them into their groups.
- · Parts of the assembly will be easier with 2 people.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.
- · Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- Only clean with a damp cloth.



■ ★ ● • Assembly videos are Mariable throughout **DEP** these instructions by scanning in the QR codes.




 We do not recommend the use of power drill/drivers for inserting screws,


as this could damage the unit. Only use hand screwdrivers.

 Please explore a sustainable (re-selling/donation to charity) or a responsible (local tip) way of disposal at the end of use of this product.

## **Cabinet Panels**

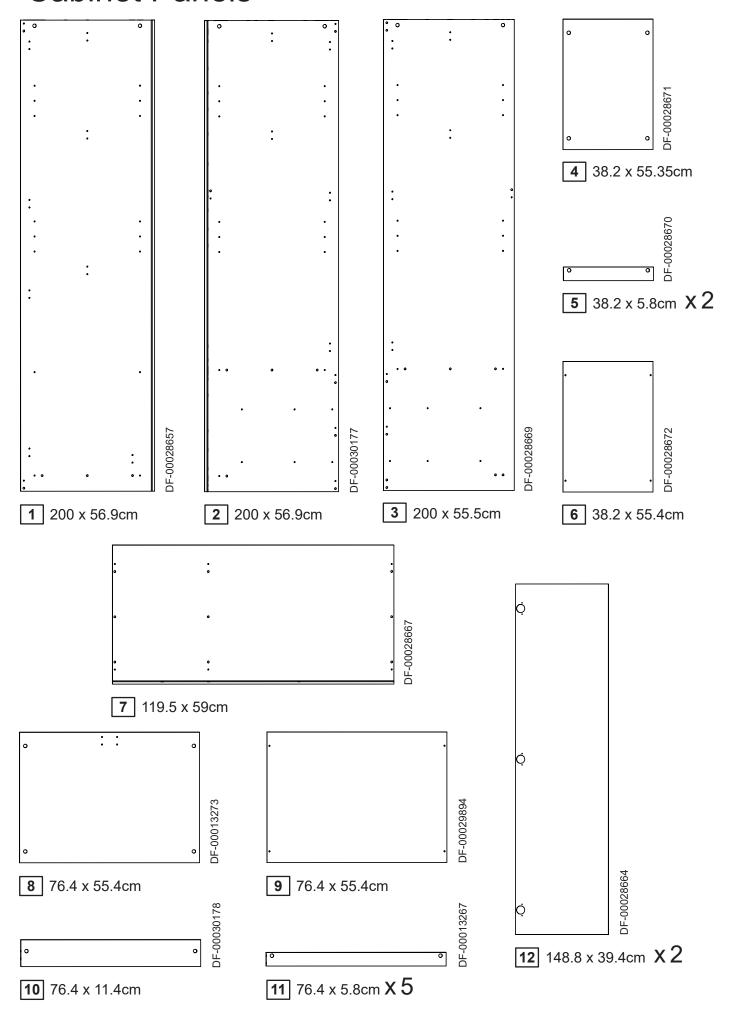


## **Cabinet Panels**

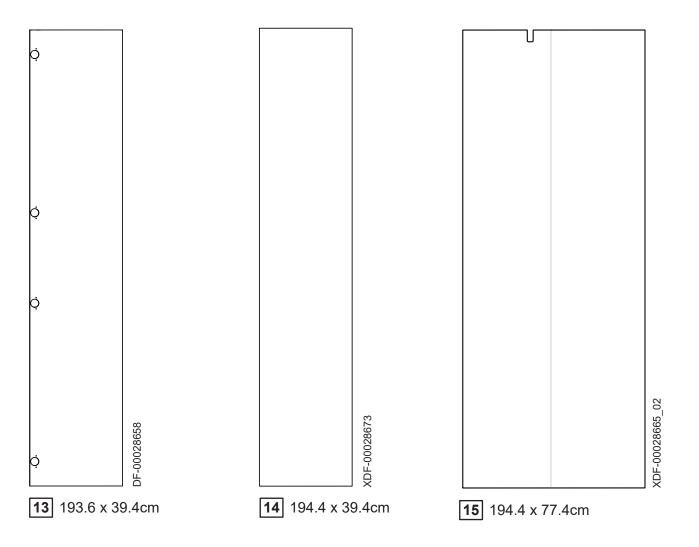


## **Drawer Panels**


Note: the internal drawer panels are grey

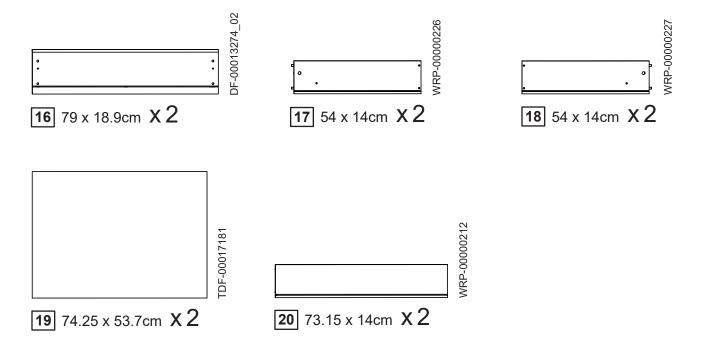


## **Fittings**


Use these drawings to correctly identify the fittings

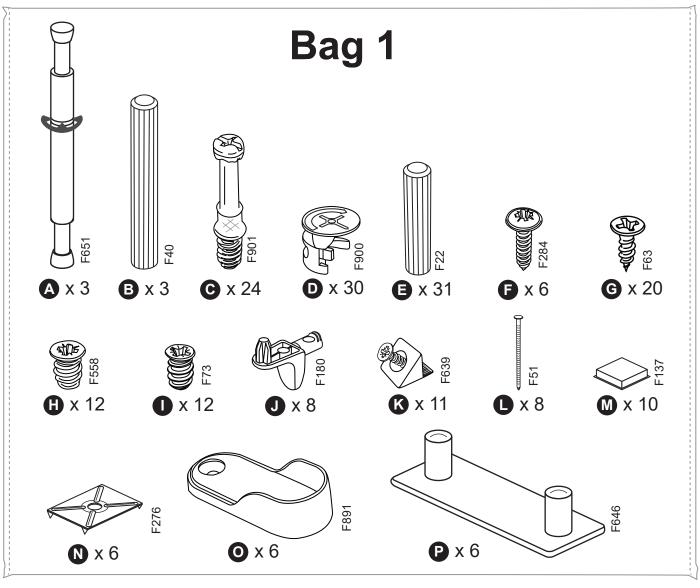


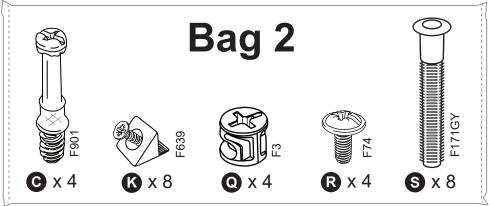


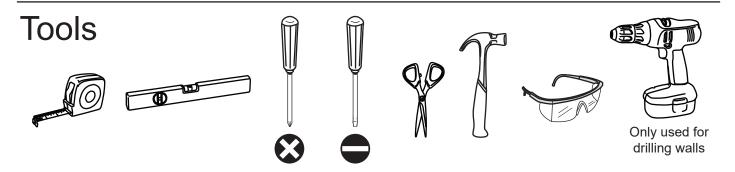



## **Fittings**

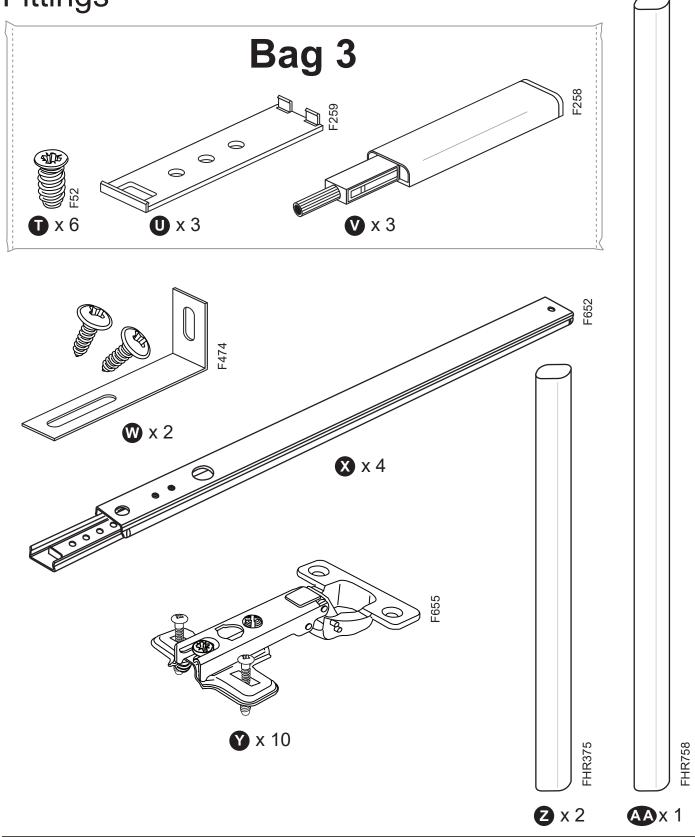


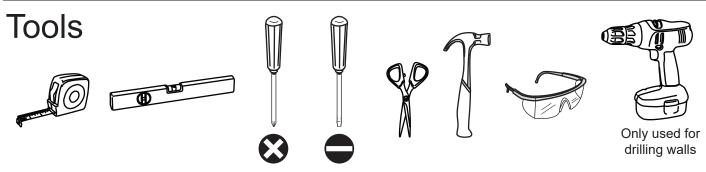


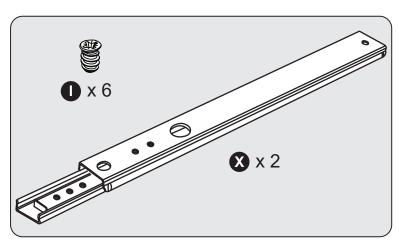


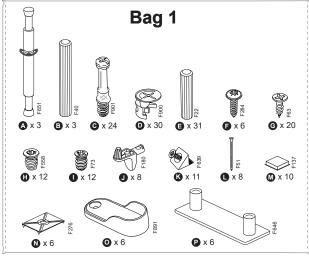


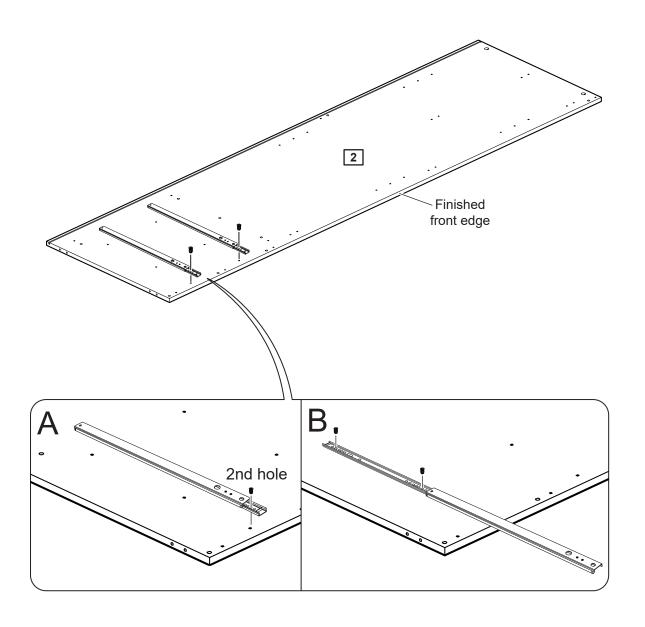


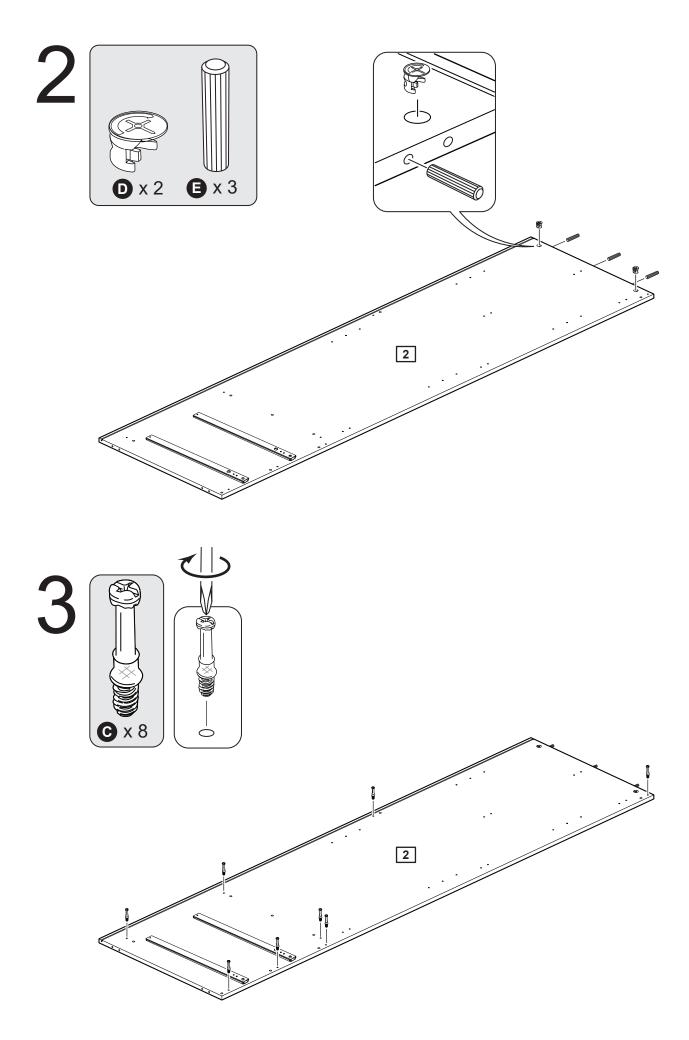


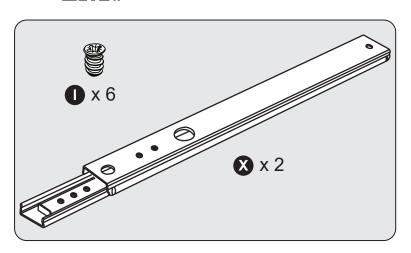


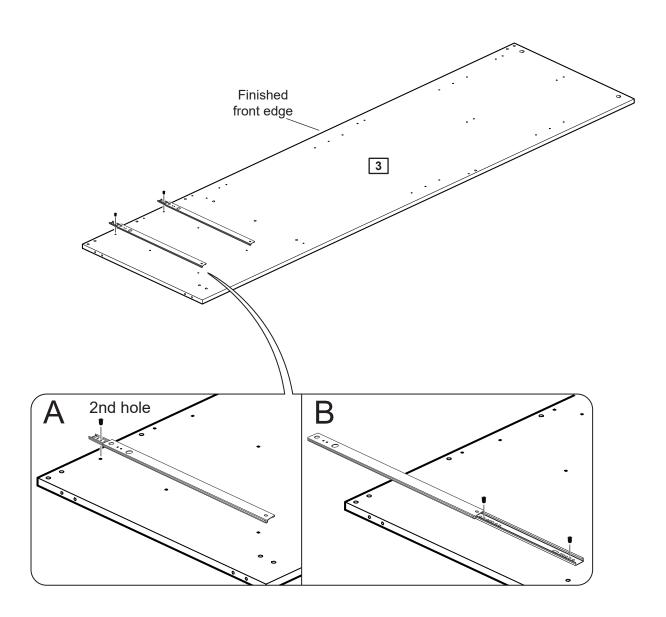


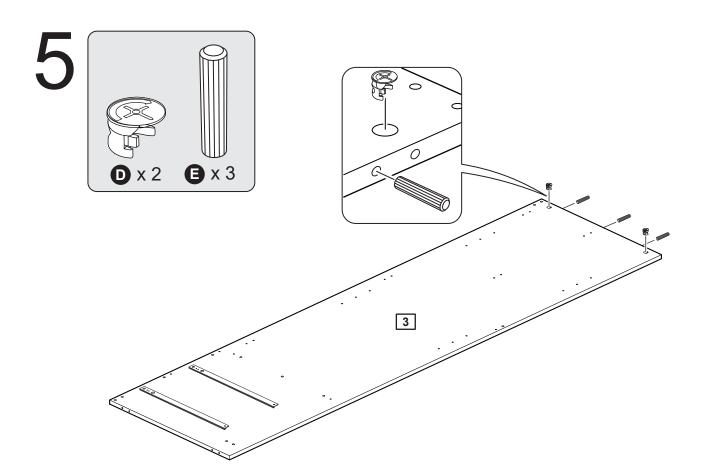


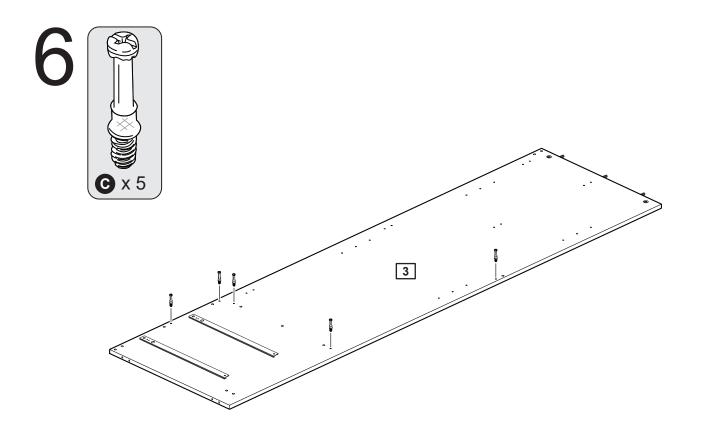


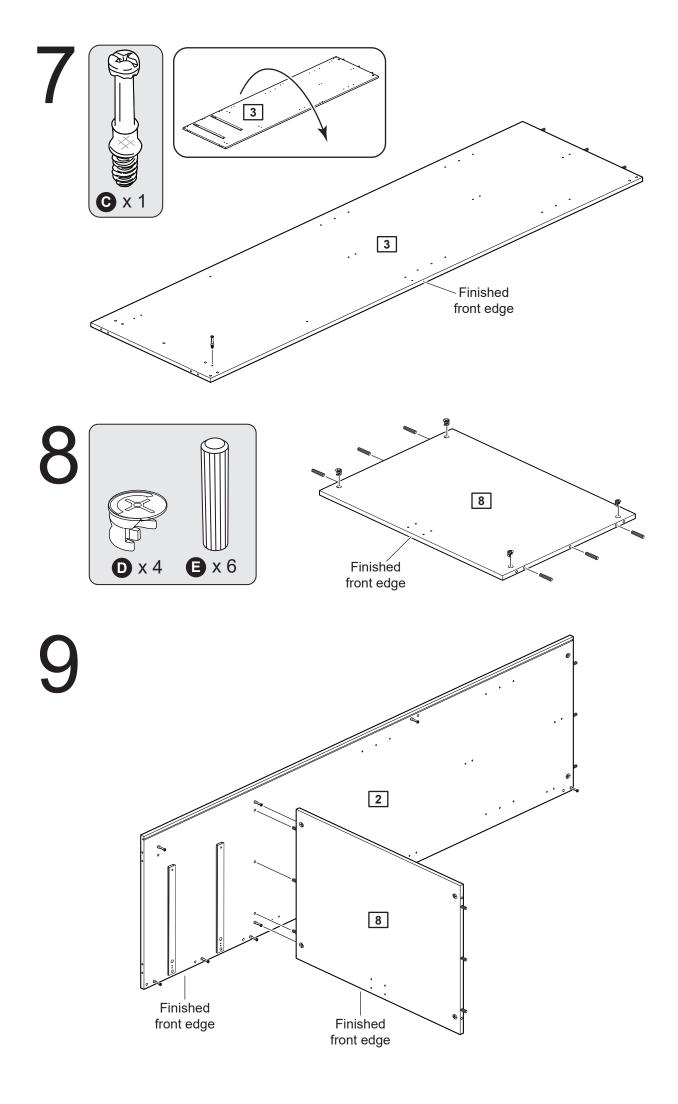

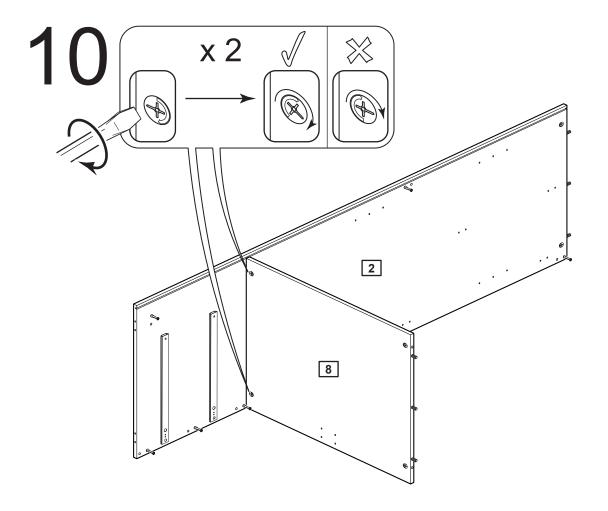


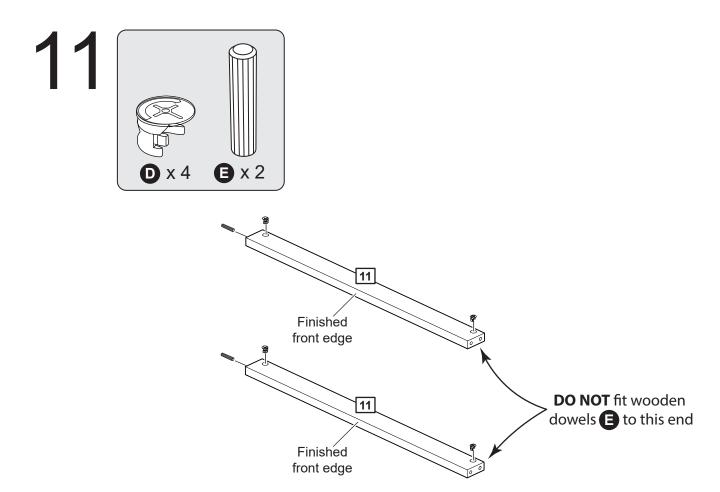


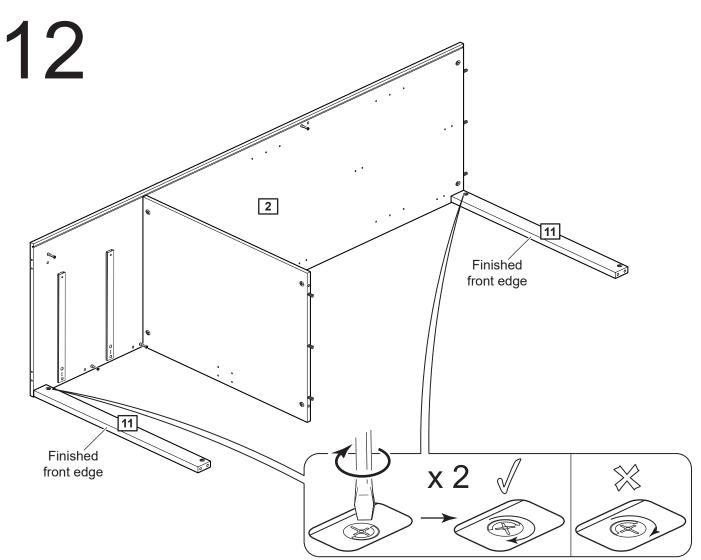


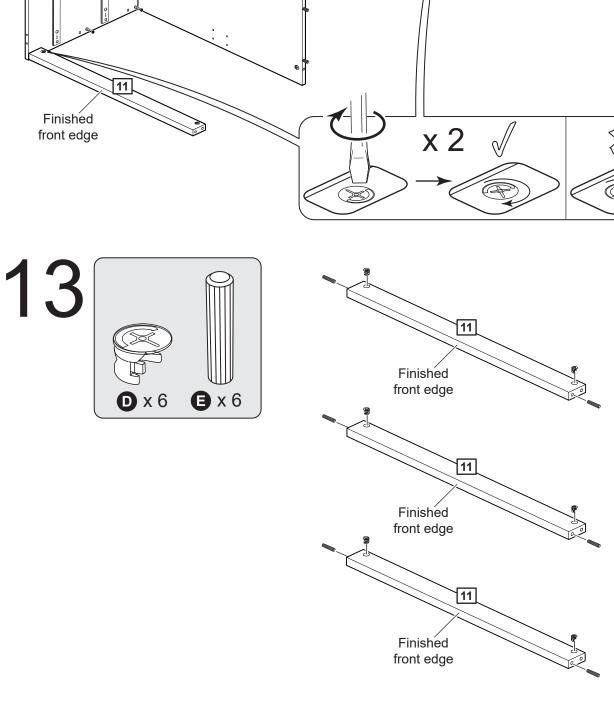



# 14前前

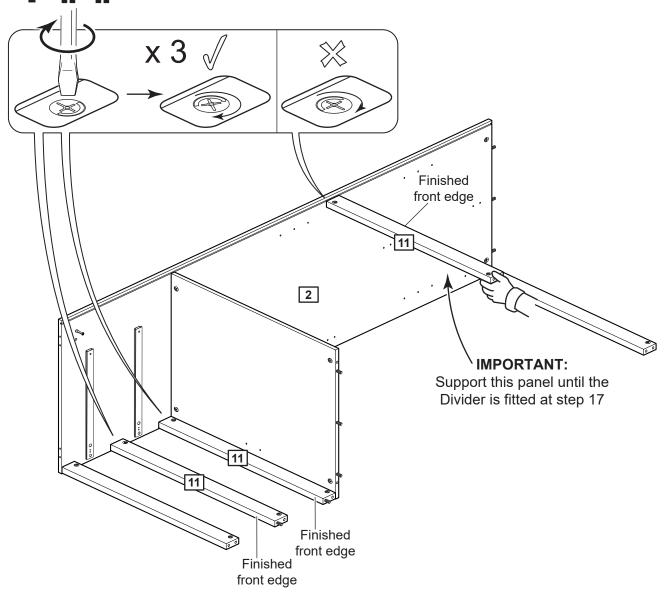


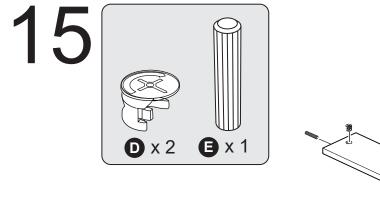


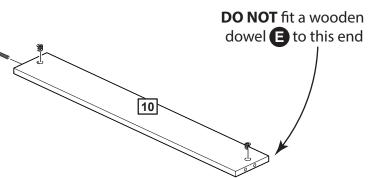


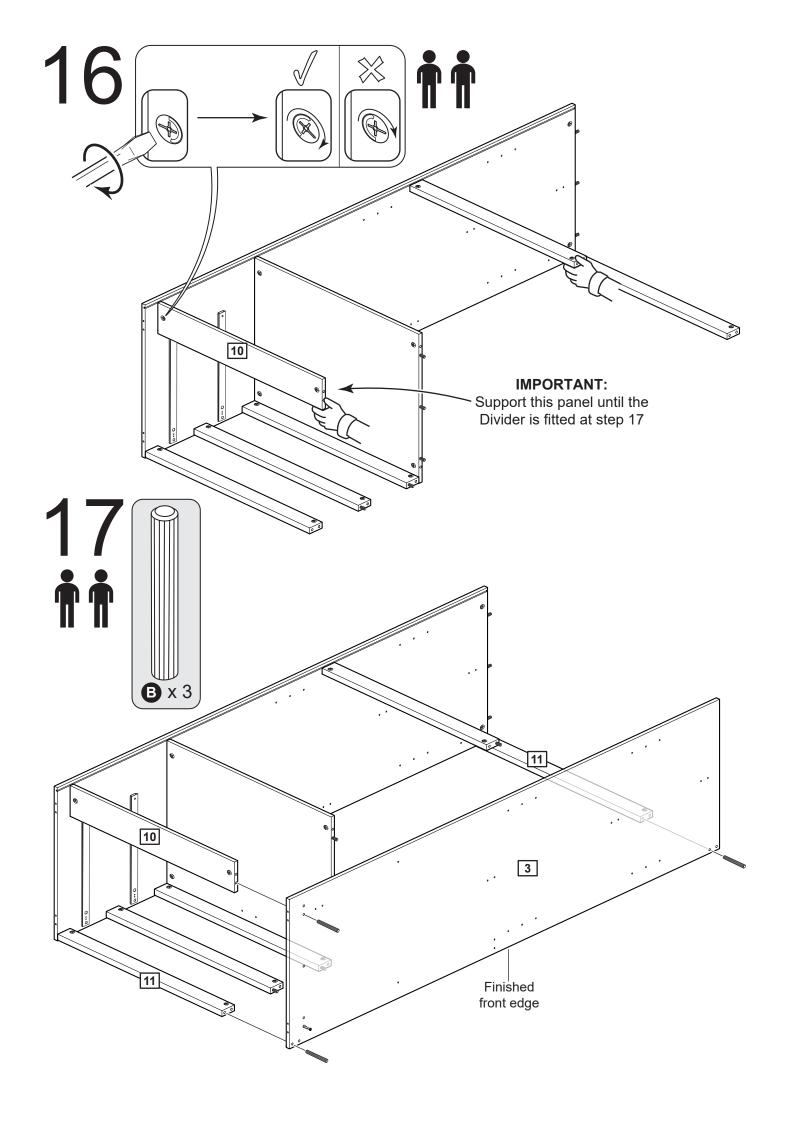


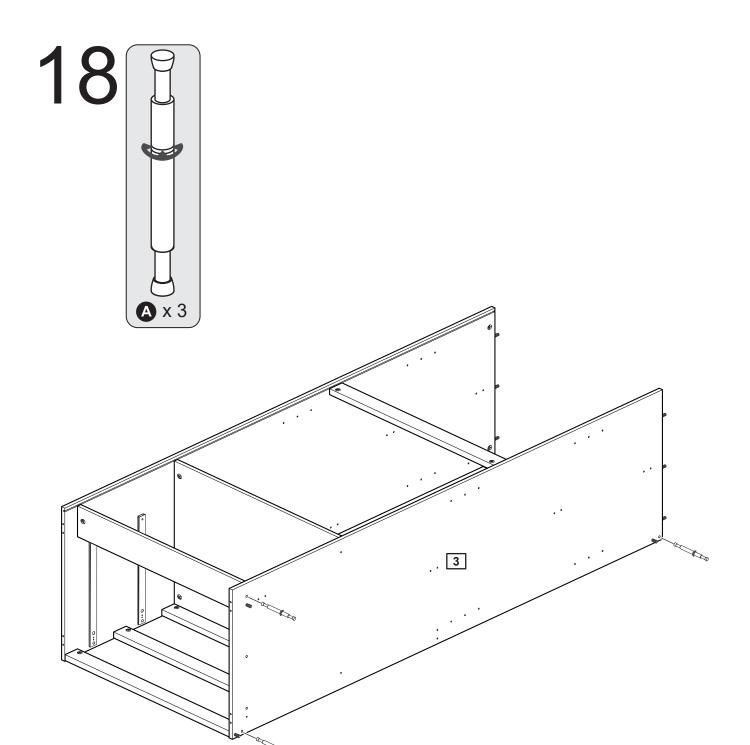


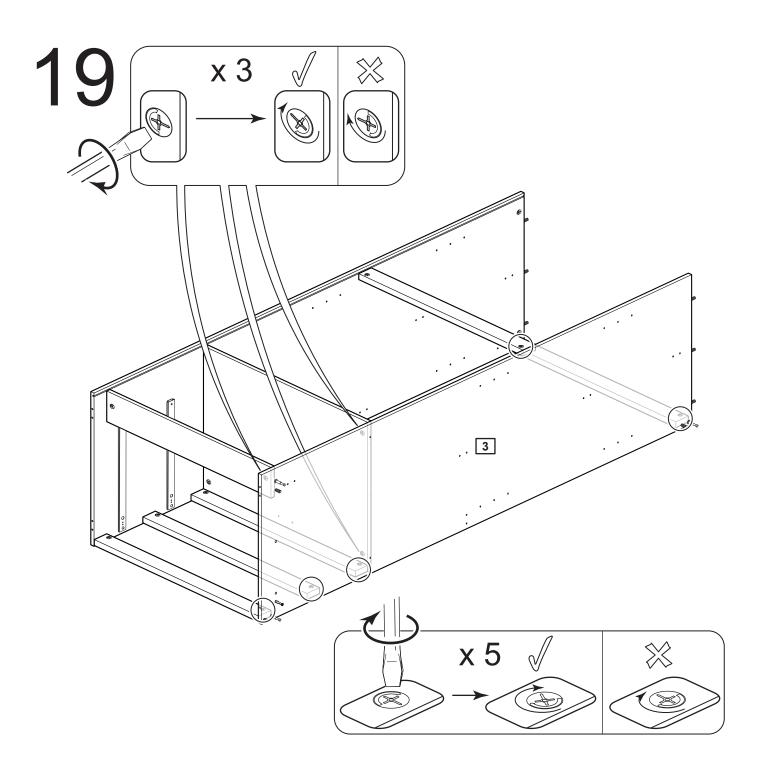


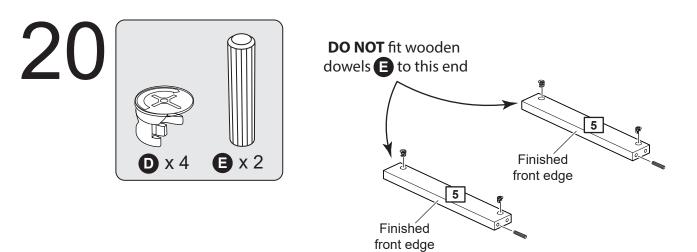

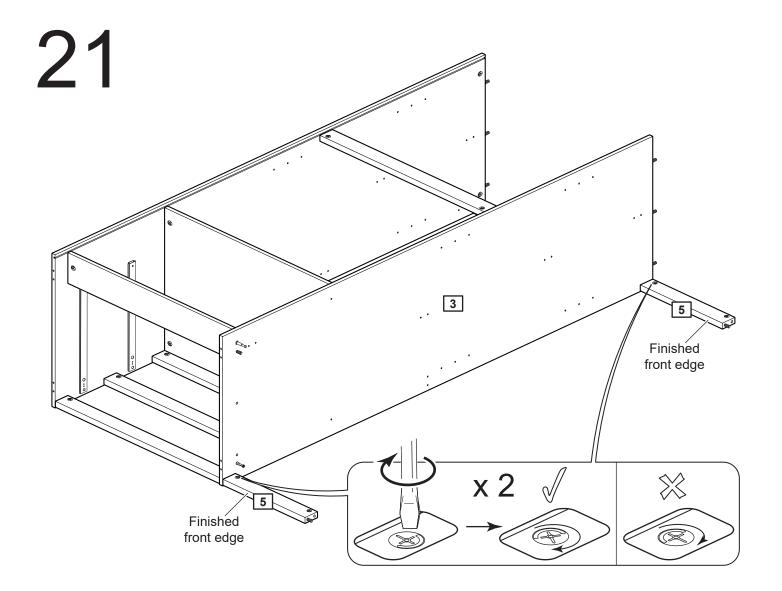


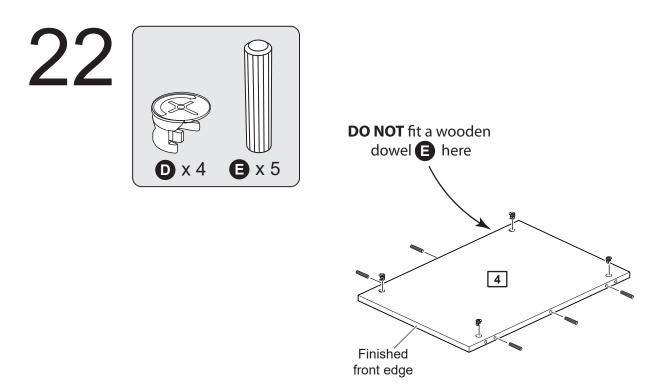


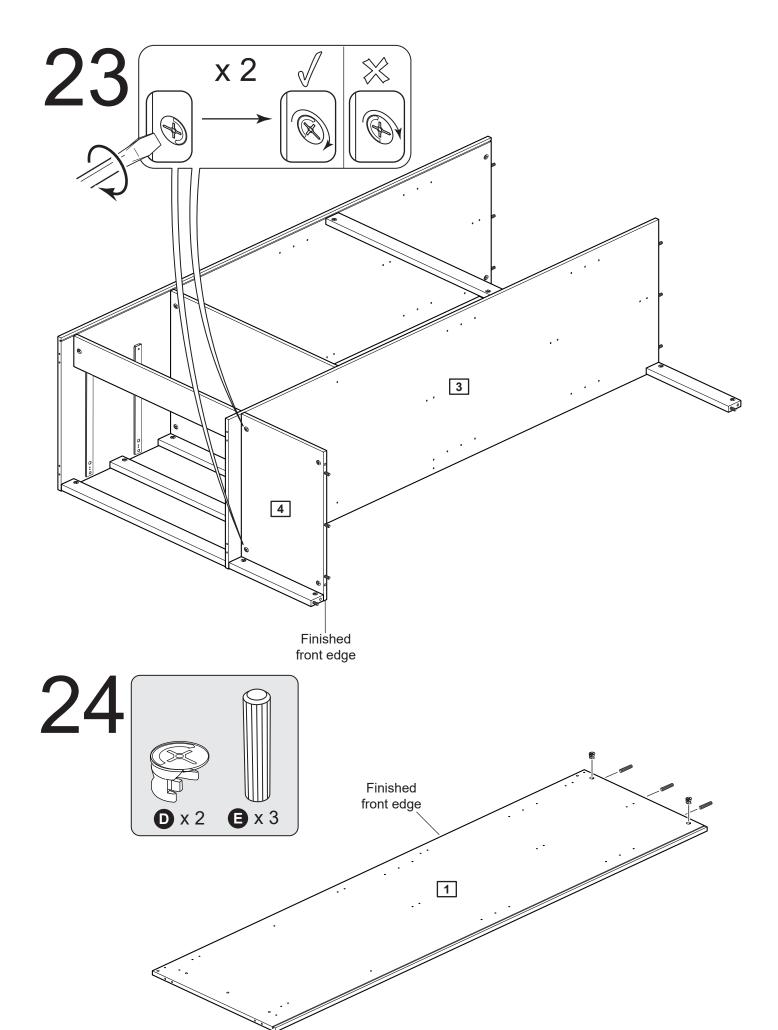

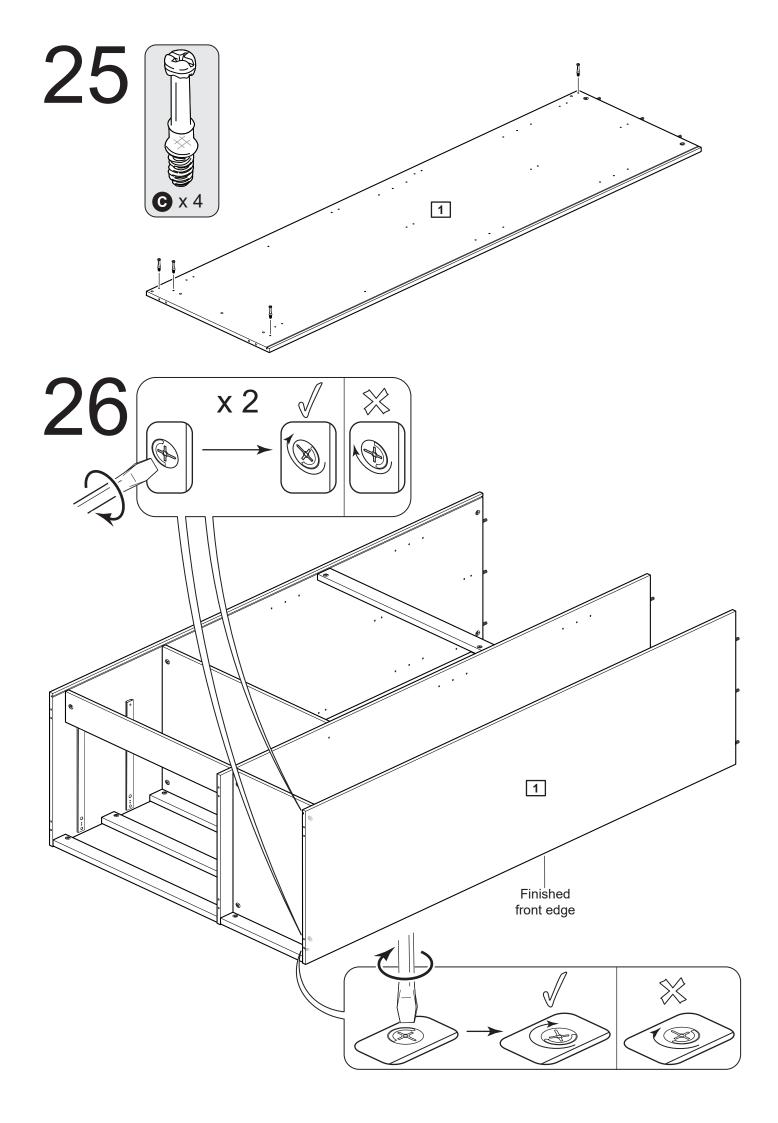



To make it easier to fit the Top panel, carefully raise the assembly using packaging, wood, books etc.

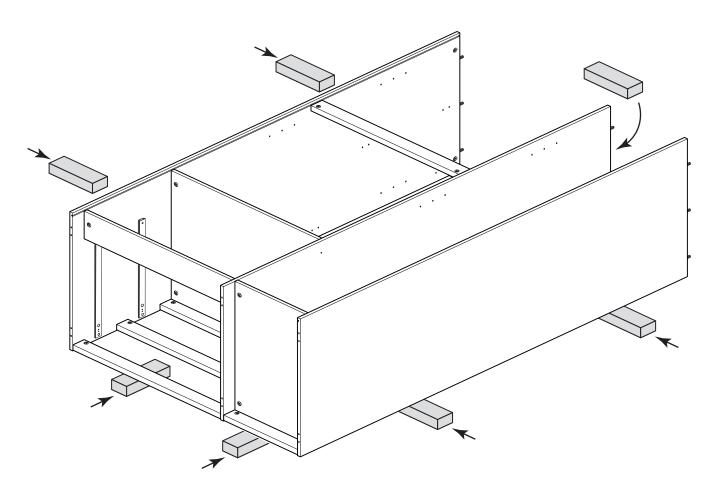

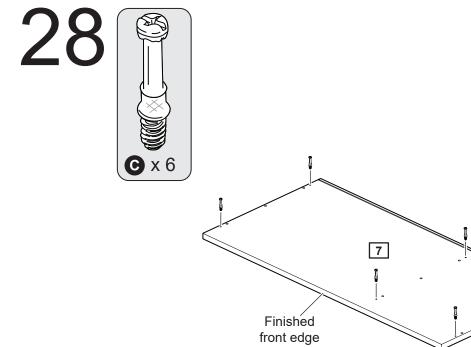


# Squaring a Robe & Fitting Back Panel www.youtube.com/watch?v=udEKmXmPEW0

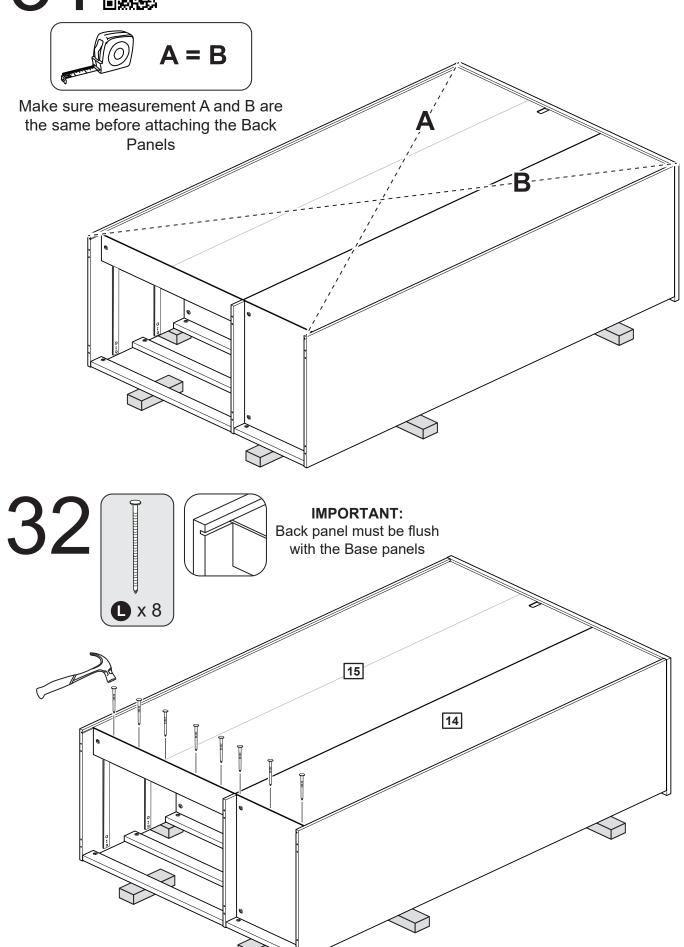

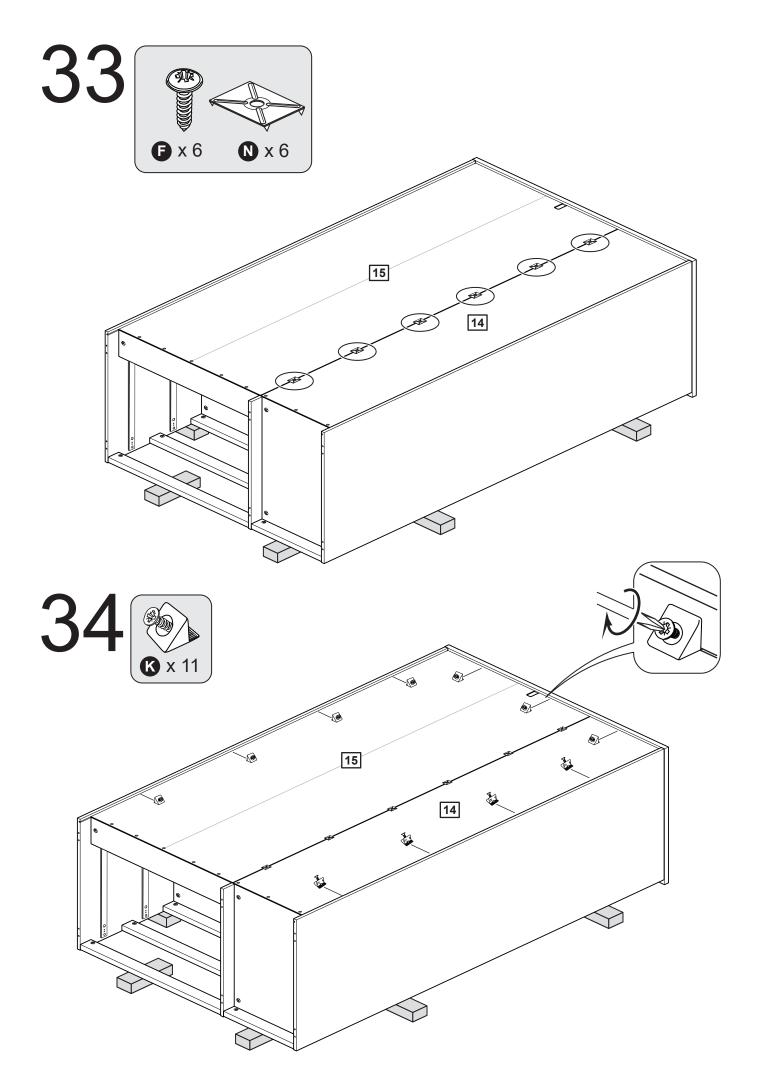

# 35 **P** x 6 'Tap'



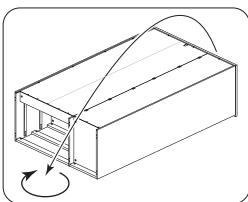

Carefully stand the unit up and push it up against the wall.

Loosely fit the 1st screw through the brackets into the top panel.

Slide the brackets against the wall and mark the slot at the back of the brackets for drilling into the wall.

Swivel the brackets away from the wall and drill the wall using a suitable drill-bit and fit your wall fixings (wall fixings are not supplied as they will need to suit the wall type).

Swivel the brackets back and fix them to the wall.

Fit the 2nd screw into top panel and tighten both screws from the kits.


Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

### **WARNING!**

In order to prevent overturning this product must be used with the 2 wall attachment devices provided



See the next section for a guide to wall mounting and fixings

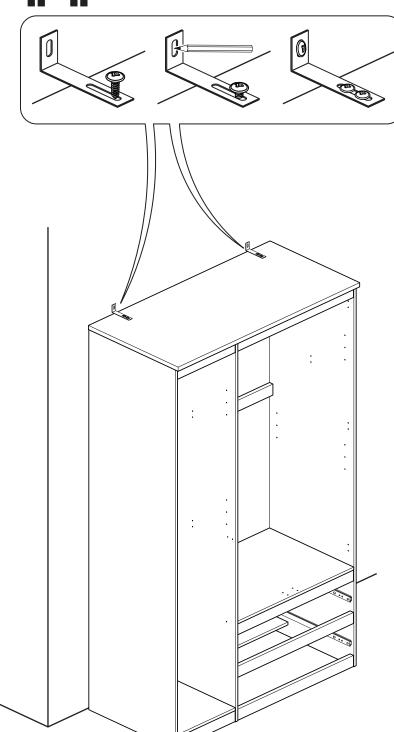

## A Guide to Wall Mounting & Fixings

#### Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
#### Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

#### Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

#### No.1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

#### No.2 "Plasterboard" wall plug

 


For use when attaching light loads on to plasterboard partitions.

#### No.3 "Cavity Fixing" wall plug

 


For use with plasterboard partitions or hollow wooden doors.

## No.4 "Cavity Fixing-Heavy Duty" wall plug

 


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

#### No.5 "Hammer Fixing" wall plug

 

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

#### No.6 "Shield Anchor" wall plug Heavy loads

 


For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.





Safety: Always check the fitting and location to ensure your safety in and around the home.


Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

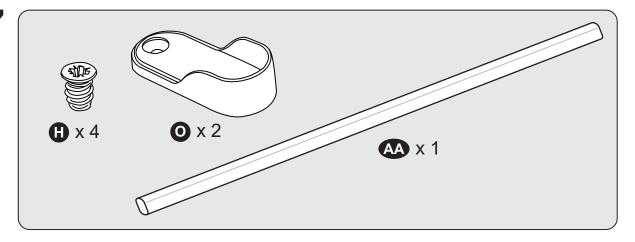


Choose the position for the long hanging rail, and fit to suit.

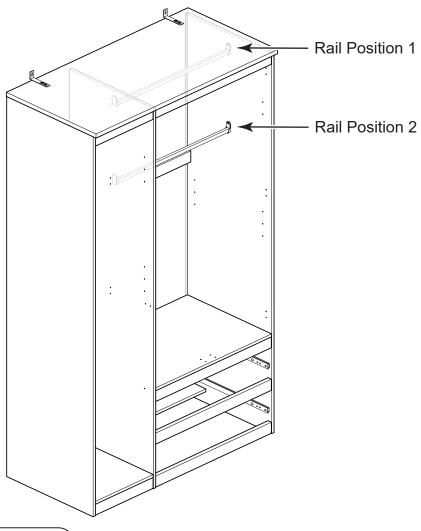

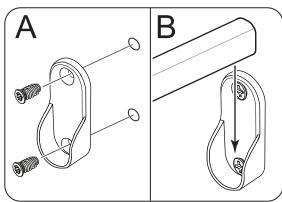

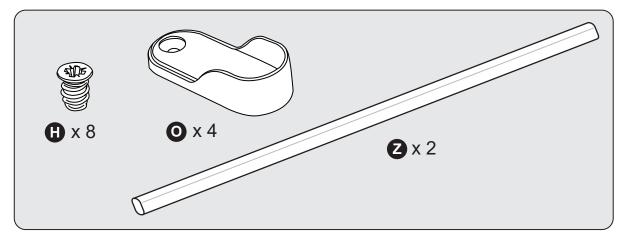

Choose how many short hanging rails you wish to fit, and the position for each.

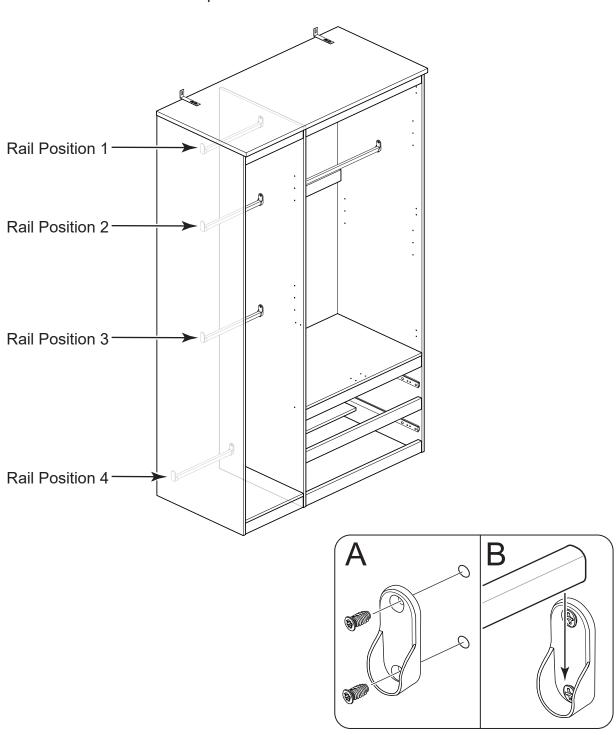



Choose the position for the large shelf to be fitted, and screw in shelf studs to suit.

Shelf Position 2


Shelf Position 2


Finished front edge


40




Choose the position for the small shelf to be fitted, and screw in shelf studs to suit.

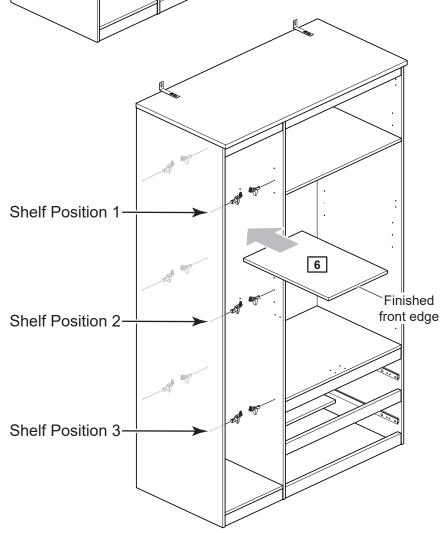

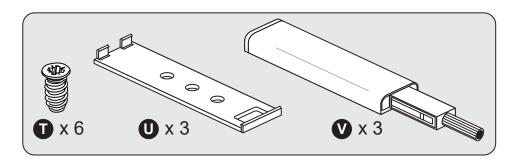


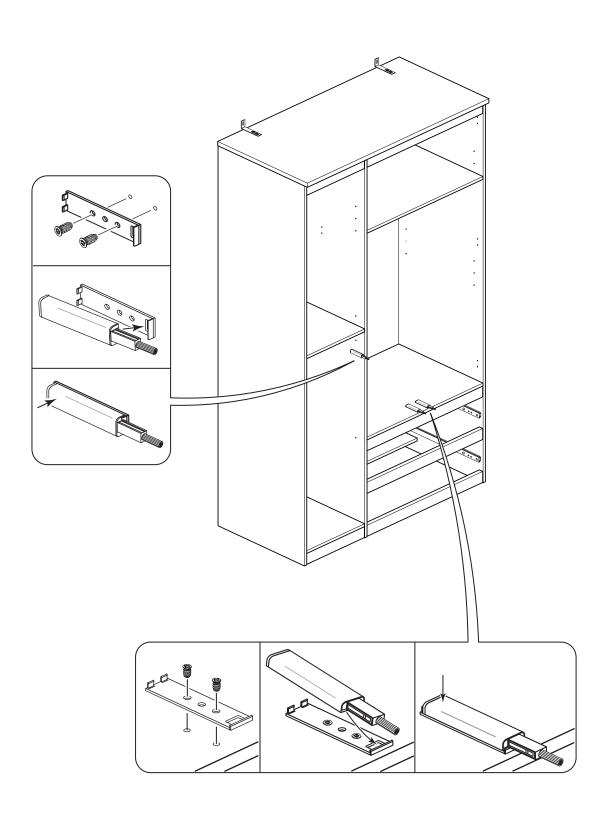

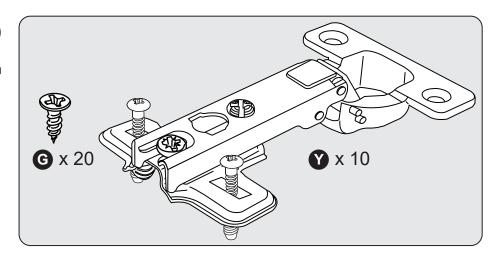



**Pre-mounted Hinge Fitting & Adjustment**https://www.youtube.com/watch?v=b4NeCGnpjP8

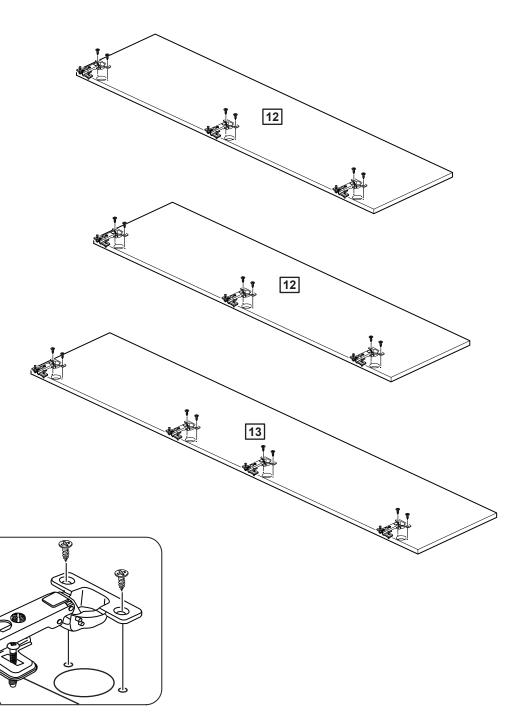





#### **Pre-mounted Hinge Fitting & Adjustment**


https://www.youtube.com/watch?v=b4NeCGnpjP8



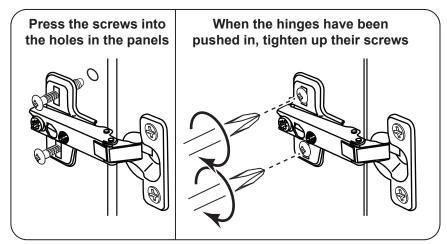

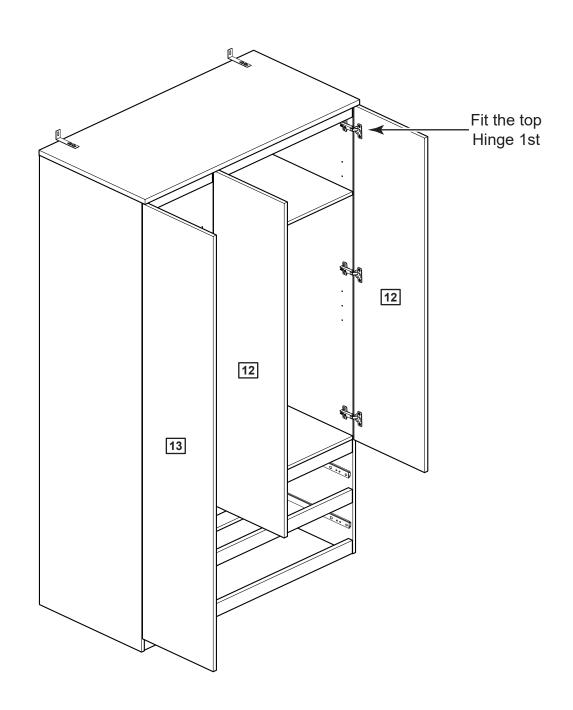

44 ( x 6

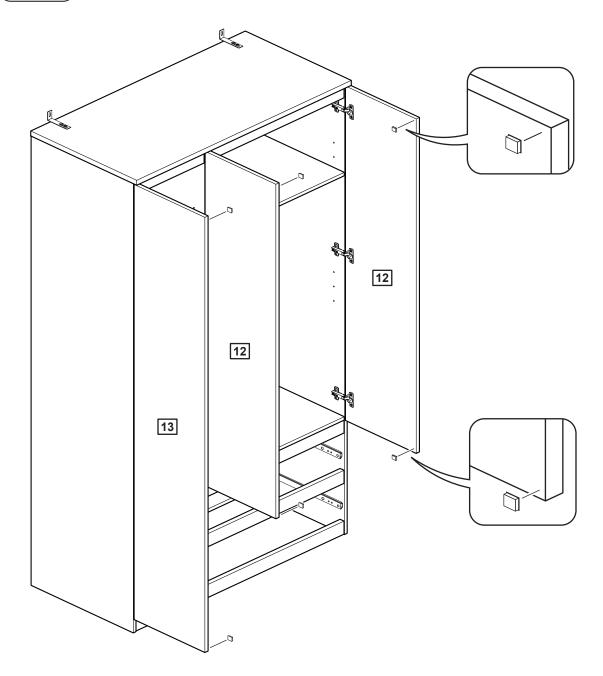

## Pre-mounted Hinge Fitting & Adjustment https://www.youtube.com/watch?v=b4NeCGnpjP8



#### Adjust the doors if needed

**a:** Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.

Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

**b:** Height adjustment. Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.


**C:** Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required.

Retighten screw B.

**d:** Sideways adjustment.
To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

**d:** Door Push adjustment. Finely adjust the Door Push to suit your requirements. Just a 1/4 of a turn can make a difference.

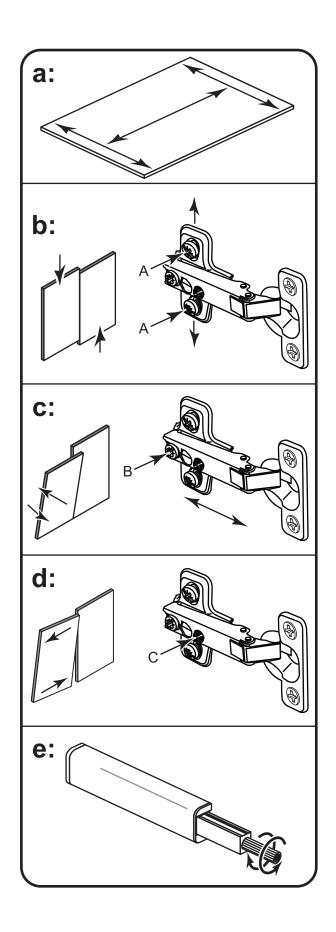


## **Drawer Assembly**





#### **Drawer Assembly**


www.youtube.com/watch?v=InNBV\_uuMmo

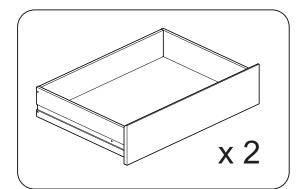





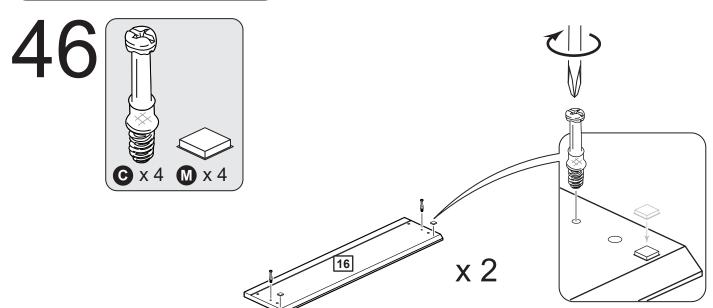


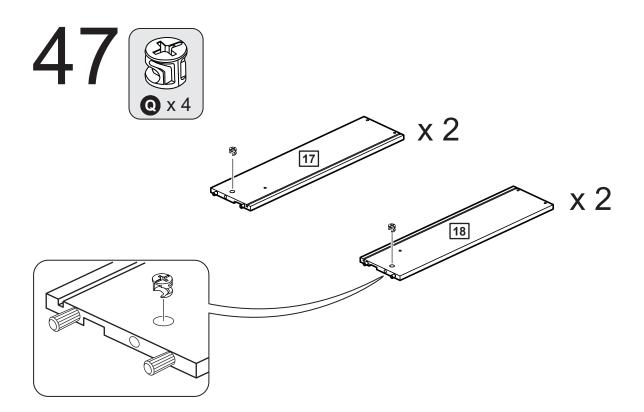

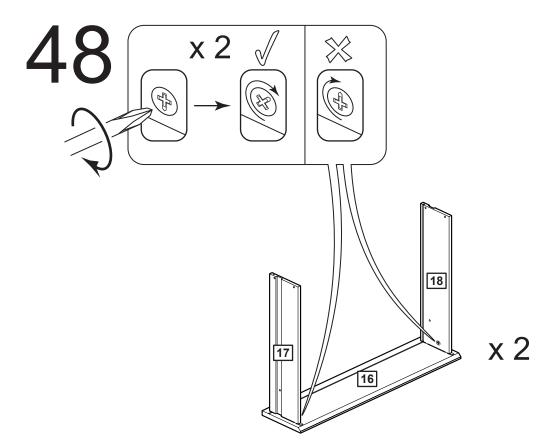

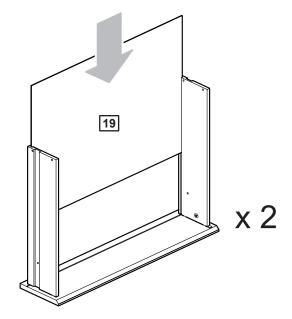

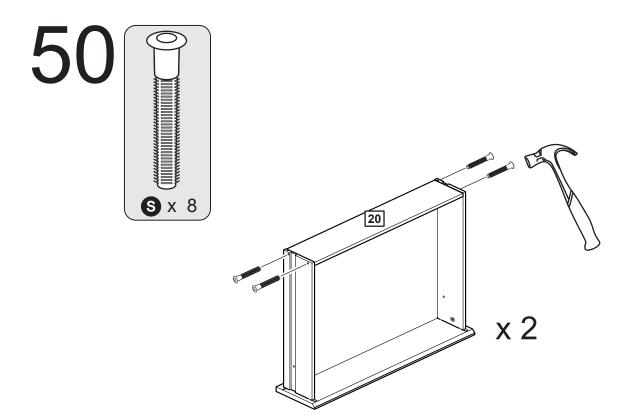


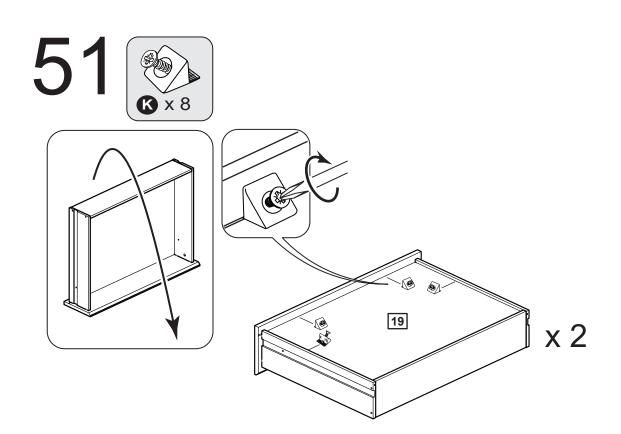





## **Fitting Ball Bearing Runners**www.youtube.com/watch?v=yG4xtiJJeSg

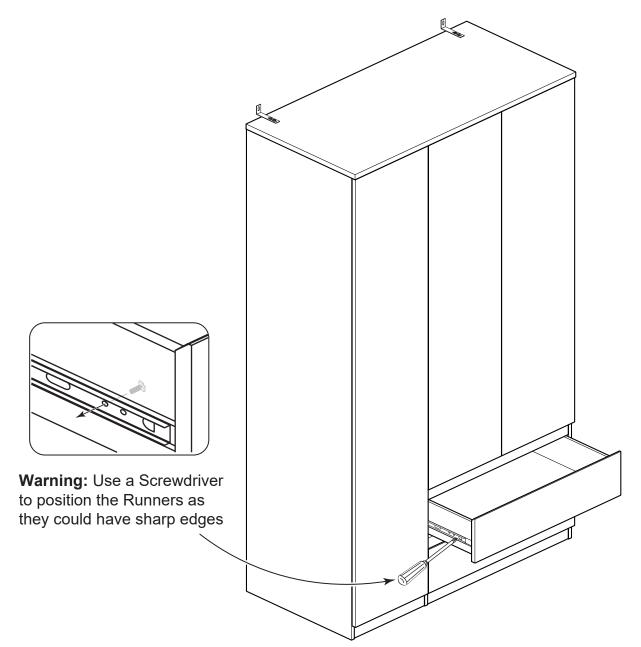


Working from the Bottom Drawer up, slide both Runners forward and locate the Drawer Sides between them, lining up the holes in the Drawer Sides with the 2nd 'threaded' holes in the Runners.

Working from the inside of the Drawer, insert 2 Screws through the Drawer Sides and out into the 2nd threaded hole in the Runner.

Note: Do not overtighten the Screws.

If they catch on the runner you may need to loosen them slightly.

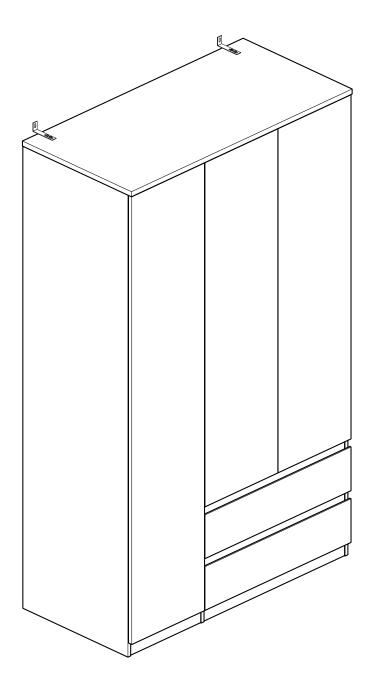

## **Assembly is complete**

Please remove any protective film from panel edges and surfaces