

# Modular TV Unit

Assembly Instructions - Please keep for future reference

609/2256

609/2263

609/2270


609/2287

609/2294

609/3516

609/3602

327/9869

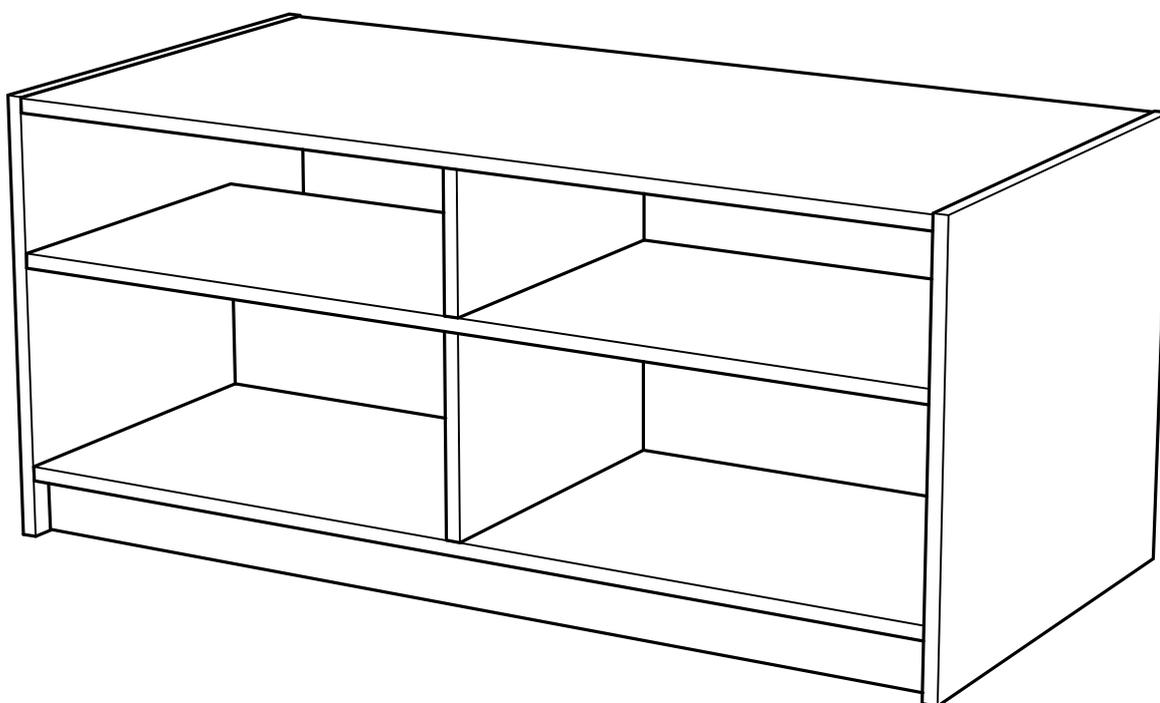

## Dimensions

Width - 103cm

Depth - 50cm

Height - 46cm

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**  
**Argos = 0345 6400800**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.


# Components - Panels

If you have damaged or missing components, call the  
Customer Helpline: Argos = 0345 6400800


Please check you have all the panels listed below

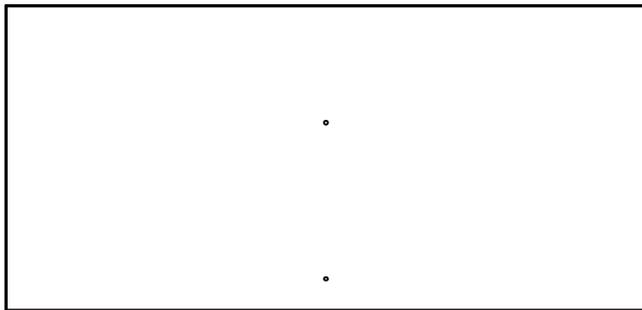


**1** Top panel (99.8 x 49.8 cm)

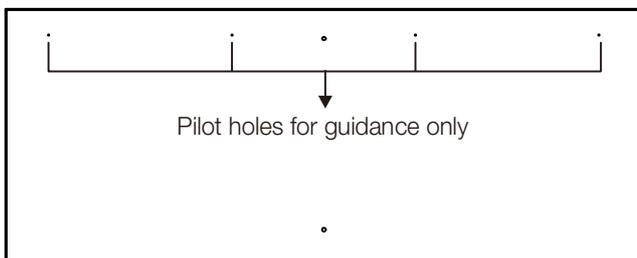


**2** Bottom panel (99.8 x 35.9cm)

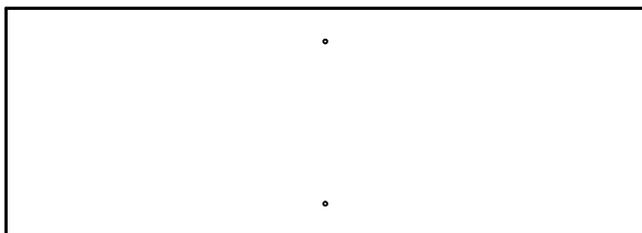


**3** Middle shelf (99.8 x 35.9cm)

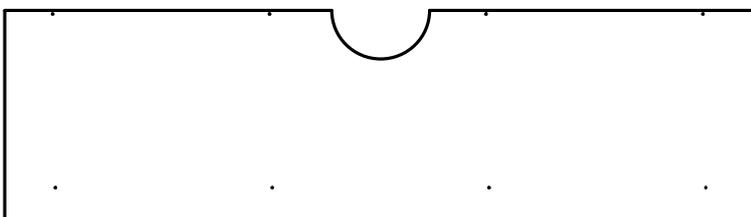

**4** Back panel (99.8 x 29.5cm)

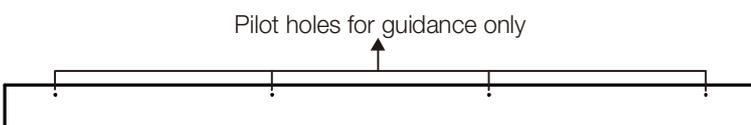

**5** Front panel (99.8 x 5.9cm)

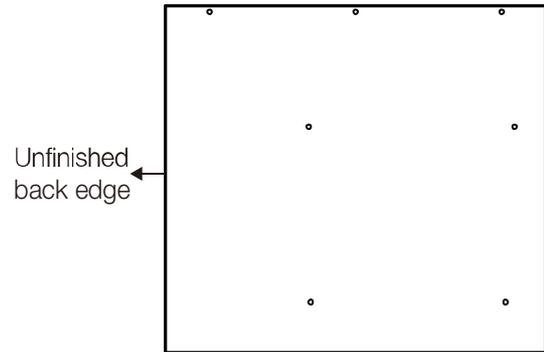

**6** Side panel x 2 (49.9 x 46cm)



**7** Lower central panel (35.9 x 20.9cm)




**8** Upper central panel (35.9 x 14.5cm)

# Components - Fittings

 Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

|   |  |  |
|---|--|--|
| <b>A</b> <br>Plastic support x 4 | <b>B</b> <br>14mm Screw x 8 | <b>C</b> <br>50mm Dowel x 2   |
| <b>D</b> <br>50mm Screw x 16     | <b>E</b> <br>30mm Dowel x 2 | <b>F</b> <br>Screw cover x 14 |
| <b>G</b> <br>20mm Screw x 8      |  |  |


## Tools required



Phillips screwdriver  
(medium & large)



7mm Suitable drill bit  
(for use with wall plug)

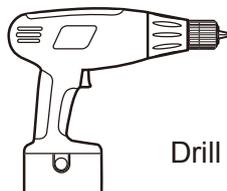

Drill



Small  
hammer



Ruler/tape  
measure



Eye protection  
(when using a  
hammer or glue)

## Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (30mm screw shown).


# Assembly Instructions

## Step 1

### Attaching front panel


**a:** Use Screws **B** to fix the Plastic supports **A** onto the Front panel **5**.

**a:**

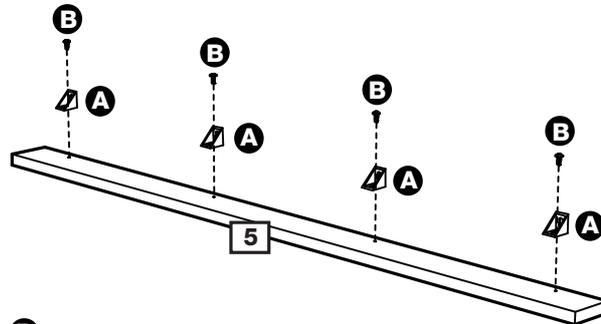

**b:** Position the Front panel **5** onto the Bottom panel **2** using Screws **B**.

**b:**

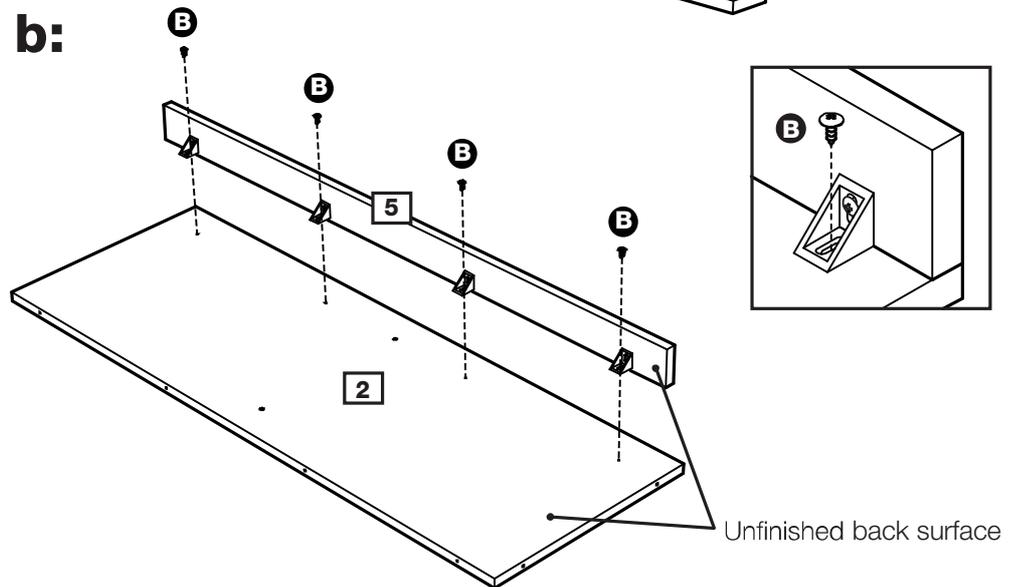


## Step 2

### Attaching middle shelf

Use Dowels **E** into the Upper central panel **8**.

Position the Upper central panel **8** and Lower central panel **7** onto the Middle shelf **3** using Dowels **C**.

**Two persons assembly is required.**

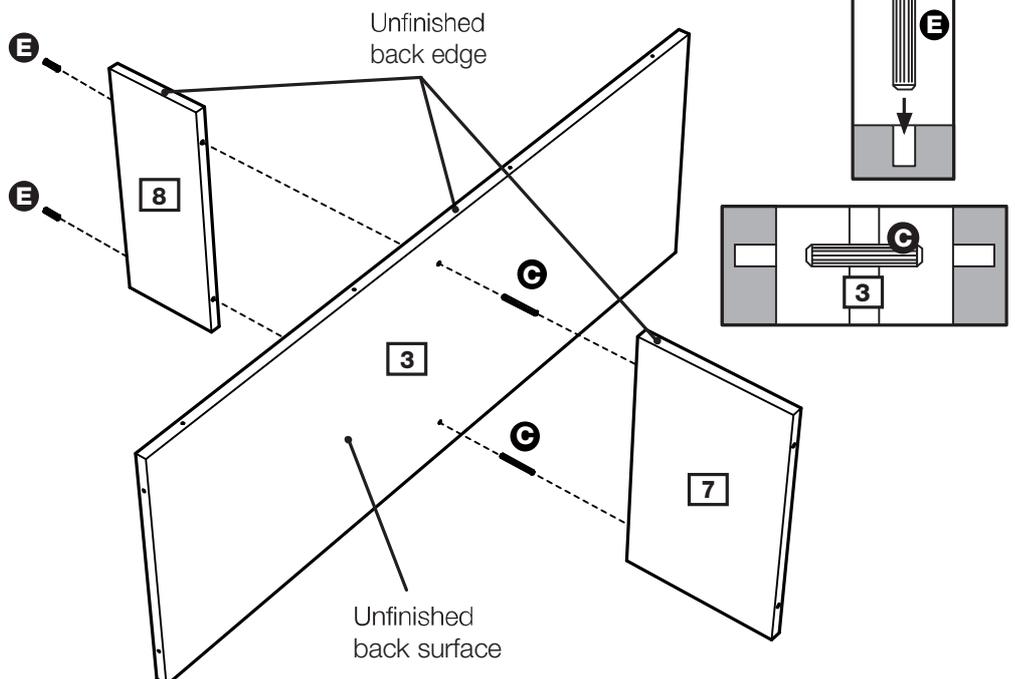


# Assembly Instructions

## Step 3

### Attaching bottom panel

Position the Bottom panel **2** onto the Lower central panel **7** using Screws **D**.

**Two persons assembly is required.**

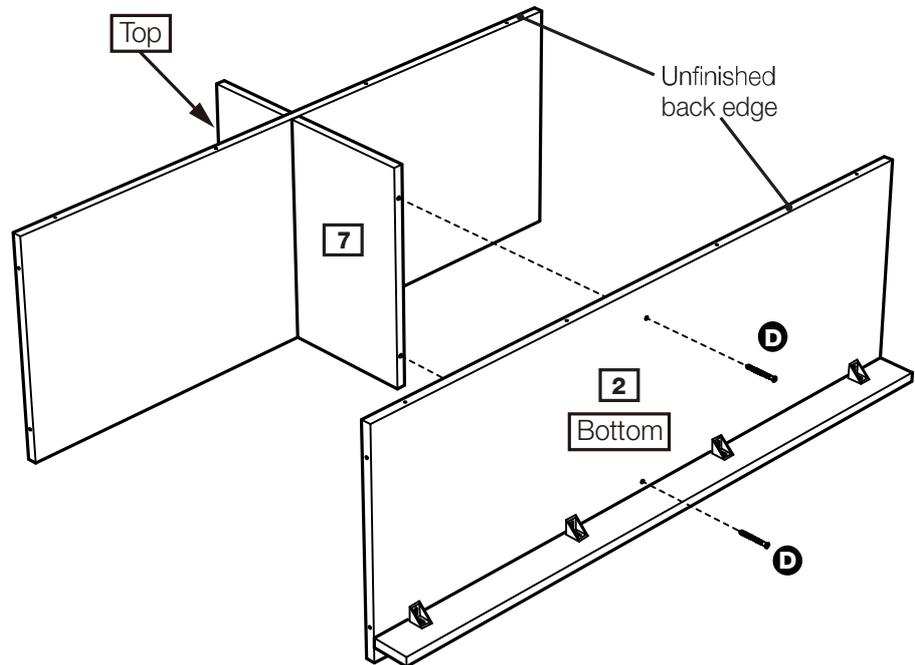


## Step 4

### Attaching side panels

Position the Side panels **6** onto the unit using Screws **D**.

Use Screw covers **F** to cover the screw heads.

**Two persons assembly is required.**

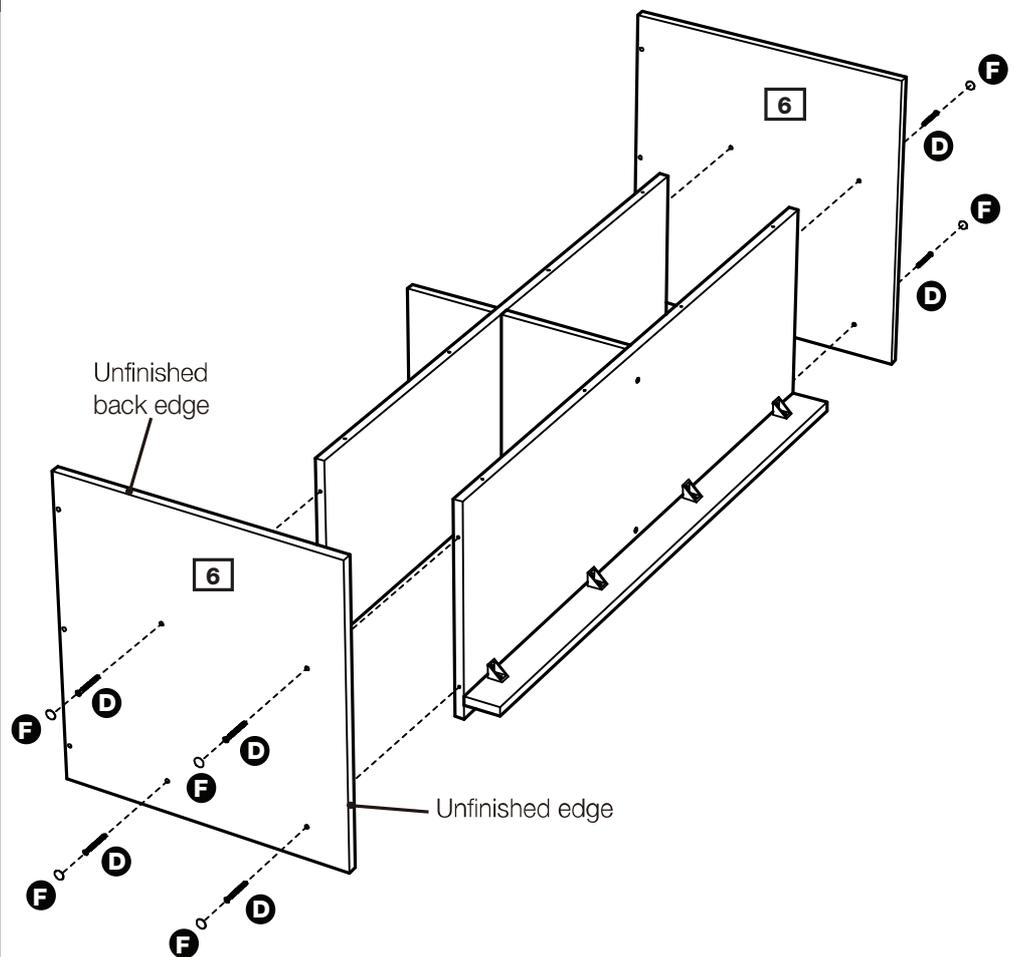

# Assembly Instructions

## Step 5

### Attaching top panel

**a:** With help, carefully stand TV unit upright.




**Warning:**

The TV unit is heavy.

Lift with care.

Position the Top panel **1** onto the unit.


**a:**

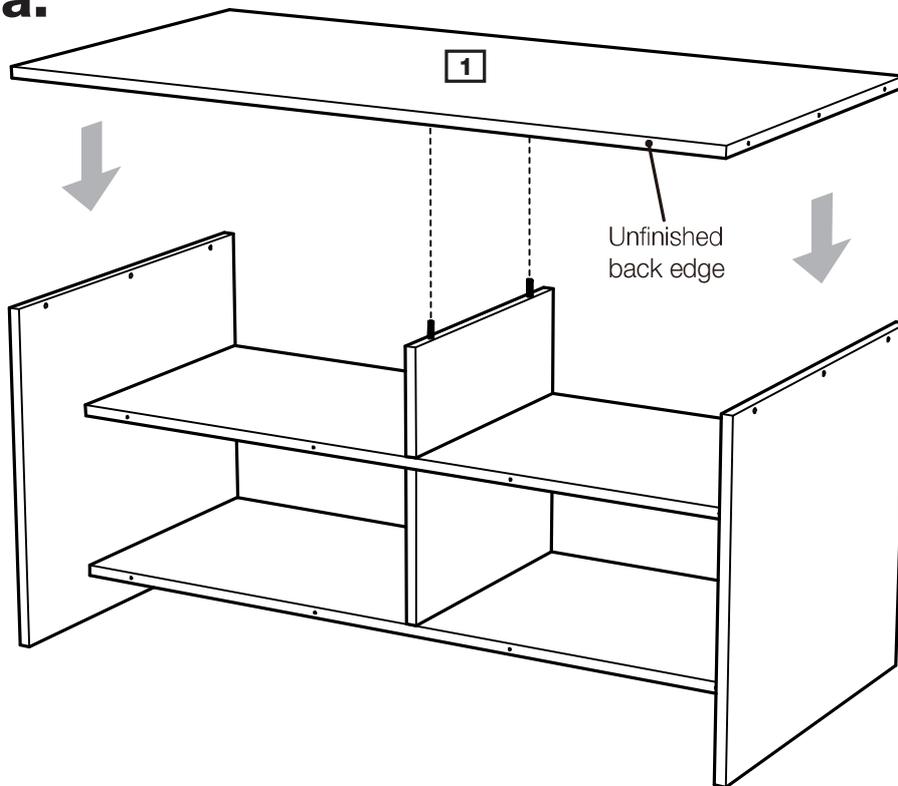

**b:** Use Screws **D** to fix Top panel **1** onto the unit.

Use Screw covers **F** to cover the screw heads.

**b:**

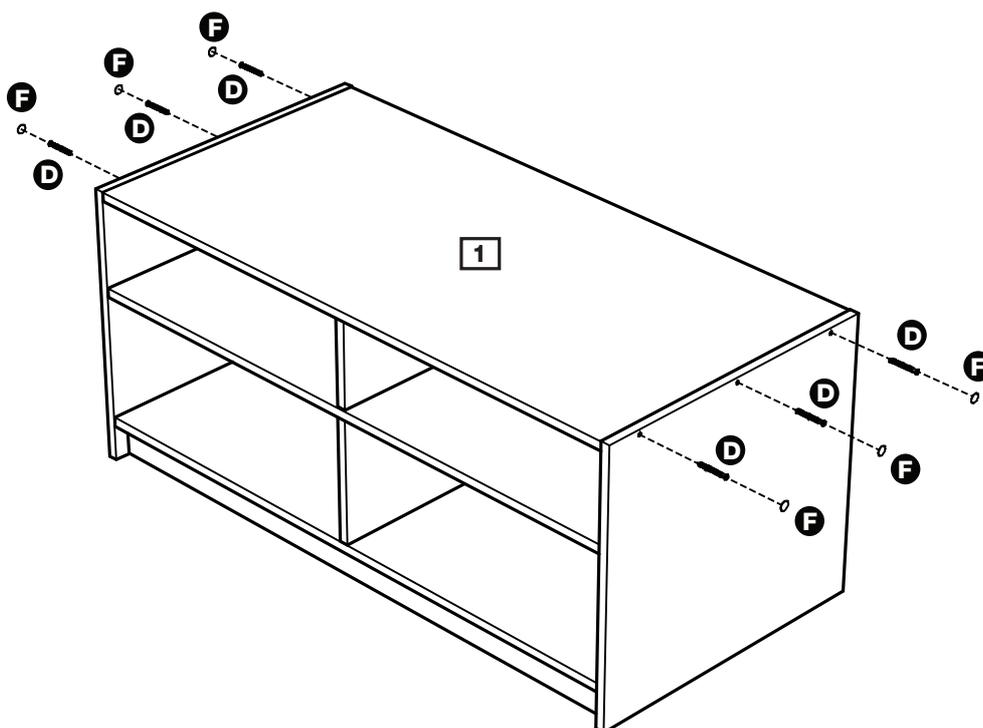


# Assembly Instructions

## Step 6

### Fixing back panel

Use Screws **G** to fix the Back panel **4** onto the unit.

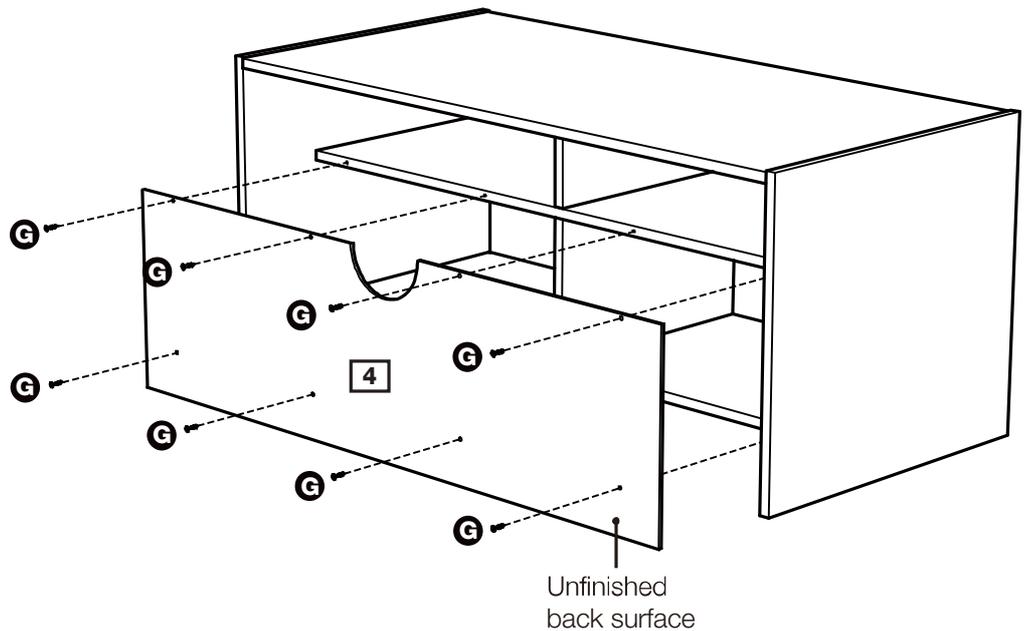


## Step 7

### Finishing the unit

**Note:** It would be useful to ask someone to help you at the stage.

With help, place the unit in the intended position.

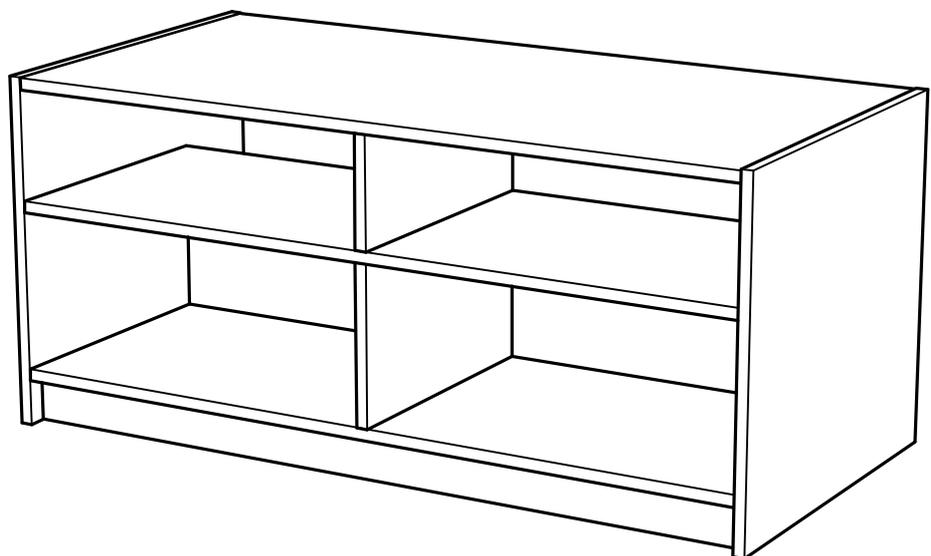

**Assembly is complete.**

If you need help or have damaged or missing parts, call the **Customer Helpline:**  
**Argos = 0345 6400800**