


MEDIUM STEEL CHIMENEA


Assembly Instructions - Please keep for future reference

3344093

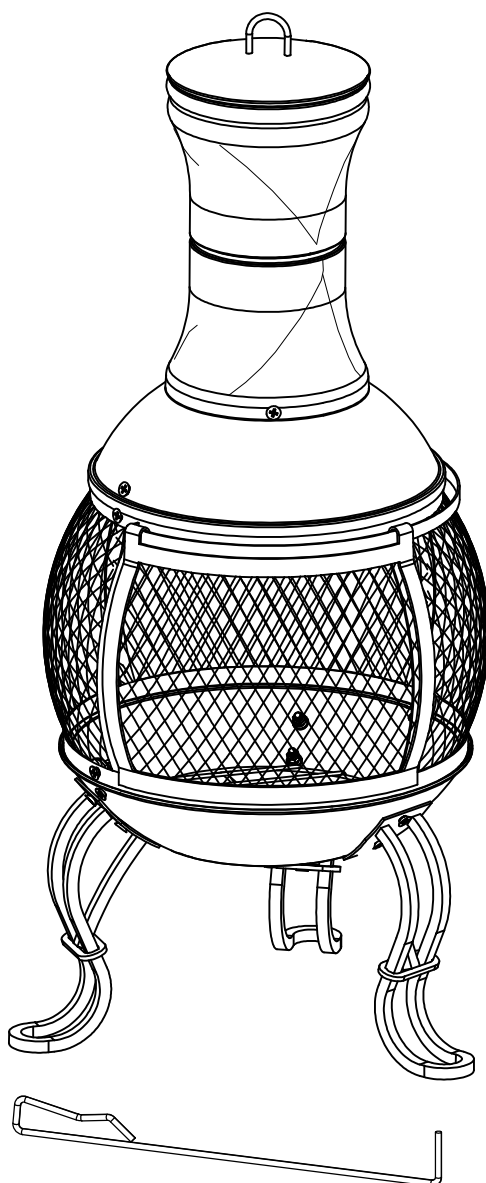

Dimensions

Width - 39 cm
Depth - 39 cm
Height - 89 cm

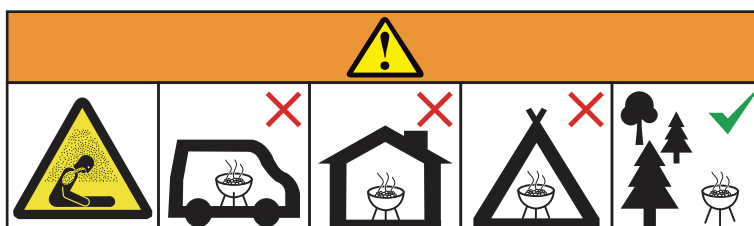

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Before you start

- Please read these instructions fully before assembling or using your chimenea. Failure to follow these instructions could result in serious bodily injury, and/or property loss.
- We suggest you spend some time reading this guide before following the simple step-by-step assembly instructions.
- Before you start, make sure you have the correct tools. The tools required for building this chimenea are a cross head screw driver and an adjustable spanner.
- Do not discard any of the packaging until you have checked that you have all parts and fittings listed. When discarding packaging take care and consideration for others and the environment.
- When assembling this chimenea, be aware of the safety of yourself and others.
- Assemble this chimenea on a clean, flat and level surface e.g. the cardboard packaging.
- If after reading these instructions you are unsure of how to safely assemble or use your Chimenea, please refrain from doing so and contact our customer services department for further assistance.



Warnings and safety advice

Important: Please read these instructions fully before starting assembly

- Do not use indoors.
- This chimenea is for outdoor use only, and should NOT be used in a building, garage or any other fully or partially enclosed area.
- Do not use in or near tents.
- Do not use as a refuse incinerator, it is only intended for use with charcoal or timber.
- Avoid using soft wood such as pine or cedar as they are likely to throw sparks.
- Never position on a surface that is liable to be damaged by heat.
- Do not use in high winds.
- Position on a smooth flat surface.
- Do not use the chimenea unless it is completely assembled, and all parts securely fastened.

CARELESS USE OF CHIMENEAS CAUSES FIRE

Do not use in areas which prohibit open fires.

Do not use close to flammable materials, including wooden decking and fences.

Do not use near dry vegetation.

WARNING! This chimenea will become very hot, do not move it during operation.


Do not leave unattended when lit.

Do not use spirit or petrol for lighting or relighting!

Use only firelighter complying to EN1860-3

WARNING! Keep children and pets away.

Read instructions before assembly and use. Keep for future reference.

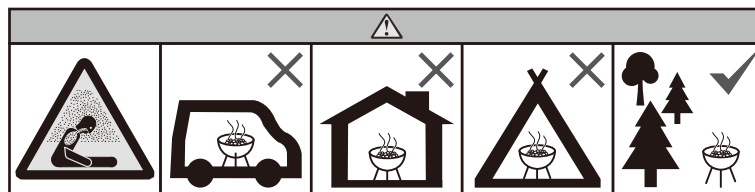

Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon or carbon monoxide poisoning fatality.




Care and use

- This chimenea is for household outdoor use only, not for commercial use.
- Take care when building as exposed edges may be sharp.
- Choose a suitable location before lighting, away from footpaths and high foot traffic areas.
- Allow a minimum of 1 meter from any surfaces or things that may be affected by heat.
- Always used on a flat, firm and level surface.
- Allow to cool completely before moving.
- Ensure chimenea is completely cold before storage.
- Periodically check all bolts are secure and retighten if necessary.

Component - Parts

If you have damaged or missing components, call the **Customer Helpline: 0345 6400800**


Please check you have all the parts listed below

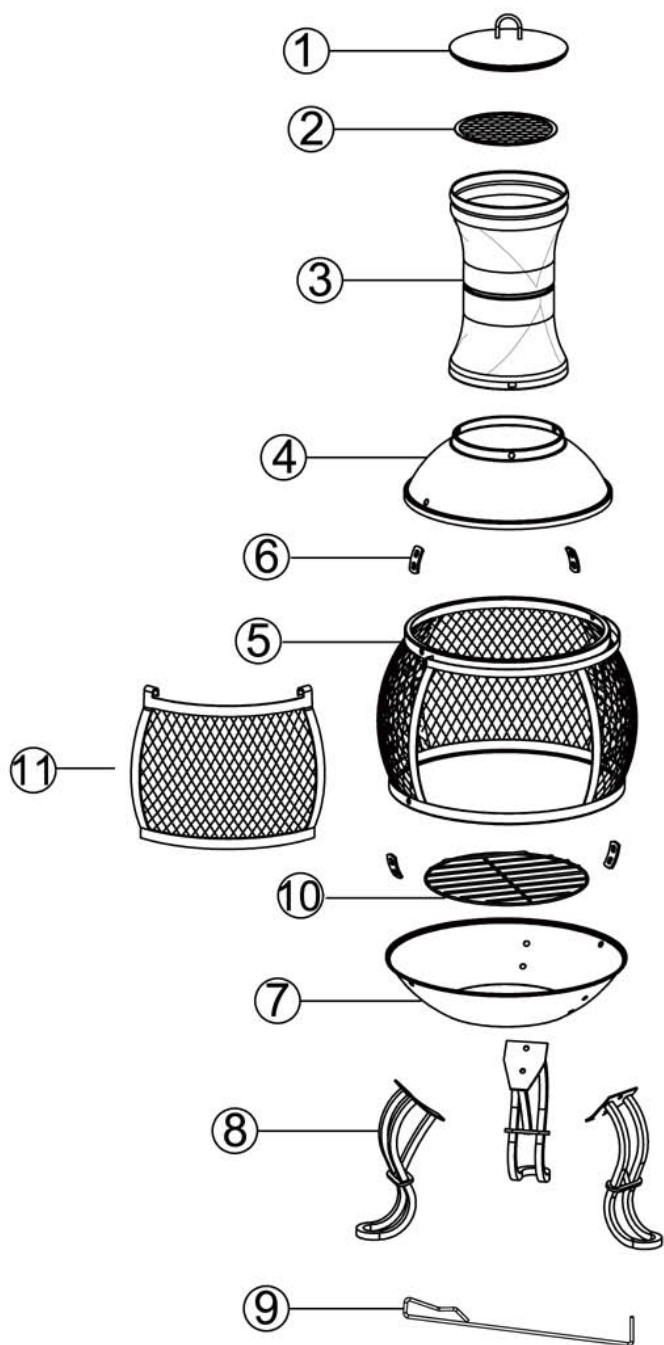

1		1PC
2		1PC
3		1PC
4		1PC
5		1PC
6		4PCS
7		1PC
8		3PCS
9		1PC
10		1PC
11		1PC

A	M6 X 20	14 PCS	D		17 PCS
B	M6 X 30	3 PCS	E	M6 NUT	17 PCS
C		17 PCS			


Ruler- Use this ruler to help correctly identify the screws

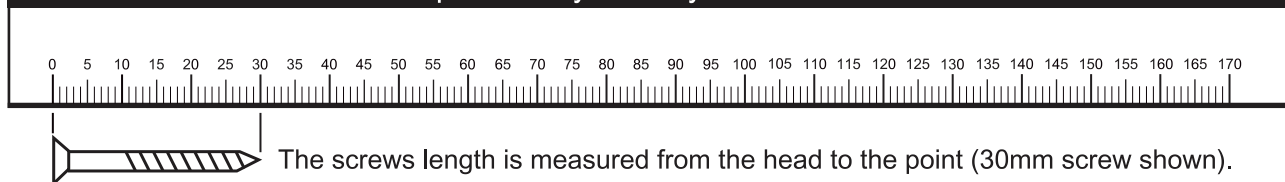

Assembly Instructions

STEP 1 - ATTACHING LEGS


Attach legs (8) to stove bottom (7) using bolts (A), washers (C), lock washers (D) and nuts (E). Tighten loosely.

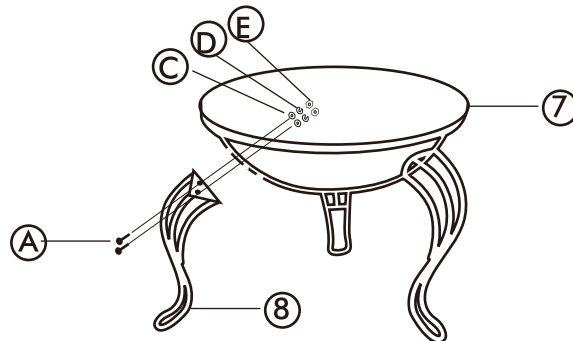

STEP 2 - ASSEMBLY GRATE

Insert grate (10) in the stove bottom (7).


Attach connector plates (6) to stove bottom (7) using bolts (A), washers (C), lock washers (D) and nuts (E). Do not tighten.

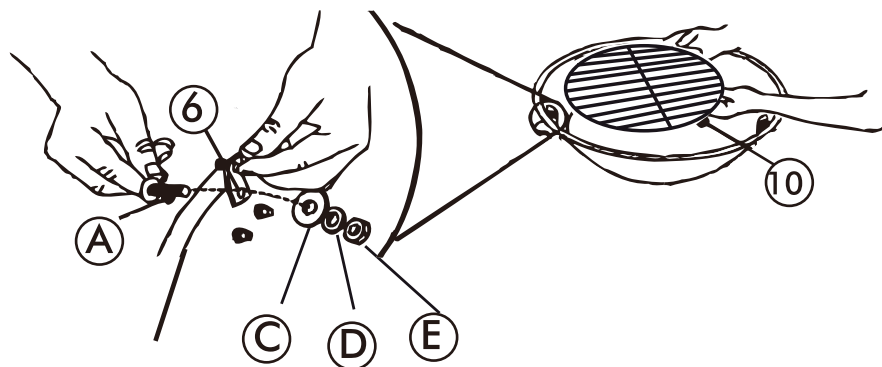

STEP 3 - ASSEMBLY MESH STOVE ASSEMBLY

Install mesh stove assembly (5) on stove bottom assembly from previous.

Align connector plates and fasten using bolts (A), washers (C), lock washers (D) and nut (E). Tighten all the bolts & nuts firmly.

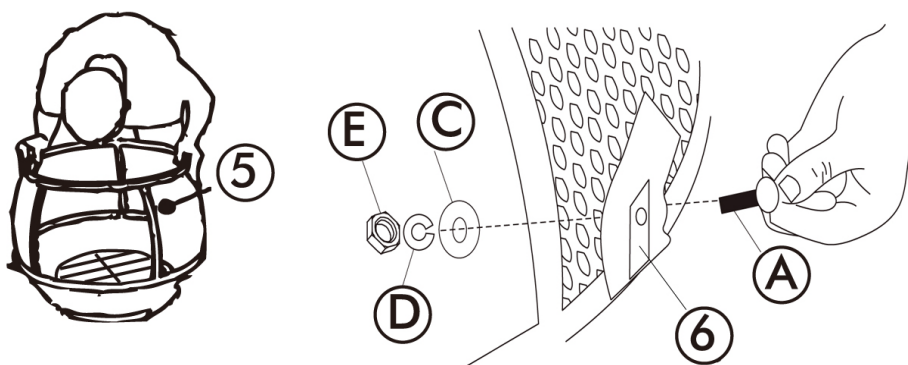


Assembly Instructions

STEP 4 - ASSEMBLY MESH STOVE TOP

Install stove top (4) on mesh stove assembly (5).

Align the holes on the top with connector plate (6) on the mesh stove assembly and connect using bolts (A), washers (C), lock washers (D) and nuts (E). Tighten securely.

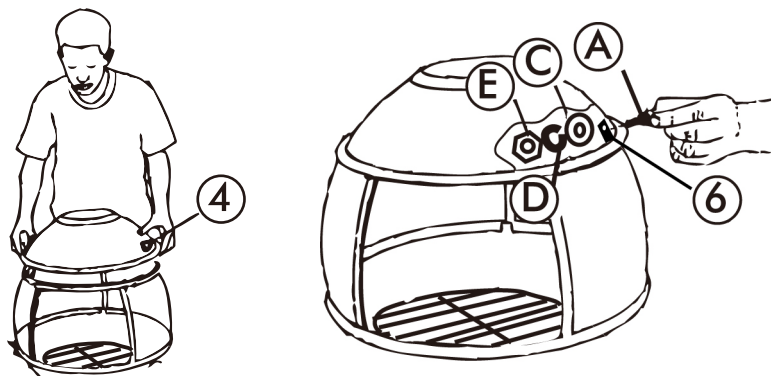


STEP 5 - ASSEMBLY FLUE

Connect flue (3) to stove top (4) using bolts (B), washers (C), lock washers (D) and nuts (E).

Secure all bolts from previous steps, but do not over tighten.


Place spark arrestor screen (2) and cap (1) onto the top of flue (3), as shown.

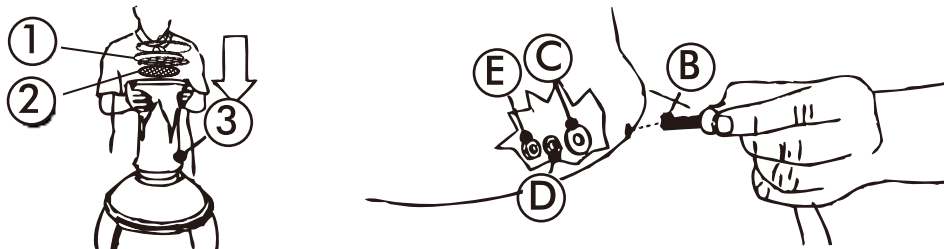

STEP 6 - PLACE THE DOOR

Install the door (11) onto the mesh stove assembly (5).

To move the hot parts use the safety tool (9).

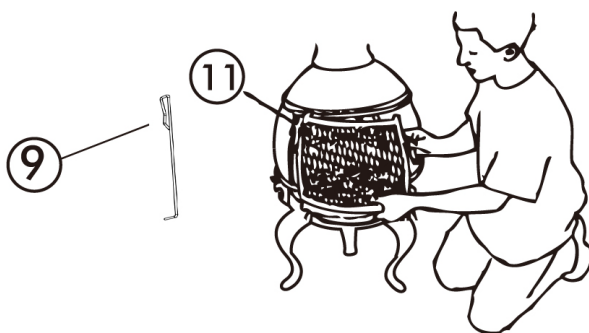

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Made in China for HOME, Argos Limited. Sainsbury's Supermarkets Ltd, London, EC1M 6HA, UK. Argos (N.I.) Ltd and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.