


# FIREPIT WITH TRIPOD


Assembly Instructions - Please keep for future reference

3372199

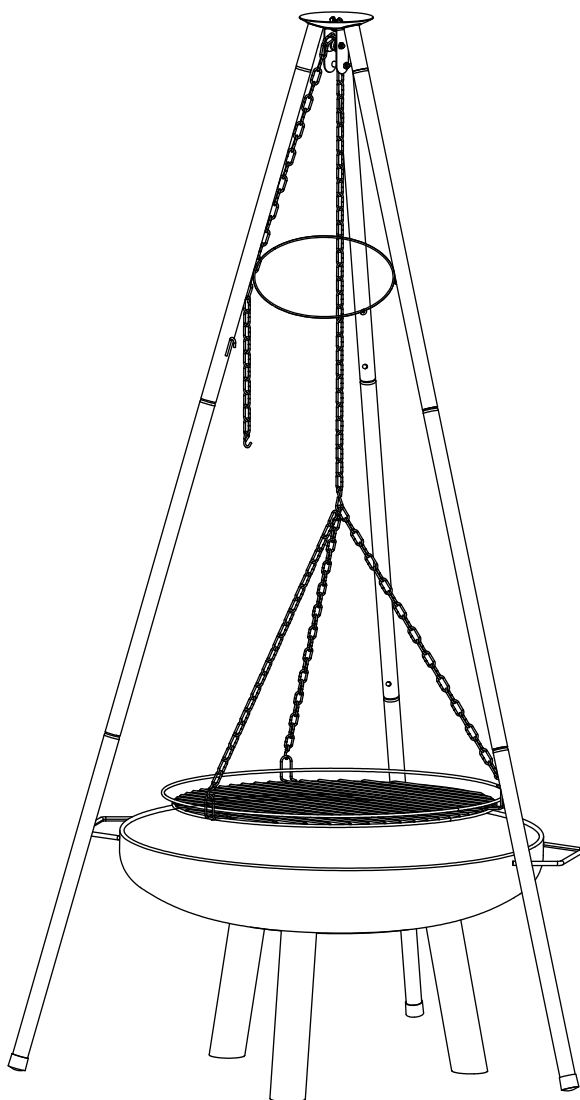

## Dimensions

Width - 60 cm  
Depth - 60 cm  
Height - 145 cm

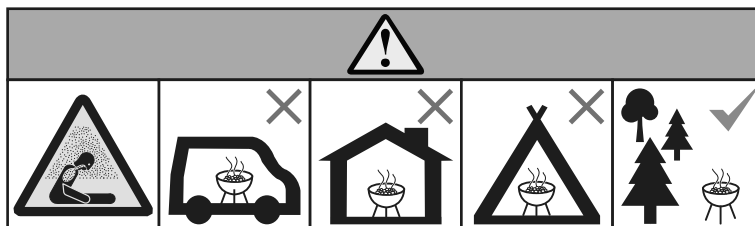

**Important - Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

## Before you start

- Please read these instructions fully before assembling or using your firepit.
- Failure to follow these instructions could result in serious bodily injury, and/or property loss.
- We suggest you spend some time reading this guide before following the simple step-by-step assembly instructions.
- Before you start, make sure you have the correct tools. The tools required for building this firepit are a cross head screw driver and an adjustable spanner.
- Do not discard any of the packaging until you have checked that you have all parts and fittings listed. When discarding packaging take care and consideration for others and the environment.
- When assembling this firepit, be aware of the safety of yourself and others.
- Assemble this firepit on a clean, flat and level surface e.g. the cardboard packaging.
- If after reading these instructions you are unsure of how to safely assemble or use your firepit, please refrain from doing so and contact our customer services department for further assistance.



## Warnings and safety advice

**Important: Please read these instructions fully before starting assembly**

- Do not use indoors.
- This firepit is for outdoor use only, and should NOT be used in a building, garage or any other fully or partially enclosed area.
- Do not use in or near tents.
- Do not use as a refuse incinerator, it is only intended for use with charcoal or timber.
- Avoid using soft wood such as pine or cedar as they are likely to throw sparks.
- Never position on a surface that is liable to be damaged by heat.
- Do not use in high winds.
- Position on a smooth flat surface.
- Do not use the firepit unless it is completely assembled, and all parts securely fastened.

### CARELESS USE OF FIREPITS CAUSES FIRE

Do not use in areas which prohibit open fires.

Do not use close to flammable materials, including wooden decking and fences.

Do not use near dry vegetation.

**WARNING!** This firepit will become very hot, do not move it during operation.

Do not leave unattended when lit.


Do not use spirit or petrol for lighting or relighting!

Use only firelighter complying to EN1860-3

Use protective gloves when moving the cooking grid when firepit is in use.

**WARNING!** Keep children and pets away.

Read instructions before assembly and use. Keep for future reference.

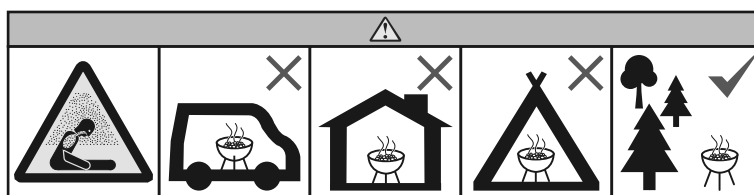

**Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon of carbon monoxide poisoning fatality.**



## Care and use

- This firepit is for household outdoor use only, not for commercial use.
- Take care when building as exposed edges may be sharp.
- Choose a suitable location before lighting, away from footpaths and high foot traffic areas.
- Allow a minimum of 1 meter from any surfaces or things that may be affected by heat.
- Always used on a flat, firm and level surface.
- Allow to cool completely before moving.
- Ensure firepit is completely cold before storage.
- Periodically check all bolts are secure and retighten if necessary.




## Care and use for using for cooking

- For best cooking results use good quality charcoal.
- Arrange charcoal in a stack before lighting, if using firelighters check they comply to EN1860-3, use enough charcoal to give an even 5-6cm layer when spread out.
- Before cooking wait until the flame has died and the charcoal is glowing and covered in a layer of white ash, this will take 20-30 minutes.
- Carefully spread the hot coals using the poker.
- Using the handles provided position the cooking grid over the charcoals.
- Before cooking prepare the food by applying a light coating of cooking oil to the surface of the food, this will help prevent the food sticking to the grid.
- Turn food regularly during cooking.
- Ensure food is cooked thoroughly before serving, used a food thermometer if unsure, insert it into the thickest part of the meat and when it reaches 75°C or above it is fully cooked.
- Always keep raw meat separate from other foods.
- Regularly clean your firepit between uses, do not allow fat from cooking to build up as this can cause fires.
- Ensure the firepit and its components are sufficiently cool before cleaning.

# Component - Parts

If you have damaged or missing components, call the **Customer Helpline: 0345 6400800**


Please check you have all the parts listed below

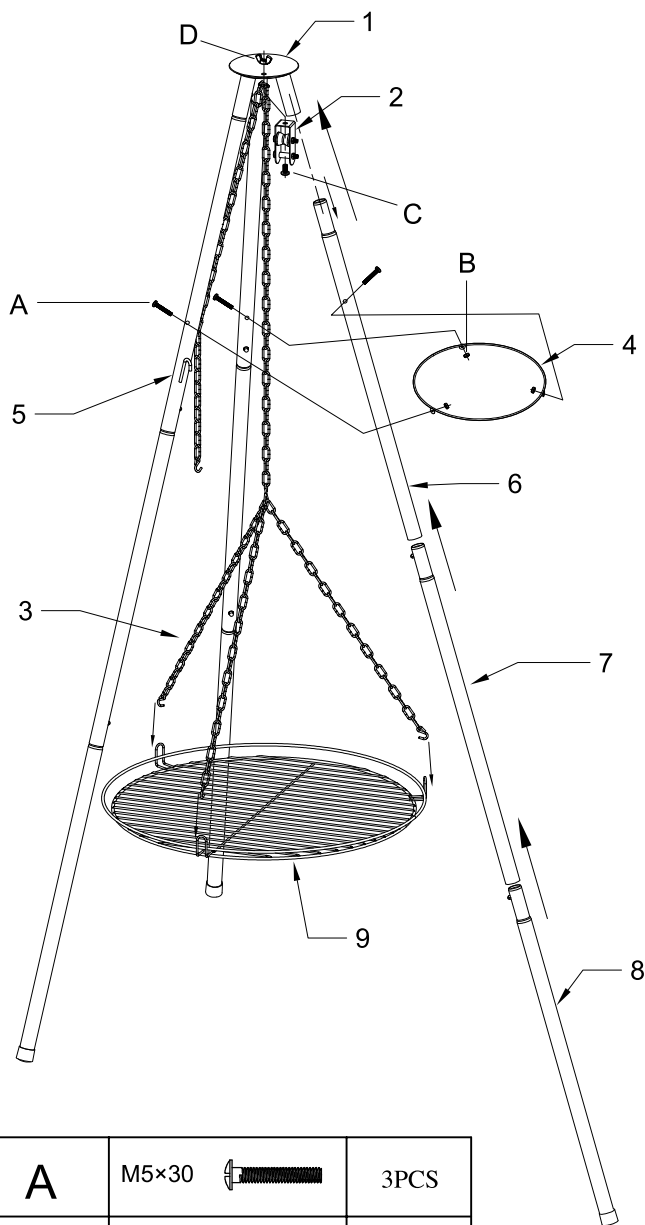

|          |       |  |      |
|----------|-------|--|------|
| <b>A</b> | M5×30 |  | 3PCS |
| <b>B</b> | M5    |  | 3PCS |
| <b>C</b> | M6×12 |  | 7PCS |
| <b>D</b> | M6    |  | 1PC  |

|    |  |      |
|----|--|------|
| 1  |  | 1PC  |
| 2  |  | 1PC  |
| 3  |  | 1PC  |
| 4  |  | 1PC  |
| 5  |  | 1PC  |
| 6  |  | 2PCS |
| 7  |  | 3PCS |
| 8  |  | 3PCS |
| 9  |  | 1PC  |
| 10 |  | 1PC  |
| 11 |  | 3PCS |


**Ruler-** Use this ruler to help correctly identify the screws

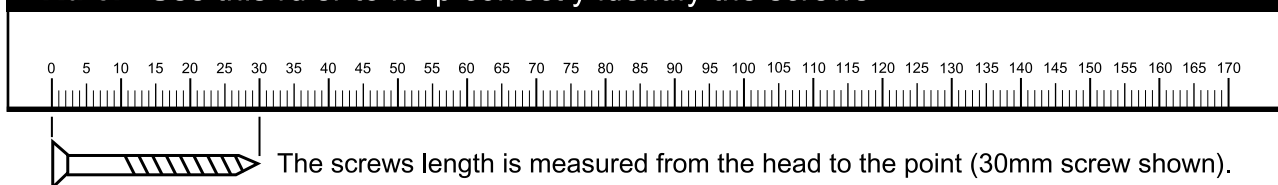

# Assembly Instructions


## Step

- (1) Assemble the tubes (5), (7), and (8) of the tripod legs as the first complete leg.
- (2) Assemble the tubes (6), (7), (8) of the tripod legs as the second and third complete leg.
- (3) Assemble the three connected legs to the top bracket (1) of the tripod.
- (4) Use M6X12MM screws (C) and M6 nuts (D) to connect the pulley (B) to the bracket (1).
- (5) Connect the ring (4) to the legs (5) and (6) with M5X30MM screws (A) and M5 nuts (B).
- (6) Insert the chain (3) through the pulley (2) and hang it on the leg tube of (5).
- (7) The three S-shaped hooks of the chain (3) are connected with the hooks of the cooking grid (9) respectively.

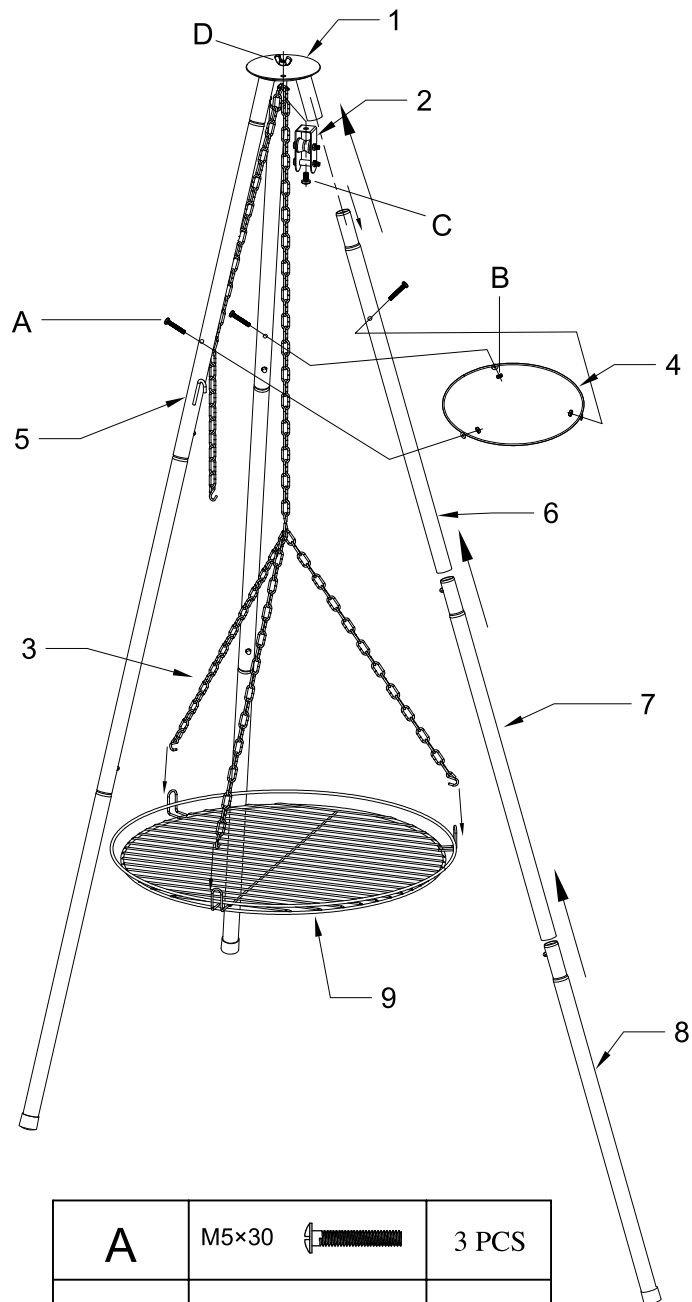

|   |       |                                                                                       |       |
|---|-------|---------------------------------------------------------------------------------------|-------|
| A | M5×30 |   | 3 PCS |
| B | M5    |  | 3 PCS |
| C | M6×12 |   | 1 PCS |
| D | M6    |  | 1 PCS |

# Assembly Instructions

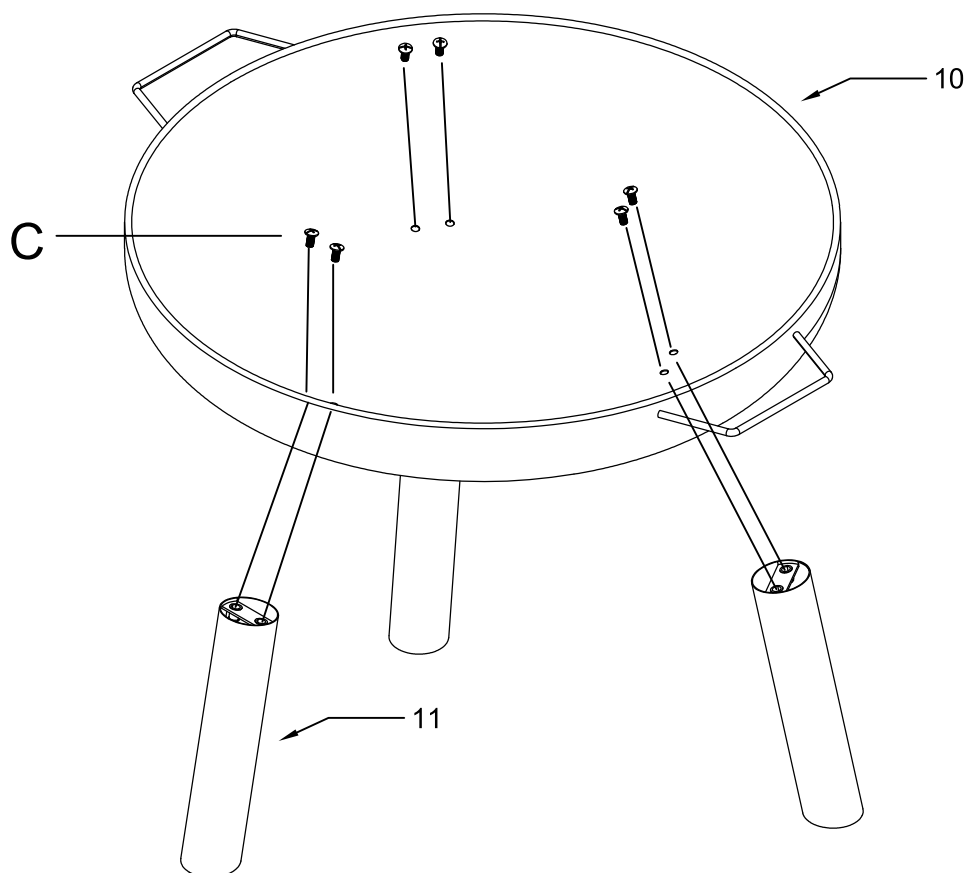


## Step

(8) Use M6X12 screws (C) to connect the fire bowl (10) and the fire bowl legs (11). Ensure legs are correctly orientated

(9) Before using for the first time add a layer of sand 3-5 cm thick to the base of the fuel bowl. This will help insulate the base and offer some protection against the corrosive nature of ashes.

(10) Step 10

Use the chain to adjust the cooking grill height and set this by attaching the chain to the hook on the tripod leg. Any spare chain can be double hooked / looped on the hook to tidy the spare chain.

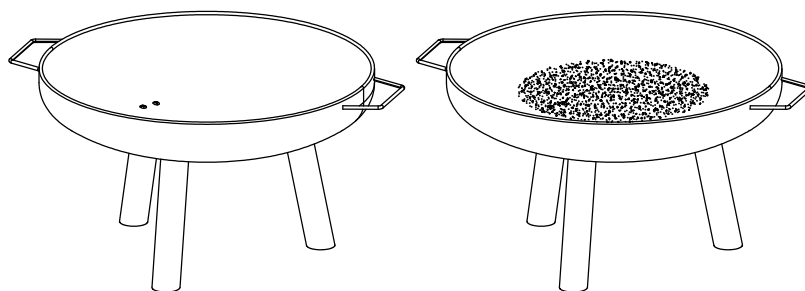

|   |       |                                                                                      |       |
|---|-------|--------------------------------------------------------------------------------------|-------|
| C | M6×12 |  | 6 PCS |
|---|-------|--------------------------------------------------------------------------------------|-------|

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Made in China for Argos Limited. Sainsbury's Supermarkets Ltd., London, EC1N 2HT, UK. [Argos \(N.I.\) Ltd](#) and Sainsbury's (NI) Ltd. Forestside Shopping Centre, Upper Galwally, Belfast. BT8 6FX, UK.