 


Father & Child Floor lamp - 3374317, 3901591,4886237

Assembly and User Instructions – Please keep for future reference

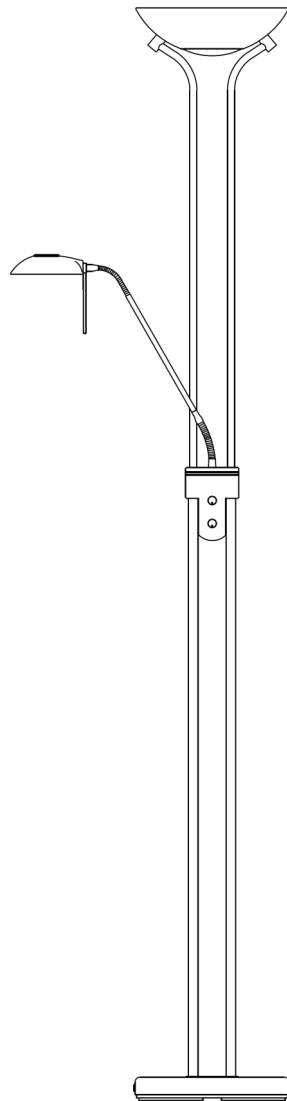


Important –Please read these instructions fully before using
If you need help please call our **Customer Services** on 0345 640 3030

Contents

| Section | Page |
|--------------------------|------|
| Parts and Component list | 2 |
| Safety Information | 3 |
| Maintenance | 3 |
| Installation | 4 |

Produced for ARGOS,
Argos Limited, London, EC1N 2HT, UK
Argos (NI) Ltd, Belfast, BT8 6FX, UK

 Parts and Components Listing

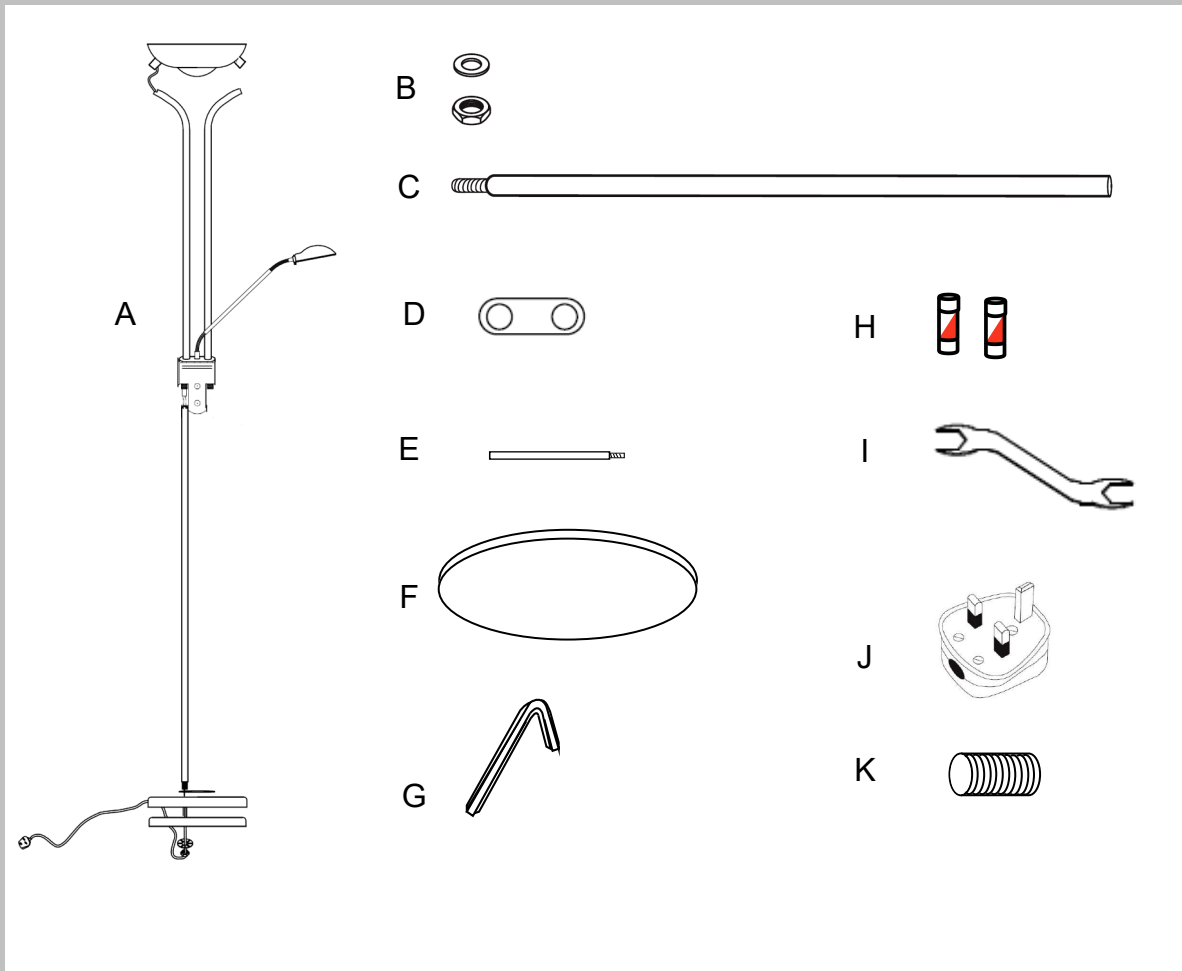

- A. Fitting x 1 (pre-wired)
- B. Fixing nuts & Washers x 2 (1 pre-fitted)
- C. Pole x 2 (1 pre-fitted, not assembled)
- D. Poles base washer x 1 (Pre-fitted, not assembled)
- E. Adjusting Arm for Child lamp x 1
- F. Child Glass diffuser (pre-fitted)
- G. Allen Key x 1
- H. Dimmer Fuse 2.5A x 2— (x1 pre-fitted, x1 Spare)
- I. Spanner x 1
- J. UK 3 Pin Plug (Pre-fitted)
- K. Spare grub screw x 1

Safety Information

IMPORTANT – Please read these instructions fully before installation and keep for future reference

For your safety, this product must be installed in accordance with local building Regulations. If in any doubt, or where required by law, consult a competent person who is registered with an electrical self certification scheme. Further information is available online or from your local authority.

IMPORTANT -This product has been designed for non-professional, domestic use only.

IMPORTANT - Carefully unpack and examine the product for any damage. If you think there is a defect, **do not** use the product and contact our customer services on **0345 640 3030**.

IMPORTANT - Dispose of all packaging correctly and responsibly and in accordance with all local laws and regulations. Never leave packaging components within reach of children as they can be a source of danger.

IMPORTANT – Before inserting or replacing bulb(s) ensure the power is switched off and the bulb(s) have cooled down.

WARNING – This is a Class I product and requires an earth connection.

WARNING – Do not modify or alter any product before or after installation. This may render the product un-safe.

WARNING - Accessible parts become hot during use, young children **must** be kept away.

WARNING - This product is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.

WARNING - Children should be supervised to ensure that they do not play with the product.

 
WARNING - **Do not** place this fitting in a damp atmosphere.

WARNING – **Do not** remove the metallic reflective shield.

WARNING – If the Glass shields are damaged or broken they must be replaced before continuing to use the Floor Lamp.

CAUTION - Ensure the power is switched off before cleaning or carrying out any maintenance.

SPECIAL NOTE—**Should the dimmer fail to operate as normal, please check and replace the fuse in the dimmer unit (spare fuse supplied).**

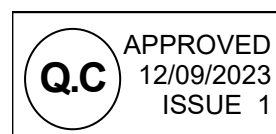

Maintenance

Maintenance

CAUTION! Always disconnect power supply when servicing or cleaning.

Cleaning

- Use a clean dry soft or slightly damp cloth.
- Do not use abrasive cloths or polishes as this may cause damage to the product.

Changing the bulbs

IMPORTANT! Ensure that the bulb has cooled down before replacing.

- Ensure that the power supply has been disconnected.
- Carefully remove the protective glass shield.. .

IMPORTANT!

If the external flexible cable or cord of this Luminaire is damaged this luminaire shall be destroyed.

Installation

Installation

IMPORTANT ! - Electrical connections must be carried out by a suitably qualified person and in accordance with all relevant local building and installation regulations. If in doubt consult a qualified electrician.

Installation

1. Attach the upper section to the top poles taking care not to twist or damage the cables.
2. Using the Allen screw provided screw the grub screw to lock upper section and top poles in place.
3. Screw the lower poles onto the bottom of the switch section taking care not to twist or damage the cable from the pole pre-fitted on the product.
4. Place the base washer onto the pole screws.
5. Place the base cover onto the pole screws.
6. Place the base weight onto the pole screws and under the base cover.
7. Attach the washer and lock nut onto the pole screws.
8. Using the spanner tool provided screw the hex nut to secure poles and base cover and base weight in place, pull the excess of the cable out of the base.
9. Insert the LED R7S 118mm into top head lamp holder (not supplied).
10. Using a screw driver not supplied, un-screw the 2 screws from the child glass diffuser.
11. Carefully remove the child glass diffuser from the child lamp.
12. Insert an LED G9 bulb into the lamp holder.
13. Re-place the child glass diffuser back to the child lamp.
14. Re-screw the 2 screws for secure the child glass diffuser back in place.
15. Screw the adjusting arm to the child lamp as illustrated.
16. Connect the plug to a normal household socket and using the rotary dimmer controls turn on the light to test. The rotary controls are also used to dim the light level for both lights.
17. Using the 2 rotary switches from the fitting switch on and test the fitting.

REPLACEMENT LAMP

Maximum wattage – See lamp holder
Light bulb shape - See lamp holder

CHANGING THE FUSE:

Using a screwdriver or similar tool press the fuse seat out to reveal the fuse. Change the fuse with a 2.5A fuse only

