



**EN** Instruction manual





## **DEHUMIDIFIER**

60Hz

01.368001.02.001

PARTS DESCRIPTION

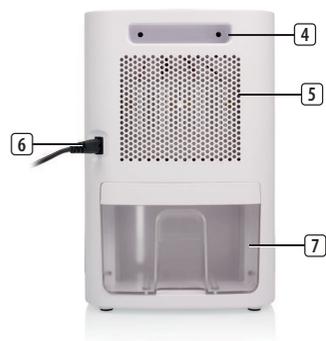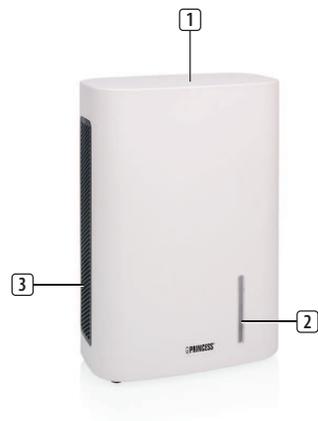

## SAFETY


- Please read this user's manual carefully to ensure proper use, maintenance and installation.
- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- The appliance is for indoor use only.
- Do not use the unit on a socket under repairs or not installed properly.
- Do not use the unit:
  - near a source of fire.
  - in an area where oil is likely to splash.
  - in an area exposed to direct sunlight.
  - in an area where water is likely to splash.
  - near a bath, a shower or a swimming pool.
- Never insert your fingers or any other object into the air outlet. Take special care to warn children of these dangers.
- Keep the unit upward while transport and storage.
- Before cleaning or moving the unit, always turn off or disconnect the power supply.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- The appliance shall be installed in accordance with national wiring regulations.
- Notes:
  - Contact the dealer or a designated repair shop if any parts are damaged;
  - In case of any damage, please turn off the unit, disconnect the power supply and contact the dealer or a designated repair shop.
  - In any case, the power cord shall be firmly grounded.
  - This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.

**Warning**

- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames , an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- Contact authorized service technician for repair or maintenance of this unit.
- Do not pull , deform or modify the power supply cord , or immerse it in water . Pulling or misuse of the power supply cord can result in damage to the unit and cause electrical shock.

- Keep ventilation openings clear of obstructions.
- Do not stop the unit by pulling out the power plug whilst in operation as this may cause an electric shock or fire due to heat generation unless strange sounds are heard or if strange smells or smoke appear from the unit.
- Unplug the unit if strange sounds, smell, or smoke comes from it.

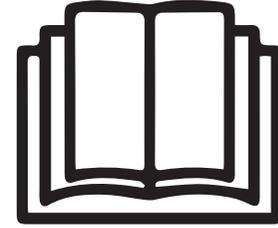

**Caution**

- Please make sure the product ventilates all the time, make sure the inlet and outlet ventilation are not blocked in any way.
- Operate this unit on a horizontal surface to avoid water leakage.
- Do not operate this unit in an explosive or corrosive atmosphere.
- Operate this unit in an ambient between 18°C and 40°C.

- To avoid the household electricity block out, please do not use any extension cord for this unit.

-  **WARNING:** In order to avoid overheating, do not cover the heater.



This product complies with conformity requirements of the applicable European Regulations or Directives.



This product complies with conformity requirements of the applicable UK Regulations.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Lokal Authority or local store for recycling advise.



The universal recycling symbol, logo, or icon is an internationally recognized symbol used to designate recyclable materials. The recycling symbol is in the public domain and is not a trademark.



The Green Dot is the registered trademark of Der Grüne Punkt – Duales System Deutschland GmbH and is protected as a trademark worldwide. The logo may only be used by customers of DSD GmbH holding a valid trademark usage contract or by engaged waste management companies within the Federal Republic of Germany. This also applies to reproduction of the logo by third parties in a dictionary, an encyclopaedia or an electronic database containing a reference manual.



In a double-insulated appliance, two insulation systems are provided instead of an earth wire. No earthing means is provided on a double-insulated appliance, nor should a means for earthing be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should only be done by qualified service personnel. The replacement parts for a double-insulated appliance must be identical to the parts they replace. A double-insulated appliance is labelled with the words 'CLASS II' or 'DOUBLE INSULATED'. It can also be identified with the double insulation symbol.

## PARTS DESCRIPTION

1. Top switch / Working indicator
2. Water level window
3. Dry air grille
4. Handle

5. Wet air grille
6. DC socket
7. Drainage tank

## BEFORE THE FIRST USE

- Place the unit in the correct upright position before unpacking.
- Take the appliance and accessories out the box.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Please ensure the unit is not placed against objects which will obstruct air intake e.g. furniture or curtains as this will affect its performance dramatically.
- A distance of 20cm minimum must be kept between the unit and the wall or any other obstacles.

## USE

- Plug one end of the cord to the power socket of the dehumidifier, then connect the other side to the main socket.
- The default setting is to run the unit automatically in efficient work mode, the working indicator will be bright green. The air starts blowing from the dry air outlet.

Caution: If the working Indicator is blinking in green, please check if the water tank is assembled in the right way.

- Switch the working mode
  - Press the touch switch once, it switches the working mode to sleep mode, the noise level will become lower and the working indicator is dimmer.

- Press it again, and it switches the working mode to efficient work mode, the noise level is higher and the working indicator is brighter.

Suggestion: Please switch the device to sleep mode when using it in the bedroom at night.

- Switch the unit on or off
  - Press the touch switch for a few seconds to switch the device on or off.
  - The working indicator turns off and the fan stops working when switching the unit off.
- Remove/Assemble the water tank
  - When the water tank is full, it stops working automatically. The working indicator turns bright orange.
  - Press the switch a few seconds to switch the unit off, and unplug it from the main socket. Remove the water tank from the unit, then open the cover of the water outlet hole to pour the water out.
  - Assemble the cover of the water outlet hole well, then put the water tank back into the unit.
  - To continue dehumidifying, press the switch a few seconds to switch the unit on. If the water tank is not assembled well, the working Indicator is blinking green.
- Finish the dehumidifying, press the top switch to switch the device off, empty the water tank, and clean the unit, then place the unit in a cool and dry place.

## CLEANING AND MAINTENANCE

- Before cleaning, be sure to disconnect the unit from any electric supply outlet.

- First clean the surface with a neutral detergent and wet cloth, and then wipe it with a dry cloth.
- Do not use gasoline or other chemicals to clean the unit.

## STORAGE

- Empty the water in the tank.
- Store the unit in a cool and dry place.

## ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

### Support

You can find all available information and spare parts at [www.princesshome.co.uk](http://www.princesshome.co.uk).



**smartwares®** Europe  
Swaardvenstraat 65 | 5048 AV | Tilburg  
The Netherlands | [www.princesshome.eu](http://www.princesshome.eu)



**smartwares®** Safety and Lighting Ltd.  
West Point, Second Floor | Mucklow Office Park  
Mucklow Hill | Halesowen | West Midlands | B62 8DY  
United Kingdom | [www.princesshome.co.uk](http://www.princesshome.co.uk)