




EN User manual




Air Cooler and Heater

01.357505.02.001

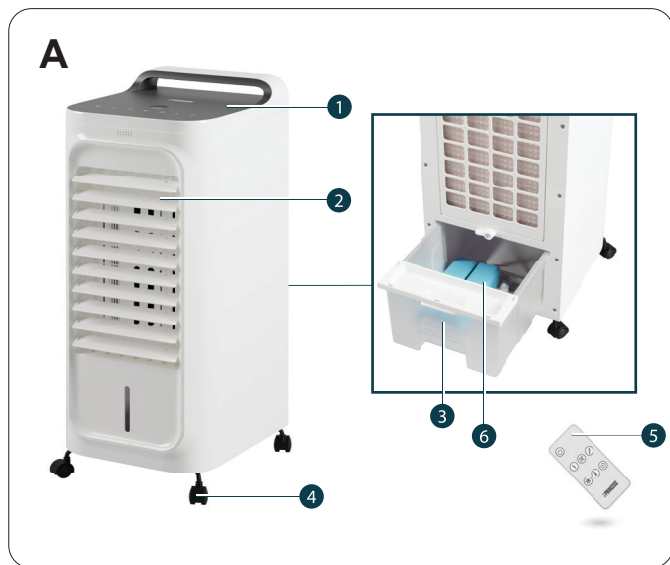

Air Cooler and Heater

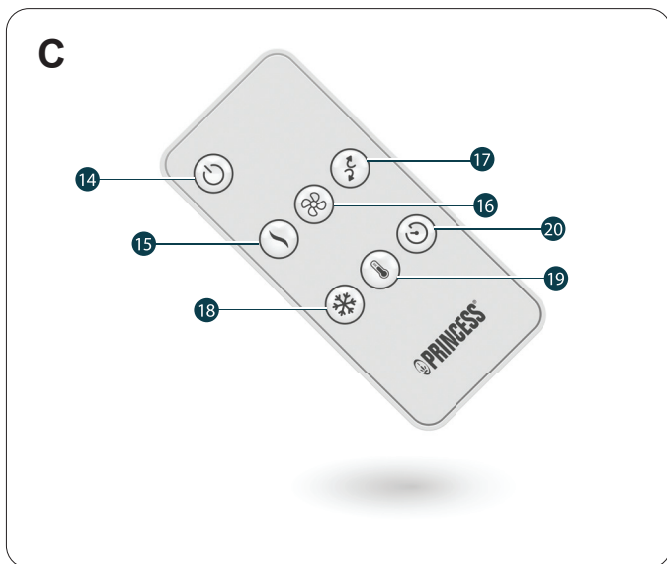

Main parts (see image A)

- | | |
|-------------------|------------------|
| 1 Control Panel | 4 Caster wheel |
| 2 Air outlet | 5 Remote control |
| 3 Water reservoir | 6 Ice boxes |

Control Panel (see image B)

- | | | |
|----------------|------------------|------------------|
| 7 Cooling mode | 10 Temperature | 13 ON/OFF button |
| 8 Swing mode | 11 Wind strength | |
| 9 Timer | 12 Heat level | |

Remote Control (see image C)

- | | | |
|------------------|-----------------|----------|
| 14 ON/OFF button | 17 Swing mode | 20 Timer |
| 15 Heat level | 18 Cooling mode | |
| 16 Wind strength | 19 Temperature | |

SAFETY

Safety precautions

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the

cord and make sure the cord cannot become entangled.

- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- The appliance must be placed on a stable, level surface.
- The user must not leave the appliance unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by

children unless older than 8 and supervised.

- Empty the tank and refill every third day. Before refilling, clean it with fresh tap water or cleaning agents if required by the manufacturer. Remove any scale, deposits, or film that has formed on the sides of the tank or on interior surfaces, and wipe all surfaces dry.
 - Clean the filter regularly.
 - Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
 - Unplug the appliance during filling and cleaning.
 - Never leave water in the reservoir when the appliance is not in use.
 - Empty and clean the air cooler before storage. Clean the air cooler before next use.
 - Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- ⚠ WARNING**
- Microorganisms can grow in the water reservoir and be blown in the air causing serious health risks when the water is not

renewed and the tank is not cleaned regularly and properly.

- To reduce the risk of fire, keep textiles, curtain, or any other flammable material a minimum distance of 1m from the air outlet.
- Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

FOREWORD

About this document

This user manual contains all the information for correct, safe, and efficient use of the appliance.



Ensure you have fully read and understood the instructions in this user manual before you use the appliance.

Always store this user manual in a safe place near the appliance for future reference.

Original instructions

This manual is originally written in English. All other languages are translated documents.

General symbols

Symbol	Description
	This product complies with conformity requirements of the applicable European regulations or directives.
	This product complies with conformity requirements of the applicable UK Regulations.

APPLIANCE DESCRIPTION

About this appliance

The Princess 01.357505.02.001 is a stylishly designed mobile air conditioner. Control the air conditioner with the included remote and use the convenient timer function to shut off the device automatically.

Intended use

This appliance is intended for indoor use only.

This appliance is intended exclusively for domestic, non-commercial use.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels, and other residential type environments;
- bed and breakfast type environments.

The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

Any use of the appliance other than described in this user manual is regarded as misuse and may cause injury or damage to the appliance and void the warranty.

Technical specifications

Appliance name	Air Cooler and Heater
----------------	-----------------------

Article number	01.357505.02.001
Power supply	220-240V~ 50/60Hz
Power consumption in use	2000W

BEFORE FIRST USE

- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V~ 50/60Hz).
- Fill the water tank.
- To increase the cooling effect, you can put the frozen ice boxes in the water tank.

USE

- Press the on/off button **B15/C14** to turn the air cooler and heater on or off. **Please note:** there is a 30 second countdown before the device turns off.
- Press the speed button **B11/C16** to select the desired airflow speed. There are three levels to choose from (high, medium and low speed).
- When the unit is on, use the time button **B9/C20** to adjust the duration of the running time. Each time the button is pressed, the hours will increase one by one and the time indicator will light on the screen. To cancel the timer, simply press the button **B9/C20** until the indicator is off.
- Press the cool button **B7/C13** to turn on the cooling function. The unit will act as an evaporator now. If combined with the ice boxes, this unit can lower its surrounding temperature even more.
- If you want to use the ice boxes **A6**, remember to put it in the freezer beforehand. Use them when they are completely frozen.
- Press the heating mode button **B12/C15** to set the temperature from 15-40

degrees. Click to increase the degrees. When the product uses the heating function, cooler button can not be used. If the speed button is used, the product is automatically converted to the normal air supply mode, Low/Medium/High.

Display Panel / Remote Control

- Cooling mode B7/C13:** Press the button to start cooling.
- Swing mode B8/C17:** When in cooling mode, the swing mode can be activated.
- Timer B9/C20:** Press this button to set the fan running time between 1-12 hours, which switches the unit to standby after the pre-set time. Each time the button is pressed, the timer will increase. To cancel the timer, simply press the button until the indicator light is off.
- Temperature B10/C15:** Press this button when in heating mode. You can then set the temperature from 15-40 degrees, click to increase by one degree.
- Wind strength B11/C16:** Press the button in cooling mode to set the wind strength. Mode "1" indicates low, "2" indicates medium and "3" indicates high.
- Heat level B12/C15:** Press the button in heating mode to set the wind strength. . Mode "1" indicates low, "2" indicates high.
- ON/OFF B13/C14:** Turn on/off the device.

CLEANING AND MAINTENANCE

- Always disconnect the power cord from the socket before any cleaning.
- Clean the outside with a damp cloth. Never use harsh and abrasive cleaners, steel wool or a scouring pad as this will damage the device. Do not immerse in water or other liquid.
- To clean the air filter; unscrew the back panel and pull the holder of the air filter by hand. When the air filter is apart, clean it with neutral cleaner and a soft brush. Afterwards clean it by water, let it dry and take the air filter back to the air cooler
- To clean the wet curtain paper; unscrew the back panel and pull the holder of

the air filter by hand. Take the wet curtain paper out of the air cooler. Clean the wet curtain paper with water and a soft brush with cleaner, let it dry and put it back on the air cooler.

- To clean the water tank; rotate the turning mechanism and take the water tank out. Wash the residue in the water tank by towel with cleaner. After that clean the water tank by water, let it dry and put it back to the air cooler.
- To clean the housing; wipe off the housing by neutral cleaner and soft cloth.

DISPOSAL



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

SUPPORT

You can find all available information and spare parts at www.princesshome.co.uk.

TECHNICAL SPECIFICATION

Power: Heating: 2000W

Cooling: 80W

Voltage: 220V-240V~

Frequency: 50/60 Hz



IN NEED OF ACCESSORIES? VISIT WWW.PRINCESSHOME.EU/NL-NL/CUSTOMERSERVICE/ACCESSORIES-SPAREPARTS
FOR ACCESSORIES AND SPARE PARTS TO EXTEND YOUR ITEM!

© Princess | Swaardvenstraat 65 | 5048 AV Tilburg | The Netherlands | www.princesshome.eu

© Princess | West Point, Second Floor | Mucklow Office Park | Mucklow Hill
Halesowen | West Midlands | B62 8DY | United Kingdom | www.princesshome.co.uk