


# User manual

15 l air cooler


---

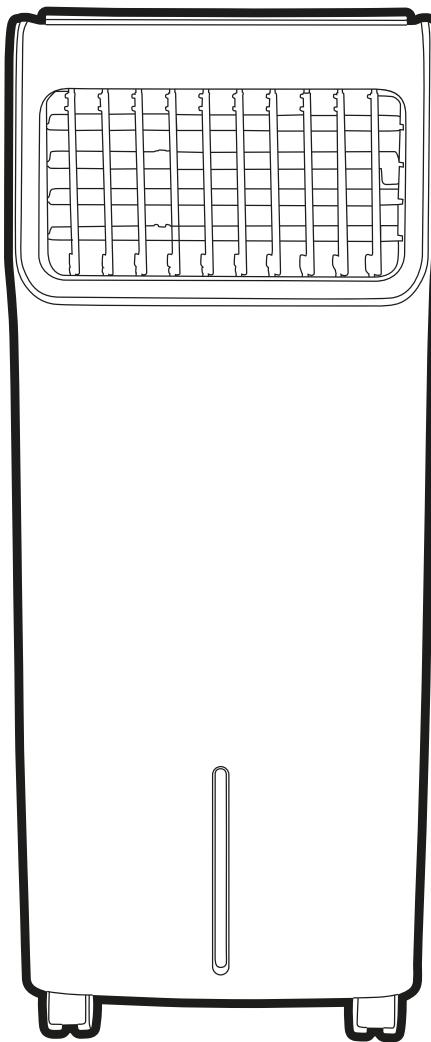

---

est 1872  
**Beldray**®

## Description of parts

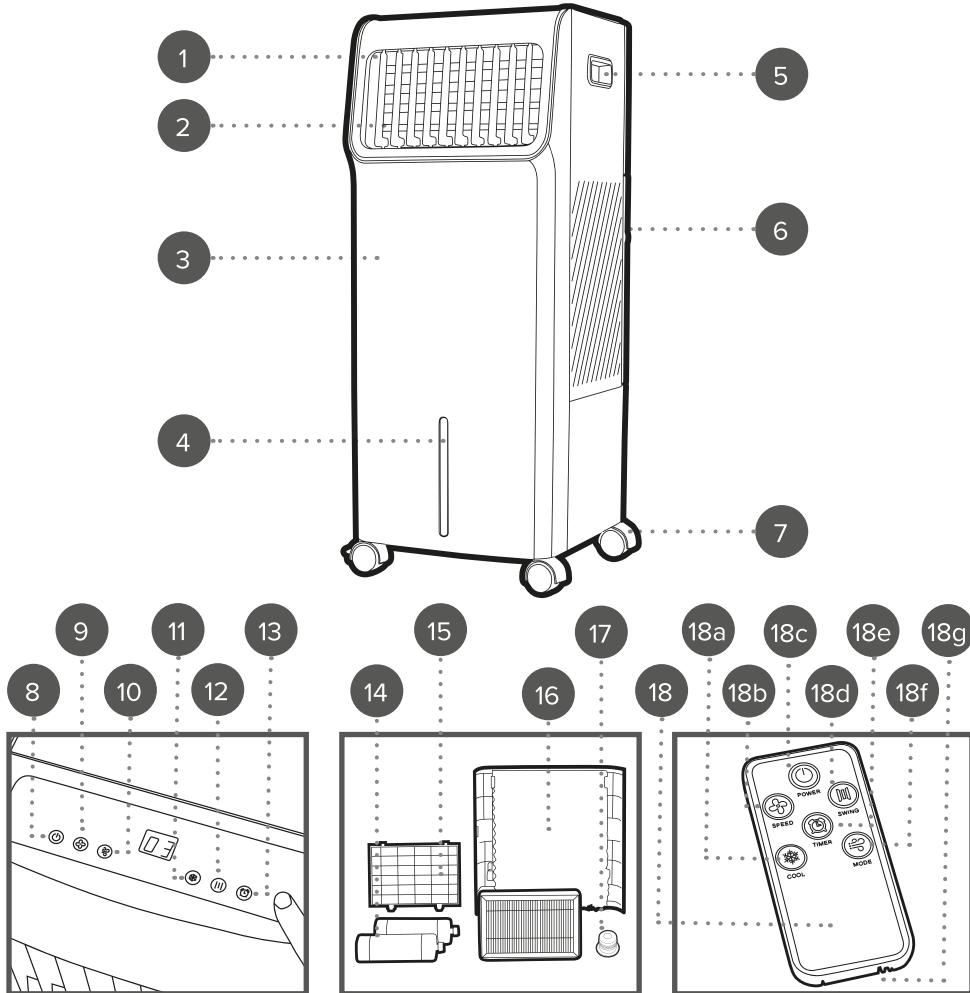

1. Vertical grill
2. Horizontal grill
3. Air cooler main unit
4. Water level window
5. Carry handles
6. Cable holder
7. 360° castor wheels (qty. 4)
8. Power button
9. Fan speed button
10. Mode button
11. Cold button
12. Swing button
13. Timer button
14. Ice packs (qty. 2)
15. Drain
16. Honeycomb filters (qty. 3)
17. Water tank plug
18. Remote control
  - 18a. Cold button
  - 18b. Fan speed button
  - 18c. Power button
  - 18d. Timer button
  - 18e. Swing button
  - 18f. Mode button
  - 18g. Battery compartment

Please retain instructions for future reference.

## SAFETY INSTRUCTIONS

- When using electrical products, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.
- This is not a toy – children should be supervised to ensure they do not play with the product.
- Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. Nominal voltage is still present in this product as long as the product is connected to the electrical source.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.
- Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.
- Do not immerse the product in water or any other liquid.
- Do not operate the product with wet hands.
- Do not leave the product unattended whilst connected to the mains power supply or when in use.
- Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not leave the product plugged in or operating overnight.
- Do not use the product for anything other than its intended use.
- Do not use this product outdoors.
- Do not move the product whilst it is in use.
- Do not shake the product.
- Do not cover the product.
- Do not put objects into any of the openings.
- Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage it.
- Do not spray insecticide and chemical solvents on the product.

- Only lift the product with the carry handles provided.
- Always use the product on a flat, stable surface.
- Use of an extension cord with the product is not recommended.
- This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.
- This product is intended for domestic use only. It should not be used for commercial purposes.



**WARNING:** If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply. Should the product fall or be pushed over while there is water in the tank, unplug it from the mains power supply immediately. The product should be righted and dried thoroughly before it is used again.

## Declaration of conformity

UP Global Sourcing UK Ltd. hereby declares that this product is in compliance with the essential requirements and other provisions of directive 2014/53/EU.

The declaration of conformity may be consulted at

Ultimate Products UK Ltd., Victoria Street, Manchester OL9 0DD. **UK.** Ultimate Products Europe Ltd., 19 Baggot Street Lower, Dublin D02 X658. **ROI.**

or online at <https://beldray.com/declaration-letters/> Model No.: EH3777

## BATTERY SAFETY


- Do not short-circuit a cell or battery.
- Check that the battery compartment is secure.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- Batteries are to be inserted with the correct polarity.
- Remove any batteries from the product when it is not being used for a long period of time to avoid leakage.
- In the event of the batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Keep batteries out of the reach of children.
- Remember to keep button cell batteries away from children at all times as they can easily be swallowed.
- If you think batteries have been swallowed or placed inside any part of the body, **seek immediate medical attention.**
- Exhausted batteries must be removed and disposed of safely.
- Do not crush, puncture, dismantle or otherwise damage batteries.
- Do not expose batteries to heat or fire as they may explode.
- Do not subject batteries to mechanical shock.
- To dispose of any batteries, take them to a local recycling station. Contact the local government offices for details.
- This product requires a CR2025 button cell battery (included).

## Battery safety warning

### **⚠️ WARNING**

#### **THIS PRODUCT CONTAINS A BUTTON/COIN BATTERY**

Swallowing can cause severe or fatal injuries within 2 hours.  
Keep batteries out of reach of children (whether new or used).  
If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

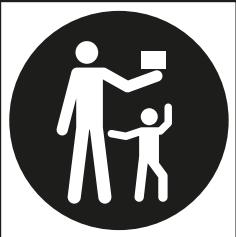

**CAUTION:** Vigilance must be maintained with “flat” or spare button or coin batteries in the home and the products that contain them.

There are no obvious specific symptoms when a button or coin battery is stuck in a child's oesophagus (food pipe). However, the child might exhibit the following symptoms:

- Excessive coughing, gagging or drooling
- Appear to have a stomach upset or virus
- Vomiting
- Pointing to their throat or stomach
- Pain in their abdomen, chest or throat
- Tiredness and lethargy
- Be quieter or more clingy than usual
- Loss or reduction of appetite
- Refusal or inability to eat solid foods

**A specific symptom of button or coin battery ingestion is vomiting fresh (bright red) blood. Seek immediate medical attention if this occurs.**

## Care and maintenance

**STEP 1:** Unplug the air cooler from the mains power supply before attempting any cleaning or user maintenance.

**STEP 2:** The water tank must be drained of water after each use. To do so, carefully pull the rubber stopper over a drain to release the water. Once the water tank has been drained, wipe away any excess water with a soft cloth.

**STEP 3:** To clean the honeycomb filter, remove the securing screw at the back of the air cooler and remove the dust-proof bracket. The honeycomb filter can be pulled away from the air cooler; remove any loose fibres by hand, taking care not to pierce the honeycomb filter. The honeycomb filter can be washed in warm water with a mild detergent and a soft brush; allow to dry thoroughly before use.

**STEP 4:** Wipe the air cooler with a soft, damp cloth and allow to dry thoroughly. Replace the honeycomb filters and dust-proof bracket, reinserting the securing screw.

Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the air cooler, as this may cause damage.



**NOTE:** Clean the air cooler and all of its parts regularly to reduce the risk of limescale and bacteria forming.

## Instructions for use

### Filling the air cooler

Before filling the air cooler, make sure that it is switched off and unplugged from the mains power supply.

**STEP 1:** Open the lid at the top of the air cooler. Using a suitable measuring vessel, fill the water tank with cold, clean water. The water should be gently poured into the top of the air cooler. The water level should be no lower than the min. fill line and no higher than the max. fill line.

**STEP 2:** The two ice packs can be used to achieve quicker, additional cooling; they should not be filled past the max. fill line. Leave to freeze for approx. 8 hours before use. Place them into the top of the air cooler before adding water to the tank.



**CAUTION:** Do not fill the air cooler with any liquid other than cold, clean water. Do not use any additives in the water.

## Using the air cooler

**STEP 1:** Plug in and switch on the air cooler at the mains power supply.

**STEP 2:** To turn on the air cooler, press '⊕' once and select the desired cooling speed by pressing '▢' for settings 1, 2 and 3.

**STEP 3:** Activate the swing function by pressing '▢'; the vertical grills of the air cooler will begin to turn left and right. To stop the vertical grills from turning, press '▢' once more.

**STEP 4:** To regulate the airflow up or down, manually adjust the horizontal grills on the front of the air cooler.

**STEP 5:** Cool and humidify air by pressing '✿'. The air cooler will begin to circulate water across the honeycomb filter evaporation pad. To stop the function, press '✿' once more.

**STEP 6:** To change the wind mode, press '☰' and select the desired mode from normal, natural and sleep.

**STEP 7:** To set a timer for the air cooler, select '⌚' and select the desired time.

**STEP 8:** To turn off the air cooler, press '⊕' once.



**NOTE:** The air cooler is not designed to significantly reduce the room temperature; it provides a cool breeze. When positioning the air cooler, do not lift it by the front panel; move it using the handles and the 360° castor wheels.



**WARNING:** Do not use the cold function when the water tank is empty or if it is filled below the min. fill line. The air cooler should not run continuously for more than 10–12 hours at any one time. Check the water level regularly. Do not attempt to operate the cold function if there is no water in the tank, as this will cause damage to parts.

## Storage

Drain the water tank before storing and allow it to dry thoroughly.

Always leave the air cooler to cool before storing upright in a cool, dry place.

Loosely wrap the cord around the cable holder; do not wrap it tightly, as this could cause damage.

## Troubleshooting

Problem	Possible cause	Solution
The air cooler will not power on.	The air cooler is not connected to the mains power supply.  The fuse has blown.	Plug in and switch on the air cooler at the mains power supply.  Replace the fuse with one of the same rating.
No air is blowing from the air cooler.	The desired cooling speed has not been selected.	Press the speed buttons and select the desired setting, '3' being the strongest cooling speed.
The air blowing from the air cooler is not strong enough.	The cooling speed is set too low.  The honeycomb filter is blocked.	Select a higher cooling speed by pressing the relevant cooling speed button.  Clean the honeycomb filter or evaporation pad following the instructions in the section entitled 'Care and maintenance'.
The vertical grills are not turning left and right.	The swing function has not been selected.	Activate the swing function by pressing  .
The vertical grills are not facing forward.	The swing function has been stopped when the vertical grills were mid-movement.	Press  and let the vertical grills move until they are facing forwards, then press  once more to stop the swing function.
The air cooler is not cooling the air.	The cold function has not been selected.  The water tank has not been filled with enough water.  The ice packs are not $\frac{2}{3}$ full with water.  Ambient humidity is high.	To activate the cold function, press   Fill the water tank to the max. fill mark.  Fill the ice packs with water so that they are $\frac{2}{3}$ full; allow to freeze for approx. 8 hours before use.  The air cooler will not be able to cool due to the high humidity in the air.

## Specifications

Product code: EH3777

Input: 220–240 V ~ 50/60 Hz

Output: 85 W

Water tank capacity: 15 L



#### Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggott Street Lower, Dublin D02 X658. **ROI.**

**MADE IN CHINA.**

©Beldray trademark. All rights reserved.

CD011123/MD011123/V1



**ULTIMATE PRODUCTS  
HOME OF BRANDS**

Manchester  
OL9 0DD  
United Kingdom  
[www.upplc.com](http://www.upplc.com)

Artworker: Niko Summers

Date: 23/11/2023

Project Name: HCC232057 ULT EH3777

Type of Artwork: Instruction Manual

Size: A5 8 PP

Software Used: InDesign CC

Typefaces: Proxima Nova

- Cyan
- Magenta
- Yellow
- Black
- PMS 1
- PMS 2
- PMS 3
- PMS 4

### Artwork Version 1

#### Artwork Scale 1:1

©2023 Ultimate Products UK Ltd. All designs, images and artwork are the copyright of Ultimate Products UK Ltd. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of Ultimate Products UK Ltd. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

**DO NOT PRINT THIS PAGE**  
**ARTWORK REFERENCE ONLY**