


# STEEL FIREPIT


Assembly Instructions - Please keep for future reference

3443884

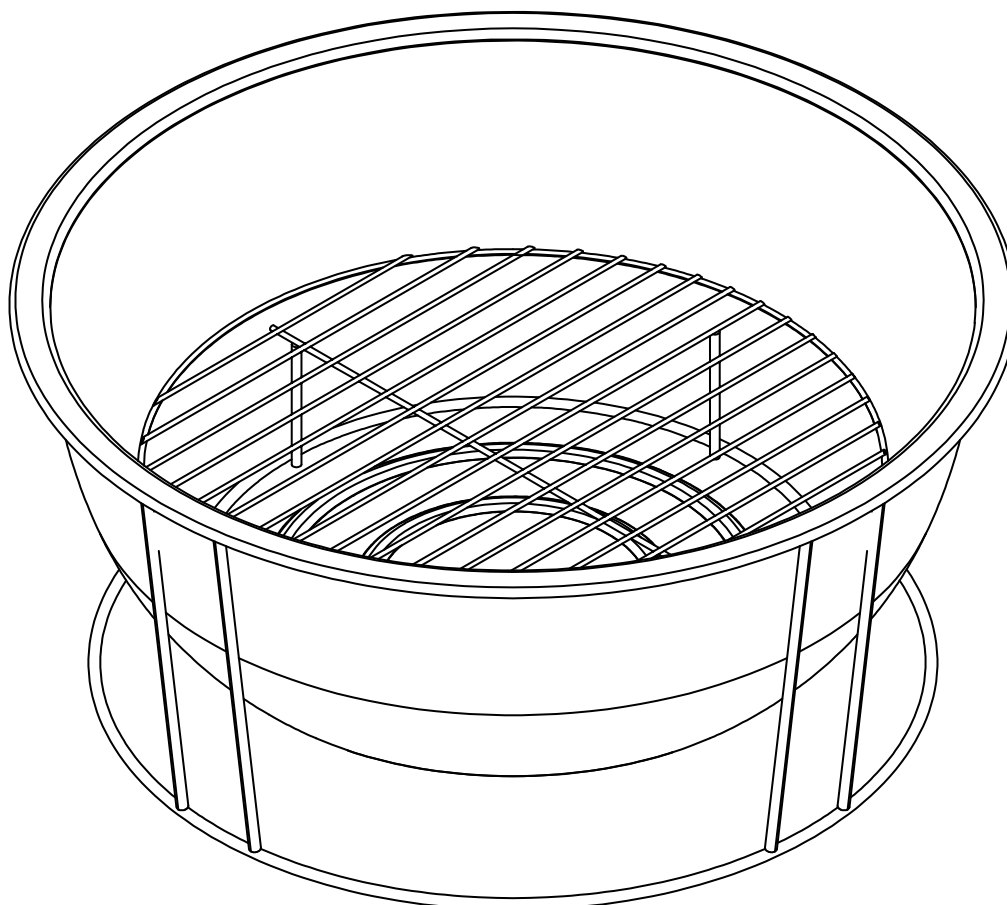

## Dimensions

Width - 51 cm  
Depth - 51 cm  
Height - 23 cm

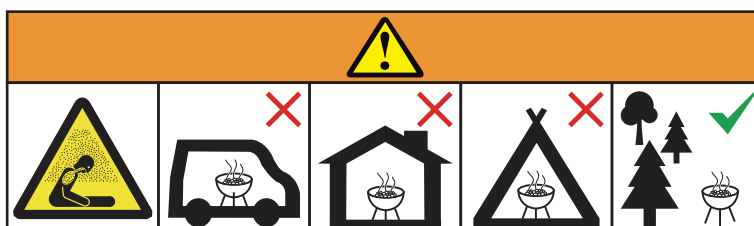

**Important - Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

## Before you start

- Please read these instructions fully before assembling or using your firepit. Failure to follow these instructions could result in serious bodily injury, and/or property loss.
- We suggest you spend some time reading this guide before following the simple step-by-step assembly instructions.
- Before you start, make sure you have the correct tools. The tools required for building this firepit are a cross head screw driver and an adjustable spanner.
- Do not discard any of the packaging until you have checked that you have all parts and fittings listed. When discarding packaging take care and consideration for others and the environment.
- When assembling this firepit, be aware of the safety of yourself and others.
- Assemble this firepit on a clean, flat and level surface e.g. the cardboard packaging.
- If after reading these instructions you are unsure of how to safely assemble or use your firepit, please refrain from doing so and contact our customer services department for further assistance.



## Warnings and safety advise

**Important: Please read these instructions fully before starting assembly**

- Do not use indoors.
- This firepit is for outdoor use only, and should NOT be used in a building, garage or any other fully or partially enclosed area.
- Do not use in or near tents.
- Do not use as a refuse incinerator, it is only intended for use with charcoal or timber.
- Avoid using soft wood such a pine or cedar as they are likely to throw sparks.
- Never position on a surface that is liable to be damaged by heat.
- Do not use in high winds.
- Position on a smooth flat surface.
- Do not use the firepit unless it is completely assembled, and all parts securely fastened.

### CARELESS USE OF FIREPITS CAUSES FIRE

Do not use in areas which prohibit open fires.

Do not use close to flammable materials, including wooden decking and fences.

Do not use near dry vegetation.

**WARNING!** This firepit will become very hot, do not move it during operation.


Do not leave unattended when lit.

Do not use spirit or petrol for lighting or relighting!

Use only firelighter complying to EN1860-3

**WARNING!** Keep children and pets away.

Read instructions before assembly and use. Keep for future reference.

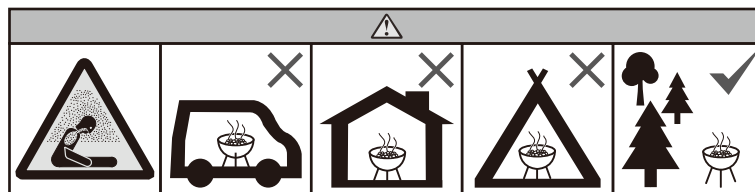

**Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon of carbon monoxide poisoning fatality.**




## Care and use




- This firepit is for household outdoor use only, not for commercial use.
- Take care when building as exposed edges may be sharp.
- Choose a suitable location before lighting, away from footpaths and high foot traffic areas.
- Allow a minimum of 1 meter from any surfaces or things that may be affected by heat.
- Always used on a flat, firm and level surface.
- Allow to cool completely before moving.
- Ensure firepit is completely cold before storage.
- Periodically check all bolts are secure and retighten if necessary.

# Component - Parts

If you have damaged or missing components, call the **Customer Helpline: 0345 6400800**

Please check you have all the parts listed below

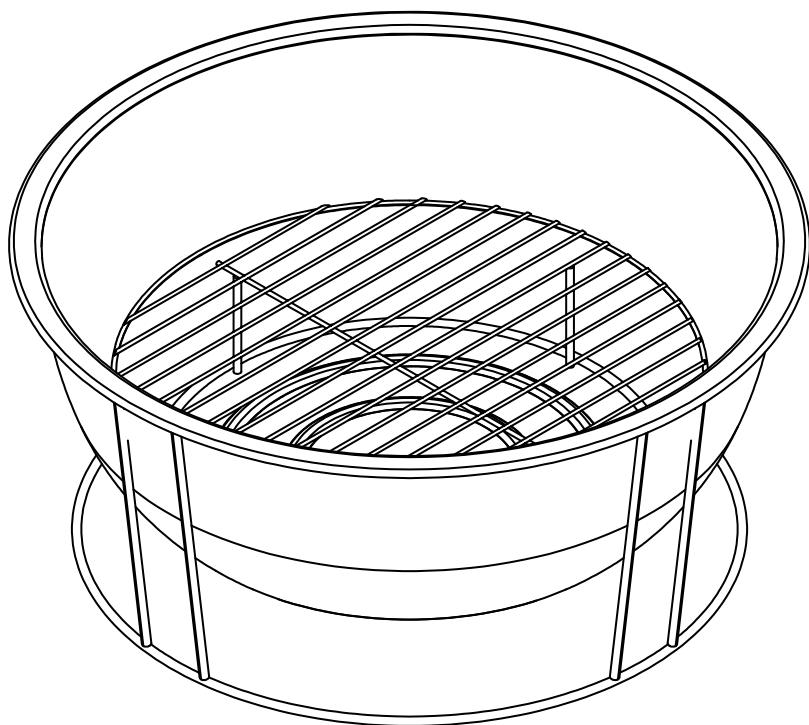
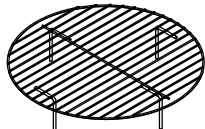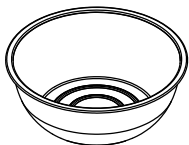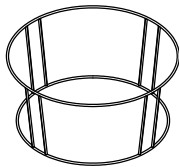
|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| 1 |    | 1PC |
| 2 |    | 1PC |
| 3 |   | 1PC |
| 4 |  | 1PC |

**Ruler-** Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170





The screws length is measured from the head to the point (30mm screw shown).

# Assembly Instructions

## Step

- (1) Place the Stand (3) on a flat surface, put the Fuel Bowl (2) on Stand (3)
- (2) Put the Charcoal Grill (1) inside Fire Bowl (3)
- (3) When using, add 3-5 cm or 2 inch layer of sand evenly to the bottom of the firebowl. This will help against the corrosive nature of the ashes and help radiate the heat upwards.

Before using for the first time add a layer of sand 3-5 cm thick to the base of the fuel bowl. This will help insulate the base and offer some protection against the corrosive nature of ashes. Fuel should be positioned on top of the charcoal grill.

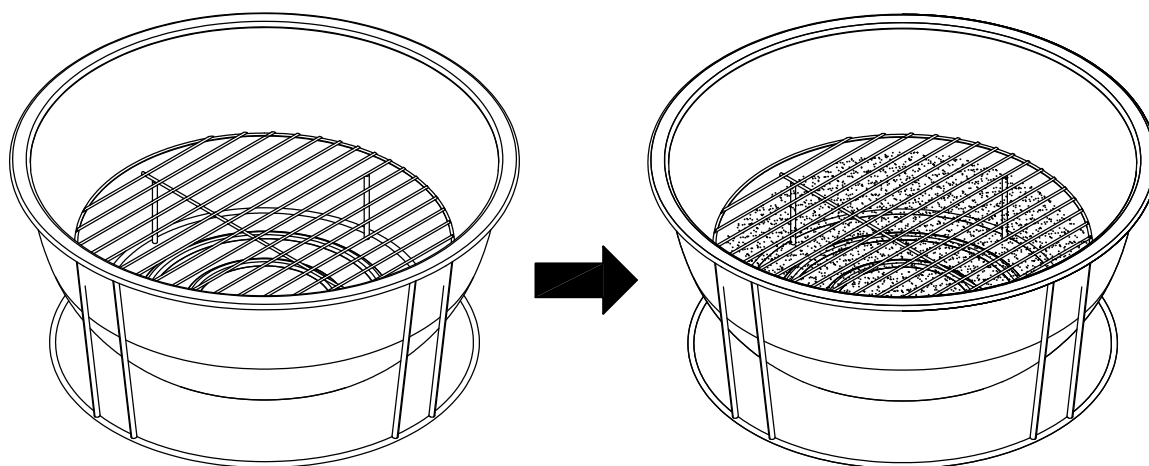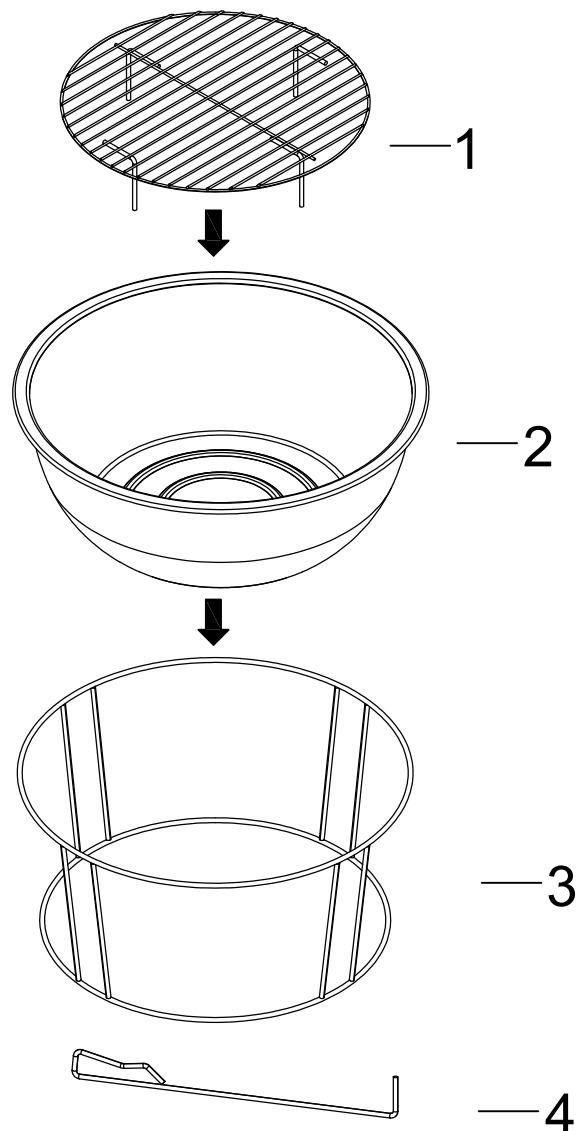

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Made in China for Argos Limited. Sainsbury's Supermarkets Ltd., London, EC1N 2HT, UK. Argos (N.I.) Ltd. and Sainsbury's (NI) Ltd. Forestside Shopping Centre, Upper Galwally, Belfast. BT8 6FX, UK.