


fridgemaster

How to use your new Fridge Freezer

Model MS91520DES
MS91520DEB

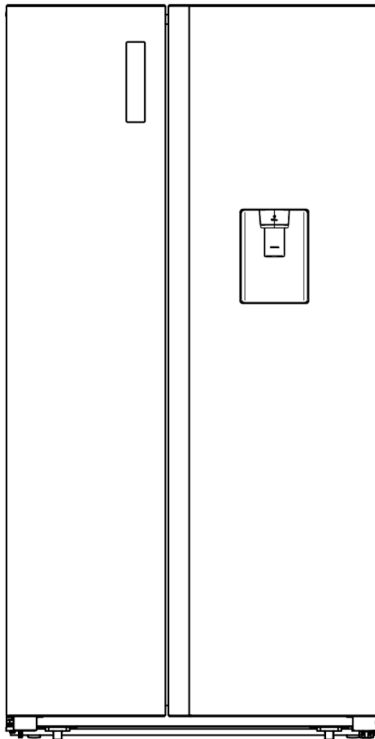

Contents

Safety and warning information.....	2	Cleaning and care.....	
Installing your new appliance.....	7	Helpful hints and tips....	
Description of the appliance.....	9	Troubleshooting.....	
Display controls.....	12	Disposal of the applian	
Using your appliance.....	18		



Safety and warning information

For your safety and correct usage, before installing and using the appliance, read this user manual carefully, including its hints and tips. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and all its features. Save these instructions and be sure that they reach the next appliance if it is moved or sold, so that anyone using it through the years will be properly informed on its usage and safety notices.

For the safety of life and property, keep the precautions of these instructions as the manufacturer is not responsible for damage caused by omission.

Safety for children and others who are vulnerable people

- According to EN standard

This appliance can be used by children aged from 8 years and older and persons with reduced physical, sensory or mental capabilities and limited experience and knowledge if they have been given supervision and instructions concerning use of the appliance in a safe way and understand the risks involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and unload the appliance.

According to IEC standard

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions

the spring lock unusable before you discard the old appliance to prevent it from becoming a death trap for a child.

General safety



- **WARNING** — This appliance is intended to be used in commercial and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- **WARNING** — Do not store explosive substances such as aerosols with a flammable propellant in this appliance.
- **WARNING** — If the supply cord is damaged, it must be repaired by the manufacturer, its service agent or similarly qualified person to avoid a hazard.
- **WARNING** — Keep ventilation openings, in the appliance or in the built-in structure, clear of obstruction.
- **WARNING** — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING** — Do not damage the refrigerant circuit.
- **WARNING** — Do not use electrical appliances inside the freezer compartments of the appliance, unless they are of the type approved by the manufacturer.
- **WARNING** — The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized recycling or disposal centre. Do not expose to flame.
- **WARNING** — When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING** — Do not locate multiple portable socket-outlets or power supplies at the rear of the appliance.


Replacing the illuminating lamps

becomes damaged.

The refrigerant (R600a) is flammable.

- **WARNING** — Refrigerators contain refrigerant and gases. Refrigerant and gases must be disposed of professionally to avoid cause eye injuries or ignition. Ensure that tubing of the refrigerator is not damaged prior to proper disposal.



- The symbol  is a warning and indicates the refrigerant and insulation blowing gas are flammable.
- **Warning: Risk of fire/flammable materials**

If the refrigerant circuit should be damaged:

-Avoid opening flames and sources of ignition.

-Thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product.

Any damage to the cord may cause a short circuit, fire, and/or



Electrical safety

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged. A damaged power plug may overheat and cause a fire.
3. Make sure that you can access the main plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. This may cause electric shock or fire.
6. You must not operate the appliance without the interior lighting.
7. The fridge is only applied with power supply of single phase AC current of 220~240V/50Hz. If fluctuation of voltage in the district is so large that the voltage exceeds the above scope, for safety sake, please apply A.C. Automatic voltage regulator of more than 350W to the power supply. The fridge must employ a special power socket instead of common power socket of electric appliances. Its plug must match the socket with ground.

manufacture's instructions.

- The appliances manufactures storage recommendations should be adhered to. Refer to relevant instructions for storage.
- Do not place carbonated or fizzy drinks in the freezer compartment. This creates pressure on the container, which may cause it to explode, leading to damage to the appliance.
- Frozen food can cause frost burns if consumed straight from the freezer compartment.
- Do not place the appliance in direct sunlight.
- Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
- The appliance is intended for keeping food stuff and/or beverages in a normal household as explained in this instruction booklet. Exercise care when move it as the appliance is heavy.
- Do not remove nor touch items from the freezer compartment if they are damp/wet, as this could cause skin abrasions or frostbite.
- Never use the base, drawers, doors etc. to stand on or as a step.
- Frozen food must not be refrozen once it has been thawed.
- Do not consume ice popsicles or ice cubes straight from the freezer. This can cause freezer burn to the mouth and lips.
- To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawer.
- **This refrigerating appliance is not intended to be used as a freezer appliance.**

caution!

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the power plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaners, organic solvents or abrasive cleansers.
- Do use sharp objects to remove frost from the appliance. Use a scraper.

- Wherever possible the back of the product should not be too close to avoid touching or catching warm parts (compressor, condenser, etc.) to prevent the risk of a fire, follow the instructions relevant to the appliance.
- The appliance must not be located close to radiators or other heat sources.
- Make sure that the mains plug is accessible after the installation of the appliance.

Service

- Any electrical work required to do the servicing of the appliance must be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.
 - 1) If the appliance is Frost Free.
 - 2) If the appliance contains a freezer compartment.

Installing your new appliance

Before using the appliance for the first time, you should be informed of the following tips.



In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance for the dissipation of heat. For this reason, sufficient clear space should be available around the refrigerator.

Suggest: It is advisable for there to be 50-70mm of space from the back to the wall, at least 100mm from its top, at least 100mm from its side to the wall and a clear space upfront to allow the doors to open 135/150°.

Please see the following diagrams.

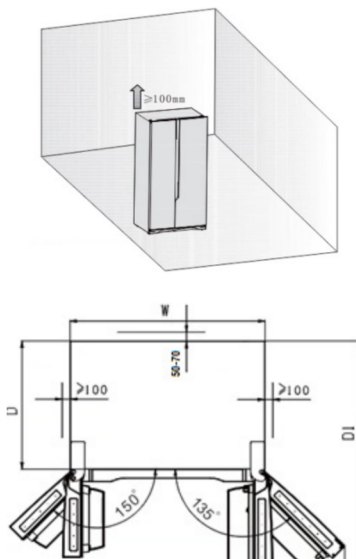



table below. It may not be left at a temperature outside the indicated range for a

Climate class	Ambient temperature
SN	+10°C
N	+16°C
ST	+16°C
T	+16°C


- Stand your appliance on a level surface to avoid high moisture.
- Keep the appliance out of direct sunlight, rain or frost. Stand the appliance away from heat sources such as radiators and heaters.

Leveling of appliance


- For sufficient leveling of the appliance, the bottom feet may need to be adjusted. You can adjust them manually by using a suitable spanner.
- After the product is put in place, adjust the two front support feet to the bottom of the refrigerator. The leveling of the support feet is required to ensure the appliance is level on the ground, so as to prevent the appliance from toppling after the doors are closed.
- To allow the doors to swing open, the top of the doors should be turned backwards for about 135°/150° by turning the adjustable feet.
- Whenever you want to move the appliance, remember to

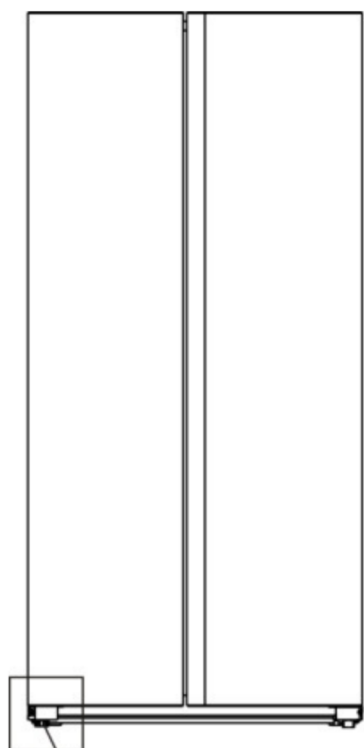

Adjustable bottom feet

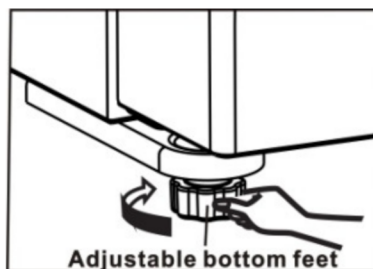

Adjustable bottom feet

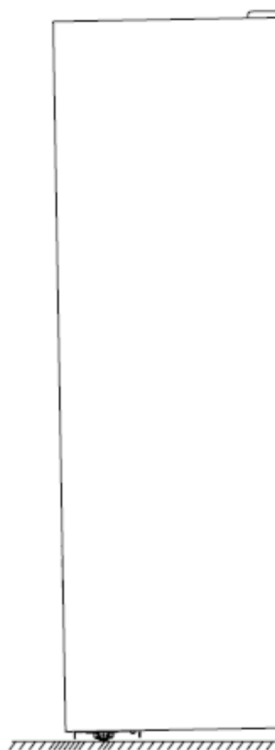

Description of the appliance

View of the appliance



1.Freezer LED light

2.Freezer rack

3.Freezer door

4.Freezer wind channel part

5 Freezer glass shelf

10.Fridge rack


11.Fridge wind channel

12.Fridge door

13.Fridge glass shelf

14 Egg tray(inside)

View of the appliance

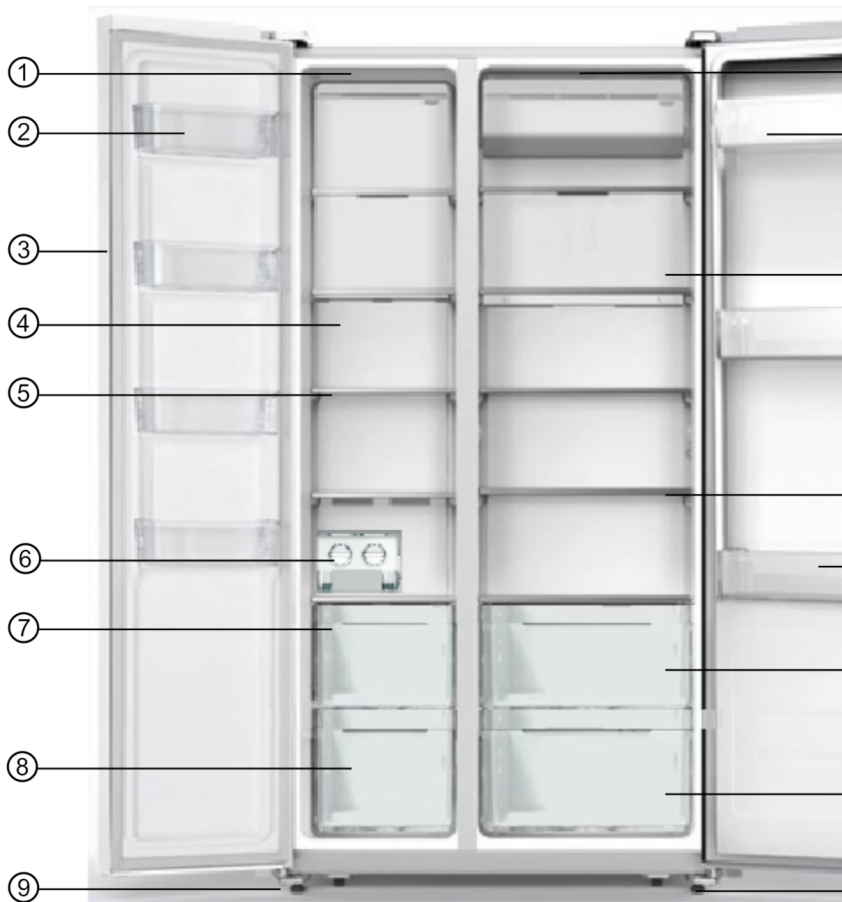

1.Freezer LED light

2.Freezer rack

3.Freezer door

4.Freezer wind channel part

5.Freezer glass shelf

6.Ice box part

7.Freezer drawer

8.Freezer drawer

10.Fridge LED light

11.Fridge rack

12.Fridge wind channel

13.Fridge door

14.Fridge glass shelf

15.Egg tray(inside)

16.Fruit and vegetable

17.Fruit and vegetable

View of the appliance (MS91520DEB
MS91520DES)



1.Freezer LED light

2.Freezer rack

3.Freezer door

4.Freezer wind channel part

5.Freezer glass shelf

6.Freezer drawer

7.Freezer drawer

10.Fridge rack

11.Water tank

12.Fridge wind channel

13.Fridge door

14.Fridge glass shelf

15.Egg tray(inside)

16.Fruit and vegetable

Display Controls(Only for some products)

Use your appliance according to the following control regulations, your corresponding functions as the display panels showed in the pictures below.

Controlling the temperature



For optimum food preservation, we recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 5°C and the freezer to -18°C. If you want to change the temperature, follow the instructions below.

Note: High


temperature setting will accelerate food waste.

 
Caution! When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.

Unlock

for 3 seconds to unlock the display. The display will be locked itself after 20 seconds of no button press.

Mode Selection

You can select “”

modes by pressing the  in the unlock state. And after 10 seconds no press.

1. Super Freeze()

Super Freeze will quickly lower the temperature within the freezer to freeze faster. This can lock in the taste and nutrients of fresh food and keep fresh food fresh longer.

- When the function is activated, the temperature of the freezer will be switched to -24°C.

- In case of the maximum amount of food to be frozen, please wait about 24 hours.

- Super freeze automatically ends after 52 hours and after that the freezer temperature setting will return to the previous setting.

2. Artificial Intelligence

- When the function

function. When the function is activated, the temperature of the fridge is automatically switched to 15°C and the freezer to -18°C.

Important! Do not store any food in the fridge during this time.

Temperature setting

- You should choose to control Fridge(🔲) temperature or Freezer(🔲) temperature

by pressing the “**ZONE**” button in unlock state. The corresponding icon of the selected compartment will flash, and the other one will stay on.

- You can press the “**TEMP.**” button to control the Fridge temperature when the corresponding icon(🔲) flashes. When you press the button continuously, the temperature will be set as the following

sequence.

5 → 4 → 3 → 2 → 1
↑

- You can press the “**TEMP.**” button to control the Freezer temperature.

The corresponding icon(🔲) flashes.

When you press the button continuously, the temperature will be set as the following sequence.

-18 → -19 → -20...-23 → -24 → -18
↑

Door Alarm

- If the door of fridge or freezer is open over 2 minutes, the door alarm will sound. The buzzer will automatically stop alarming 10 minutes later.

- To save energy, please do not keep the door open for a long time. The door alarm will be cleared by closing the door.

Display Controls(Only for some products)

Use your appliance according to the following control regulations, your corresponding functions as the display panels showed in the pictures below.

Controlling the temperature



For optimum food preservation, we recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 5°C and the freezer to -18°C. If you want to change the temperature, follow the instructions below.

Note: High temperature setting will accelerate food waste.

Caution! When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment

may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.

Unlock

When the appliance is powered on for the

any button.

Mode Selection

You can select “❄️” by pressing the “MOD” unlock state. And it will be seconds no pressing any

1. Super Freeze (❄️)

Super Freeze will quickly lower the temperature within the freezer to freeze faster. This can lock in the taste and nutrients of fresh food and keep fresh longer.

- When the function is activated, the temperature of the freezer will be switched to -24°C.

- In case of the maximum temperature to be frozen, please wait

- Super freeze automatically deactivates after 52 hours and after that the freezer temperature setting will return to the previous setting.


2. Artificial Intelligence

- When the function is activated, the temperature of the freezer will be automatically adjusted.

- When the Artificial Intelligence is activated, the temperature


sequence.

5 → 4 → 3 → 2 → 8 → 7 → 6 (°C)



• You can press the “FREEZER” button to control the Freezer temperature when the corresponding icon(❏) flashes. When you press the button continuously, the temperature will be set as the following sequence.

-18 → -19 → -20...-23 → -24 → -14 → -15 → -16 → -17 (°C)




Door Alarm

- If the door of fridge or freezer is open over **2 minute**, the door alarm will start. The buzzer will start alarming 10 minutes later.
- To save energy, please do not keep the door open for a long time. The door alarm will be cleared by closing the door.

Display Controls(Only for some products)

Use your appliance according to the following control regulations, your corresponding functions and modes as the control panels showed below. When the appliance is powered on for the first time, the backlighting of the display panel will be illuminated for 3 seconds, then the display panel will turn off. When the display panel buttons have been pressed and the fridge door has no open/closed indicator, the backlighting will turn off after 1 minutes.

Super Freeze ❄️

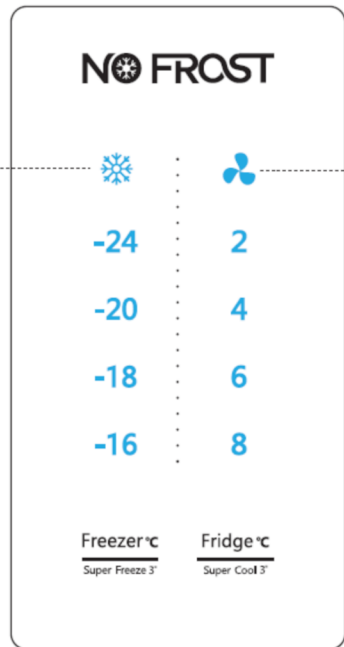


Controlling the temperature

We recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 4°C, and the freezer to -18°C. If you want to change the temperature, follow the instructions below.

 Caution! When you set a temperature, you set an average temperature for the




-16°C and -24°C to set the freezer temperature, and the refrigerator temperature indicator will display according to the following



2. Fridge

Press the middle part of the temperature control knob to set your desired fridge

food substantially faster than usual.

- This feature also helps to keep vitamins and nutrition of fresh food for longer period.
- Press the middle part of  button for 3 seconds to activate the super freeze function. The light  will be illuminated and the freezer temperature indicator will display -24°C.
- Super freeze automatically switches off after 52 hours.
- When super freeze function is on you can switch off super freeze function by pressing the middle part of  button and the freezer temperature setting will revert back to the previous setting.

Note: When selecting the Super Freeze function, ensure there are no bottled or

canned drinks (especially soft drinks) in the freezer compartment as cans may explode.

4. Super Cool




Super Cool can cool your food quicker and

for a longer period

Press the middle part of

3 seconds to activate

light  will be illuminated

temperature indicator will

Super cool automatically

3 hours.

When super cool function

switch it off by pressing



button and

temperature setting will

previous setting.


Using your appliance

This section tells you how to use most of the useful features. We recommend you read through them carefully before using the appliance. It may be different for your model.

1. Adjust the door

When you find the doors are not at the same level, you can use the screwdriver to adjust the door.

When the freezer door is upper than the refrigerator door. First, you can use the screwdriver to turn the bolt anticlockwise on the lower hinge that can make the door go up. Then use the screwdriver to lock the nut in place.

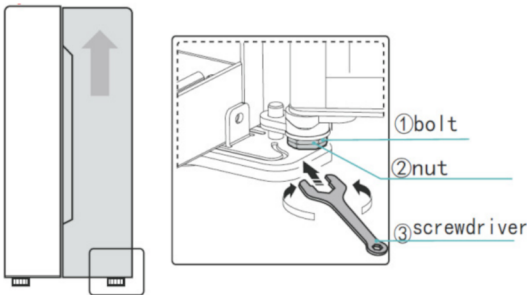


2. Using your refrigerator compartment

The refrigerator compartment is suitable for storage of vegetables and fruit. Food inside should be packed to store in order to avoid losing moisture or flavor permeating into other foods.

Caution! Never close the refrigerator door while the shelves, crisper and/or telescopic slides are extended. It may damage both them and the refrigerator.

Close shelves and Door racks

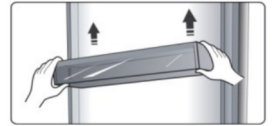

When you remove the shelves, pull them forward until the shelf guides are visible. Then pull the shelf guides out of the shelf.

When you return the shelves, there is no obstacle between the shelf and the guides. Push the shelf back into the guides.

Note: All the door racks should be taken out to be cleaned.

Drawers

These are suitable for storing vegetables. And it can be easily cleaned.

To take them out, open the drawer to its final location first. Then pull the drawer out and tilt up the front of the drawer. It will be moving slightly in the direction of the arrow.

3. Using the freezer compartment

The freezer compartment is suitable for storage of food which needs to be frozen, including meat, fish, ice cream, etc.

Caution! Never close the freezer door while the shelves and/or drawers are extended. It may damage both the shelves and the refrigerator.

freezing room.

- When ice cubes form, twist the knobs clockwise and the ice will drop into the ice box below.
- Ice cubes can be stored in the ice box, if you need them, you can pull out the ice box and take them out.



water injection



take off ice

Note: If the ice box is used for the first time or has not been used for a long time, please clean it before using.

5. Water Dispenser (only for the model with Water Dispenser)

The water dispenser, located in the fridge door, is for storing drinking water.


With this appliance you can obtain chilled water easily without opening the refrigerator. You should be informed of following tips.

- Before using

Before using this appliance for the first time, you should use it as follows.

1. Hold the two sides of the water tank tightly, then pull up the water tank by shaking up and down.
2. Unscrew the head, then clean it and the inside of water tank.

②

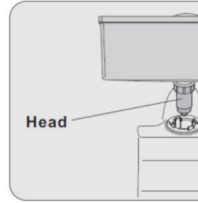


• Assembling

Before assembling, please clean the head inside the tank, and clean the water dispenser when the washer is reversed or no.

1. Insert the head into the tank.
2. Fit the tank along the guide.
3. Press down on the two sides of the tank.
4. When you hear a click, it means the installation is complete.


①

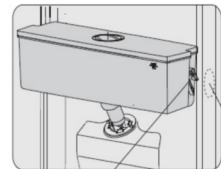

Slot

Guide

③

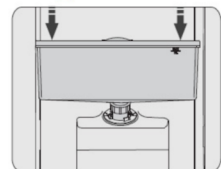


Warning!

1. Be careful not to press the head when the water tank is being inserted.
2. When fitting the water tank, make sure the head is inserted into the hole.

• Filling water

1. Remove the small lid and fill water from the inlet of the large lid.
2. Remove the cover of the tank, and then fill water inside directly.

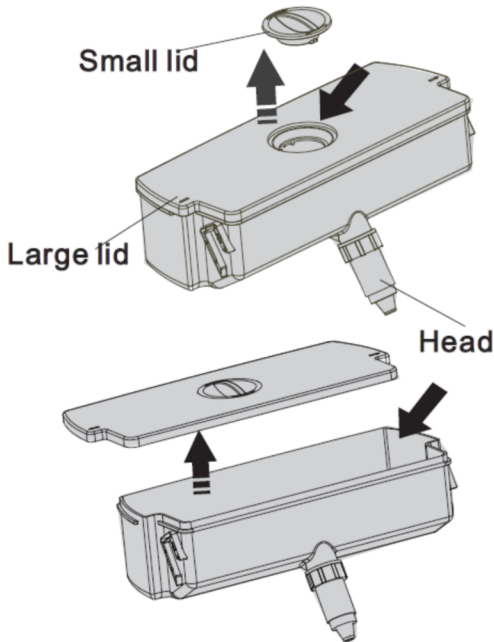

Warning!


Don't touch other parts of the appliance when filling water, it may cause the water leakage.

• **Dispensing water**

1. Make sure the cover of the water tank is fitted on.
2. Close the fridge door and check the dispenser.

• **Receiving Water**

You should use the correct cups to receive water underneath the water dispenser.

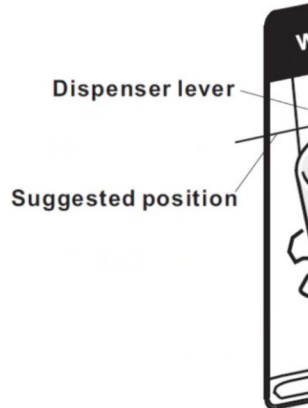

Warning!

Don't push the dispenser lever without cup, it may cause water leakage from the dispenser.

• **Cleaning**

1. Put the water tank out carefully, and then wash the head lightly in water.
2. After you have successfully cleaned the appliance, you should dry it with a dry towel or use a dryer.
3. If you have used the water dispenser many times, the water in the tank may drop on the floor, making your floor wet, and you should clean the tank with dry towel to prevent overflow.

Cleaning and care

For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly at least every two months.


Caution!

The appliance must not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains socket.

Exterior cleaning

To maintain good appearance of your appliance, you should clean it regularly.

- Spray water onto the cleaning cloth instead of spraying directly on the surface of the appliance. This helps ensure an even distribution of moisture to the surface.
- Clean the doors, handles and cabinet surfaces with a mild detergent and then wiped dry with a soft cloth.

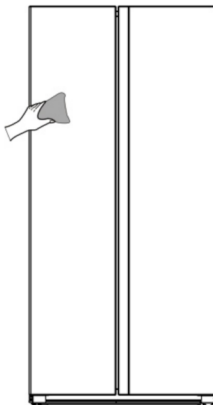


Caution!

food stocks are low. Wipe the fridge freezer with a solution of bicarbonate of soda, and warm water using a wrung-out cloth. Wipe completely, replacing the shelves. Thoroughly dry all surface parts before putting them



Although this appliance defrosts, a layer of frost in the freezer compartment' the freezer door is open kept open too long. If the choose a time when the empty and proceed as follows:

1. Remove existing food baskets, unplug the appliance, mains power and leave the room ventilated to accelerate the process.
2. When defrosting is complete, your freezer as described.
3. The gaps beside

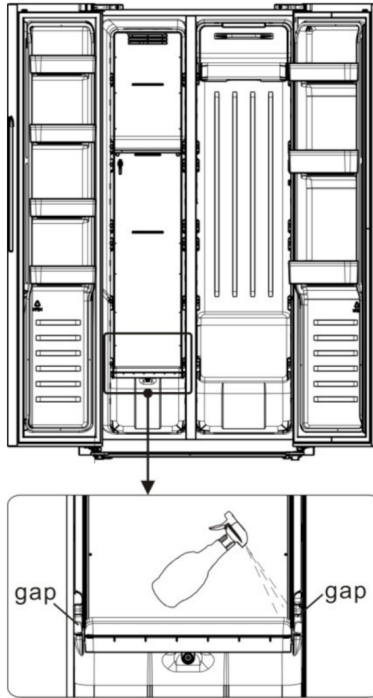


Warning!

Do not use sharp objects to remove frost from the freezer compartment. Only after the interior is completely dry should the appliance be switched back on and plugged back into the mains socket.

Door seals cleaning

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

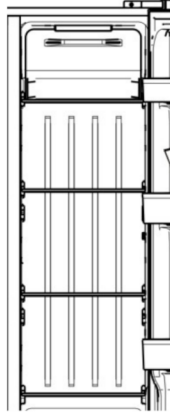

Caution! Only after the interior is completely dry should the appliance be powered on.

Replacing the LED light

Warning: The LED light should not be replaced by the user! If the light is damaged, contact the manufacturer for assistance. To replace the light, the following steps can be followed:

1. Unplug your appliance from the mains socket.
2. Remove light cover by pulling it out.
3. Hold the LED cover with one hand and pull it with the other hand to release the connector latch.
4. Replace LED light and push it back in place.

Hints for fresh food refrigeration

- Do not place hot food directly into the fridge or freezer, the internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Do cover or wrap the food, particularly if it has a strong flavor.
- Place food properly so that air can circulate freely around it.

Hints for refrigeration

- Meat (All Types) Wrap in polythene food wrap and place on the glass shelf above the vegetable drawer. Always follow food storage times and use by dates suggested by manufacturers.

- Cooked food, cold dishes, etc.:

They should be covered and may be placed on any shelf.

- Fruit and vegetables:

They should be stored in the special drawer provided.

- Butter and cheese:

Should be wrapped in airtight foil or plastic film wrap.

- Milk bottles:

Should have a lid and be stored in the door racks.

Hints for freezing

- When first starting-up or after a period out of use, let the appliance run at least 2 hours on the higher settings before putting food in the compartment

to make it possible to store only the quantity required.

- Wrap up the food in polyethylene food wraps.

- Do not allow fresh food to touch the food which is frozen to avoid temperature rise.

- Iced products, if consumed after removal from the compartment, will probably cause burns to the skin.

- It is recommended to lay a frozen package in order to reduce the storage time.

Hints for the storage of frozen food

- Ensure that frozen food is stored correctly by the food retailer.

- Once defrosted, food should be consumed rapidly and should not be stored to exceed the storage period suggested by the food manufacturer.

Switching off your appliance

If the appliance needs to be switched off for an extended period, it should be taken preventive measures for the appliance.

1. Remove all food.
2. Remove the power plug from the socket.
3. Clean and dry the interior.
4. Ensure that all the doors are closed slightly to allow air to circulate.

engineer or the shop where you purchased the product.

Warning! A child entrapment warning statement is included in either the instructions or in a use and care manual provided with each refrigerator or freezer.

DANGER: Risk of child entrapment. Before you throw away your refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged in properly.
	Check the fuse or circuit of your power supply. If necessary, call an electrician.
	The ambient temperature is too low. Try setting the temperature to a colder level to solve this problem.
	It is normal that the freezer is not operating for a short time after the power is restored, or for a short time after the appliance has been unplugged to protect the compressor.
Odours from the compartments	The interior may need to be cleaned.
	Some food, containers or wrapping cause odours.
Noise from the appliance	<p>The sounds below are quite normal:</p> <ul style="list-style-type: none"> • Compressor running noises. • Air movement noise from the small fan motor in the freezer compartment or other compartments. • Gurgling sound similar to water boiling. • Popping noise during automatic defrosting. • Clicking noise before the compressor starts. • Clicking noise when you get the water. • The motor running noises when you get the water.
	<p>Other unusual noises are due to the reasons below. You need you to check and take action:</p> <p>The cabinet is not level.</p> <p>The back of appliance touches the wall.</p>

A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food is placed within the appliance to ventilation. Ensure that door is fully closed. If frost, please refer to the “Cleaning and care” chapter.
Temperature inside is too warm	You may have left the doors open too long or the doors are kept open by some obstacle; or located with insufficient clearance at the side.
Temperature inside is too cold	Increase the temperature by following the “Temperature” chapter.
Doors can't be closed easily	Check whether the top of the refrigerator is 10-15mm to allow the doors to self close, or if something is preventing the doors from closing.
Water drips on the floor	The water pan (located at the rear bottom of the refrigerator) may not be properly leveled, or the draining pan underneath the top of the compressor door may not be properly positioned to direct water into this drain. The drain spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.
The light is not working	<ul style="list-style-type: none"> •The LED light may be damaged. Refer to the “Troubleshooting” in cleaning and care chapter. •The control systems has disabled the lights if the doors being kept open too long, close and recheck the door and reactivate the lights.
Hear water bubbling in the refrigerator	This is normal. The bubbling comes from the refrigerant coolant liquid circulating through the refrigerator.

Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.


Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of a suitable waste collection container to recycle it.

Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug

Warning! Refrigerators contain refrigerant and gases in the insulation. These gases must be disposed of professionally as they may cause eye irritation. Ensure that tubing of the refrigerant circuit is not damaged prior to professional disposal.

	Correct Disposal of this product
	<p>This marking indicates that this product should not be disposed of as household wastes throughout the EU. To prevent possible damage to the environment or human health from uncontrolled waste disposal, it is the responsibility of the user to promote the sustainable reuse of material resources. For your used device, please use the return and collection system provided by the retailer where the product was purchased. They can take care of environmental safe recycling.</p>

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase in the temperature of the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and air circulation systems.
- Store raw meat and fish in suitable containers in the refrigerator, so as to avoid contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, making icecream and making ice cubes.
- One-, two- and three- star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp.[°C]	Appropriate food
1	Fridge	+2~+8	Eggs, cooked food, packed food, fruits and vegetables, dairy products, soft drinks, beer and other food products. Not suitable for freezing.
2	(***)*-Freezer	≤-18	Seafood(fish, shrimp, shellfish), aquatic products, frozen food products(recommended time), nutrition values and taste (recommended time), suitable for frozen fresh food.
3	***-Freezer	≤-18	Seafood(fish, shrimp, shellfish), aquatic products, frozen food products(recommended time), nutrition values and taste (recommended time). Not suitable for freezing fresh food.
4	** -Freezer	≤-12	Seafood(fish, shrimp, shellfish), aquatic products, frozen food products(recommended time), nutrition values and taste (recommended time). Not suitable for freezing fresh food.
			Seafood(fish, shrimp, shellfish), aquatic products, frozen food products(recommended time), nutrition values and taste (recommended time). Not suitable for freezing fresh food.

			for consumption within the no more than 2 days). See for 15 days, it is not recom above 0°C).
8	Fresh Food	0~+4	Fresh pork, beef, fish, chick etc.(Recommended to eat day, preferably no more tha
9	Wine	+5~+20	red wine, white wine, spark

Note: please store different foods according to the compartments
temperature of your purchased products.

- If the refrigerating appliance is left empty for long periods, switch off,
and leave the door open to prevent mould developing within the appliance.

Water dispenser cleaning(special for water dispenser products):

- Clean water tanks if they have not been used for 48h; flush the water
to a water supply if water has not been drawn for 5 days.

WARNING! Food needs to be packed in bags before putting into the
liquids need to be packed in bottles or capped containers to avoid the
product design structure is not easy to clean.

fridgemaster

FRIDGEMASTER
Ground floor, Munroe Court,
White Rose Office Park,
Millshaw Park Lane,
Leeds LS11 0EA
United Kingdom

Fridgemaster Technical helpline and
Service Centre
Telephone 0191 387 0804

Fridgemaster@0800repair.com



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.



For more information, please contact the local authority or your retailer where you purchase the product.

4296433