 


# Malvern 6 Drawer Unit

Assembly Instructions - please keep for future reference

346/8618

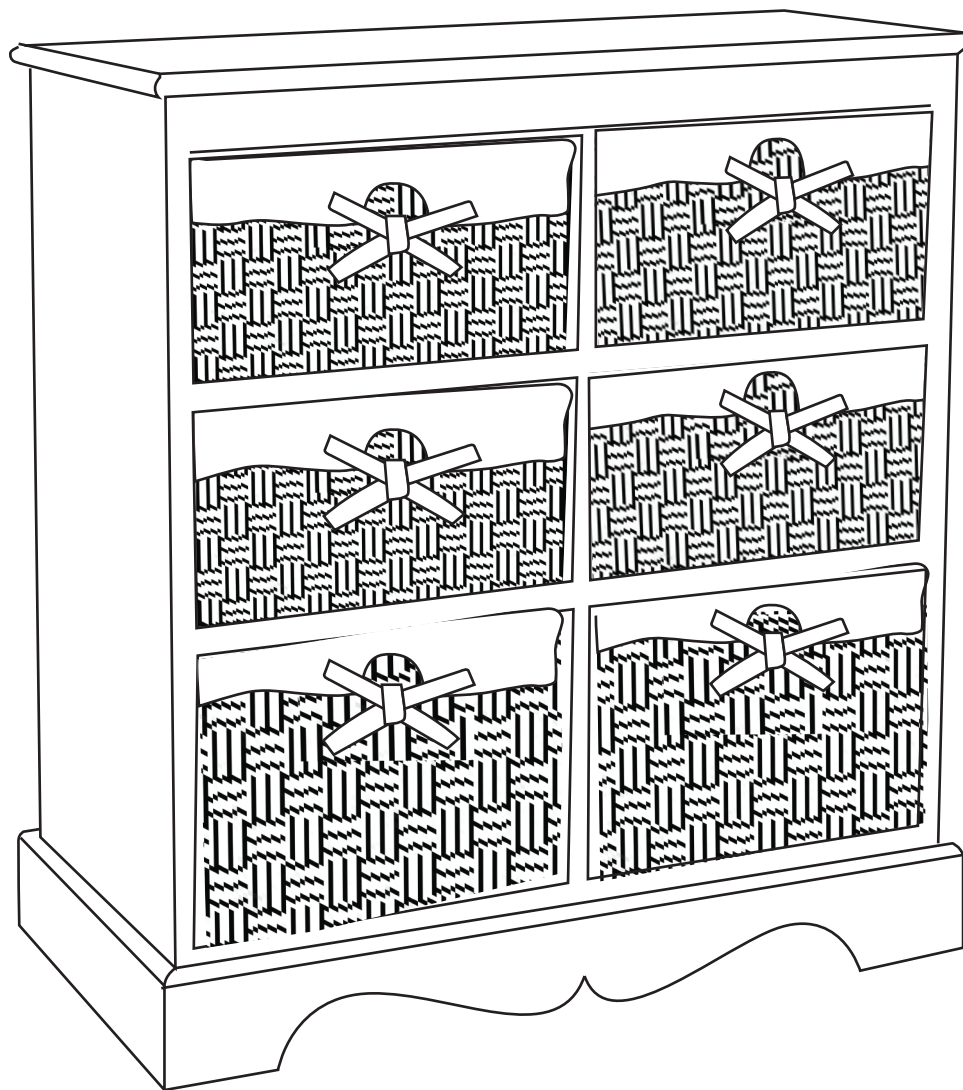

## Dimensions

Width - 63cm

Depth - 26.5cm

Height - 76cm

**Important** – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640800**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

Check you have all the components and tools listed on pages 3 and 4.

- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## WARNING

**In order to help prevent overturning – please follow these instructions**

To help prevent product toppling over please follow the below steps:-

- Use the anti tip strap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

 

 


Please note that only the anti tip strap is provided.  
You will need to provide wall plugs and screws applicable for your wall type

# Components - Fittings

If you have damaged or missing components, call the Customer Helpline: **0845 6400800**


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

 
<p><b>A</b>  Wall Strap Screw x 1</p>	<p><b>B</b>  Wall Plug x 1</p>	<p><b>C</b>  Wall Screw x 1</p>	<p><b>D</b>  Wall Strap x 1</p>
<p><b>E</b>  Washer x 2</p>			

## Tools required

 Phillips screwdriver (medium & large)

 Drill (for wall drilling only)

Ruler – Use this ruler to help correctly identify the screws and parts



# Assembly Instructions

## Step 3

The Malvern Unit is floor standing, but it is recommended that the unit is secured to the wall.

1. Connect 1 x wall strap **D** to the reverse of the unit with 1 x washer **E** and screw **A**

2. Move the units into desired position.

3. Mark the wall with a suitable scribe the position of the fixing hole.

 


**Warning:**  
Before drilling, check wall for hidden pipes and cables.

4. Drill hole and insert wall plug **B**

5. Secure the strap to the wall using 1 x washer **E** and wall screw **C**

*Note:* To hide the strap behind the unit, drill the hole lower than the top of the unit.

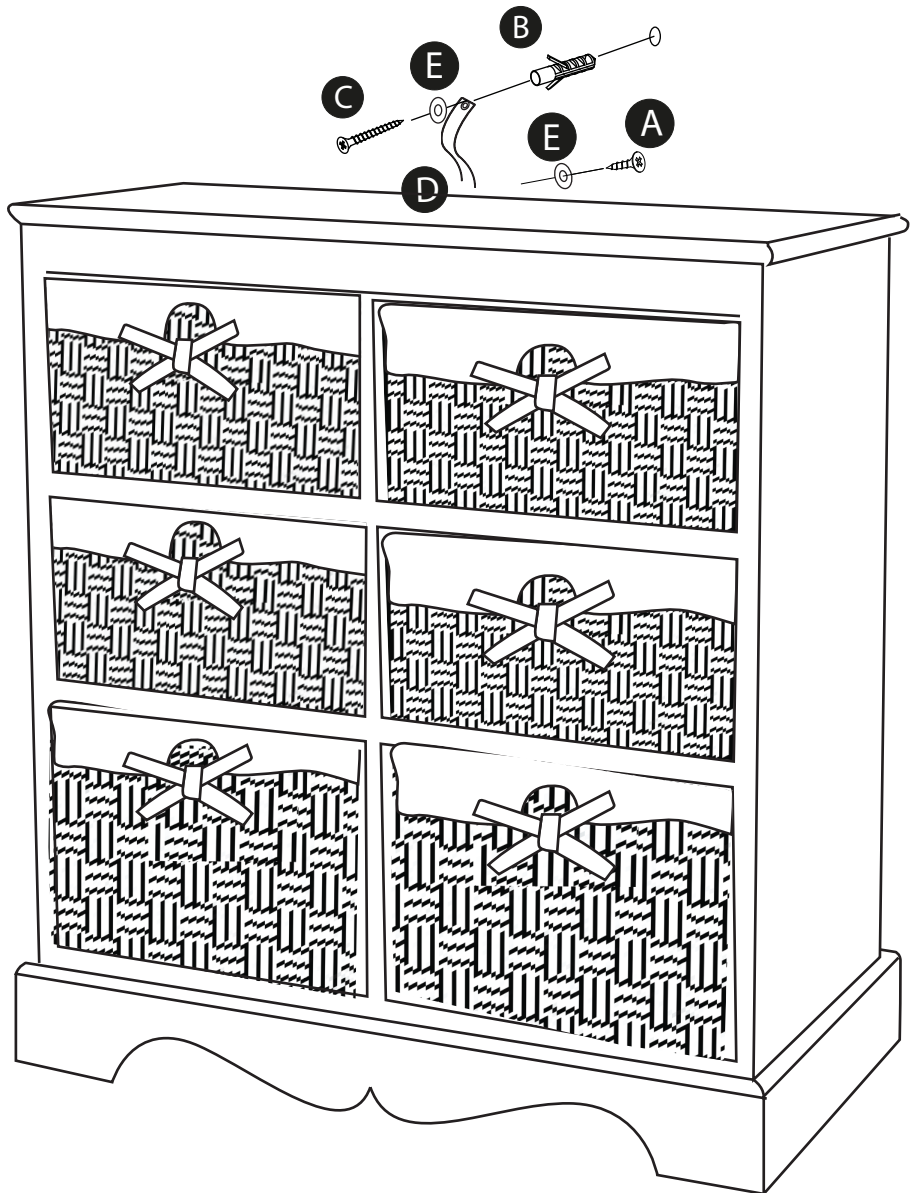


Assembly Complete

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 6400800**

# A Guide to Wall Mounting & Fixings
 
## Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using the incorrect fixings is the responsibility of the installer.



**Important:** when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit.** Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## Types of walls

 
You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

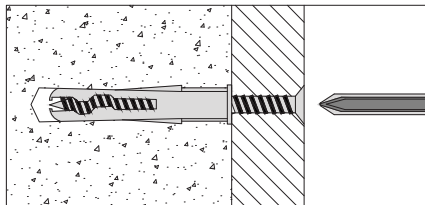


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.3 "Cavity Fixing" wall plug

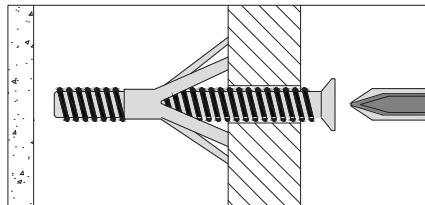


For use with plasterboard partitions or hollow wooden doors.

 No.5 "Hammer Fixing" wall plug

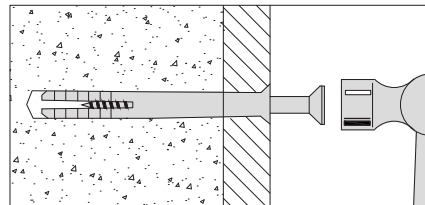


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.2 "Plasterboard" wall plug

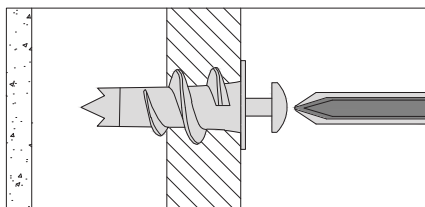


For use when attaching light loads onto plasterboard partitions.

 No.4 "Cavity Fixing - Heavy Duty" wall plug

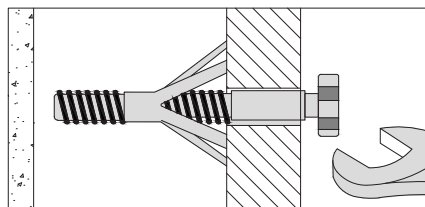

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.4 "Shield Anchor" wall plug - heavy loads

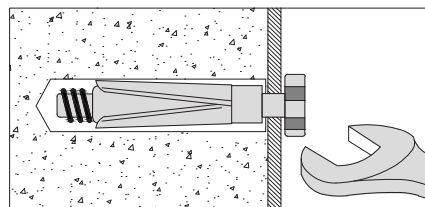

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



## Care & Maintenance

**Safety:** always check the fitting and location to ensure your safety in and around the home.

**Fitting:** from time to time check the fitting: to ensure the wall plugs or screws do not become loose.

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 6400800