

PLEASE NOTE

Not for children with a body weight of more than 20Kg

Warning. Protective equipment must be worn.


The scooter should be used with caution, as it requires great skill, so as to avoid falling or collision with third parties. We recommend that protective equipment such as helmet, gloves and knee/elbow pads are worn.

please BEWARE of the potential dangers of using this scooter on the public highway.



Universal Cycles plc
Festival Leisure Park, Basildon, Essex, England SS14 3WB
T: 44(0)1268 247 000 F: 44(0)1268 247 047
E: info@universalcycles.plc.uk
www.universalcycles.plc.uk



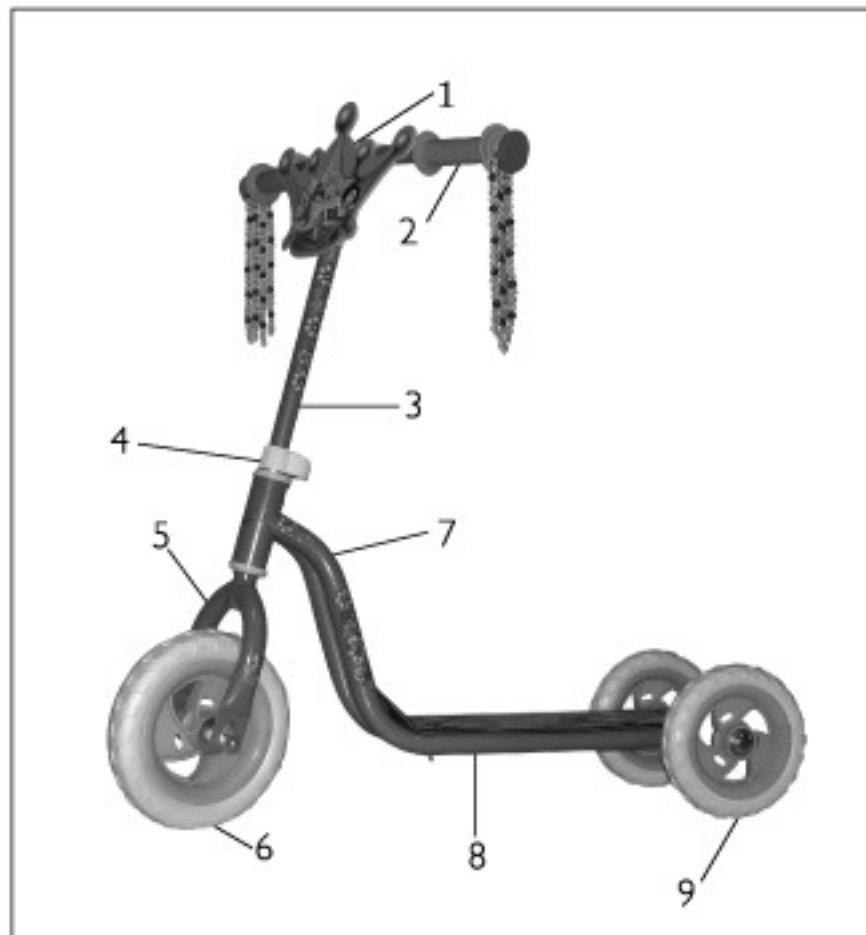

UNIVERSAL FUN SCOOTER. PARTS DESCRIPTION

1. Handlebar Pad(if supplied)
2. Handlebar Grip
3. Handlebar Assembly
4. Clamp/Cover
5. Forks
6. Front Wheel
7. Frame
8. Stand Plate
9. Rear Wheel
10. Hub Cap

3-WHEEL FUN SCOOTER

NOTE: Please read and keep this instruction manual for future reference.

IMPORTANT INFORMATION

This scooter was designed and manufactured with all reasonable care. In line with the manufacturers safety policy and European Standard EN71 your attention is drawn to the following important information which is given in the interest of your child's safety. This scooter is intended to be assembled and safety checked by an adult, before use by a child no younger than 3 years of age. On account of its dimensions and characteristics this scooter may be unsuitable for children under 36 months of age and should be kept away from their reach.

WARNING

This scooter must be used under the direct supervision of an adult. It is important to read the information contained in this Owners Manual and, in particular, the assembly instructions, working instructions, safety checks and maintenance details. Failure to observe these could expose the rider to risk of injury and may damage the bicycle.

ADULT SUPERVISOR AND USER PRECAUTIONS

- Ensure the rider is appropriately dressed.
- The scooter should not be used on hills, steep slopes, roads or where vehicles or animals may have access or be present.
- When used in and around a dwelling the scooter should be kept away from hazardous areas such as kitchens, stairs, patio windows, etc.

- The scooter should only be used on obstruction free smooth and level surfaces such as carpet, tiles, tarmac, concrete or lawned surfaces.
Never allow more than one child to use the scooter at one time.
- It is most important that the rider always looks in the direction the scooter is travelling and takes care to avoid other children or unforeseen obstructions.
- Never allow the user to put any part of the scooter in their mouth or to attempt to put any part of his or her body, or any play-things into the moveable or moving parts of the scooter. The rider should be instructed accordingly.
- When readjusting the handlebars, pay particular attention to minimum insertion marks.
- Routine safety checks and regular maintenance should be carried out.
- Always remember that the braking efficiency of a scooter decreases in wet conditions.

USING THE SCOOTER

- Make sure the child is comfortably positioned on the fully assembled and checked scooter.
- Demonstrate the steering to the child until they have mastered the function and operation of the handlebars and steering assembly.
- Demonstrate how to safely stop the scooter.
- The time taken for a child to master and then co-ordinate each operation can vary considerably. Only when the child has reached a stage where they are able to balance the scooter should the child be allowed to use the scooter unassisted, though not unsupervised.

MAINTENANCE AND SAFETY INFORMATION

Congratulations on your purchase of a Universal scooter. In an effort to promote safety and fun with your use of the scooter, we at Universal would like to offer the following maintenance and safety information to improve your scooter safety and enjoyment. Your Universal scooter is a quality scooter, it has been constructed utilising quality components available through most bicycle shops. With periodic maintenance, common sense use and care your scooter can provide many years of riding enjoyment.

ASSEMBLING YOUR FUN SCOOTER

IMPORTANT:

Remove the scooter and parts from the carton. Layout all the parts and read the Assembly Instructions in this manual before assembling your scooter. The instructions are in a step by step sequence. Save all packaging and material until assembly has been completed.

1) Rear Wheels

The rear axle comes with one "dotcap" already fitted. Slide a large steel washer on to the free end of the axle followed by a wheel. Slide a further large washer, followed by a plastic spacer and then insert the axle through the holes in the rear part of the frame.

To assemble the other side, slide a spacer, followed by a large washer, followed by the wheel and a further plain washer onto the axle. Lay the scooter on its side making sure that the axle with the dotcap already fitted is firmly in contact with the floor. Place the one remaining dotcap onto the free end of the axle and gently, but firmly, hit the dotcap with a small hammer or similar object. The axle should completely penetrate the dotcap. Stand the scooter up and ensure the rear wheels freely turn.

2) FRONT WHEEL

Slide a plastic washer over the front fork column. Insert the fork column through the head tube of the frame and slide a further plastic washer over the part that protrudes through the head tube. Slide the clamp (complete with nut and bolt) over the protruding end of the fork column. Place the plastic handlebar clamp cover onto the stem of the handlebar assembly making sure the closed top faces upward to the handlebars/grips. Insert the handlebar assembly into the clamp/fork tube. Ensure that at least 65mm (2 1/2") of handlebar stem sits within the fork tube.

Ensure the handlebars sit at 90 degrees to the front wheel and then securely tighten the clamp nut and bolt.

3) HANDLEBAR PAD (if supplied)

Position the foam padding onto the handlebars. Place the handlebar pad on top of the foam and secure with the velcro strip.

4) FRONT PLAQUE (if supplied)

The front plaque is positioned on the front of the handlebars and is attached ^c with the plastic ties ~~are provided.~~

using the plastic clips supplied.

WARNING:

Before letting a child ride this scooter, ensure that all nuts, bolts and fixings are secure.



MAINTENANCE

1. Frequent inspections should be carried out to ensure that nuts, bolts and fixings are secure and that no parts are worn or damaged.
2. Handlebars: Adjust for your child's comfort and proper fit. Make sure at least a distance of 2.5" (65mm) is inserted into the headset. Securely fasten the handlebar bolt and nut.
3. It is most important to replace worn or damaged handlebar grips.
4. Periodically and sparingly lubricate moving parts with a light oil such as WD40, i.e. front axle, rear axle and headset bushes.

Thank you for purchasing a Univesal Scooter. We hope it gives your child much enjoyment and play value.