


Double Swing Set

Assembly & User Instructions - Please keep for future reference

367/7423

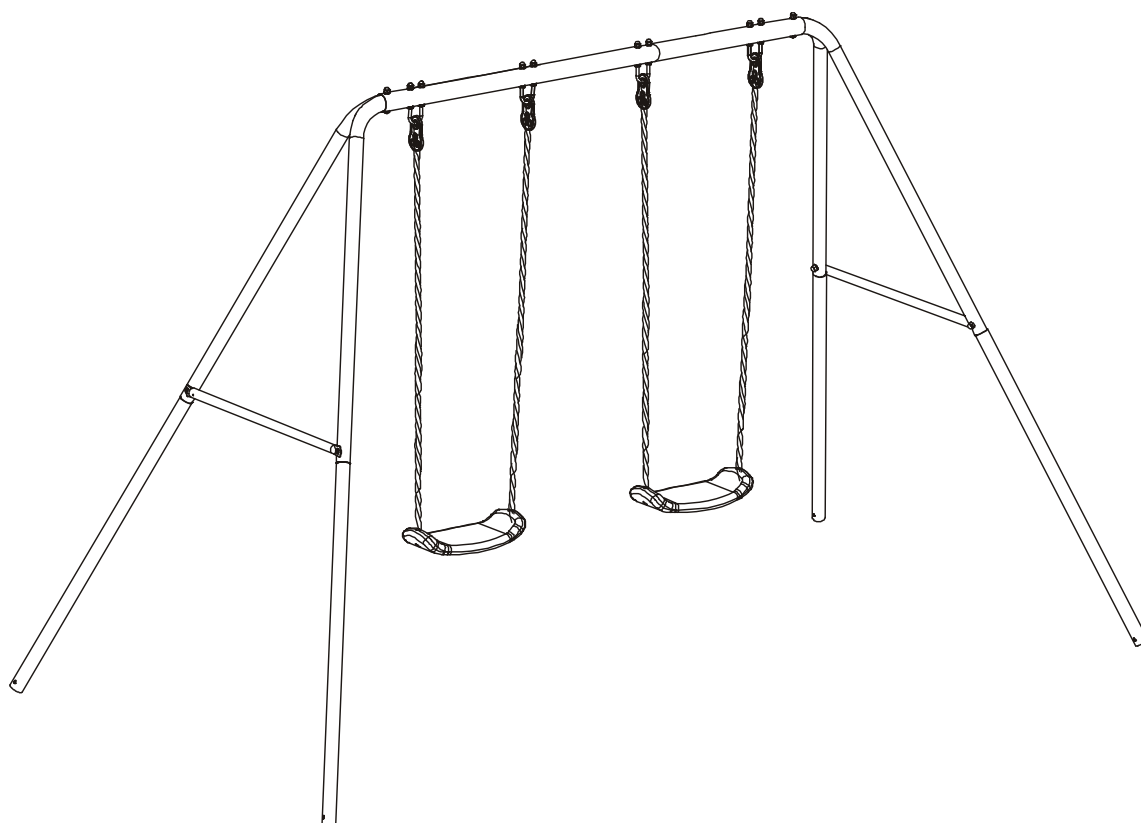

Important

Age: 3 - 8years
Maximum user
weight: 45kg

Tips: It will take 2 adults
around 30 minutes to
assemble.

Important - Please read these instructions fully before assembly or use.

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.

If you need help or have damaged or missing parts, call the **Customer Helpline: (+44) 0330 0904 420**

Contents

Warnings	2-3
Parts	4
Assembly Instructions	5-9
Care and Maintenance	10





Warnings

Important –Please read these instructions fully before assembly or use.



WARNING

Please read this instruction manual before you start to assemble or use this swing set. You must follow all of the safety instructions while using this equipment. Be absolutely sure that the surface on which this swing set is set up on is properly surfaced with fine sand, wood chips or double shredded bark mulch .Do not use this swing set on hard packed soil ,concrete or any other kind of hard surface. Read all cautionary statements on pages 2 and 3 before using this equipment.



WARNING

YOUR CHILD'S SAFETY DEPENDS ON YOU!

- Suitable for children aged 3-8 years.
- **WARNING!** Not suitable for children under the age of 36 months because of small part(s)-choking hazard.
- Adult supervision is required at all times whilst the product is in use. Never leave children unattended during play.
- Only one child per seat at any one time.
- For outdoor use.
- Check all nuts, bolts and fittings for tightness and tighten if required.
- Check all coverings for bolts and sharp edges and replace when required.
- Oil all metallic moving parts.
- Check swing seats, ropes and other means of attachments for evidence of deterioration. Replace when required in accordance with the manufacture's instructions.
- Please take note: As an extra precaution, check this toy regularly for signs of wear and damage.
- Place the product on a level surface at least 2 metres from any structures or obstructions such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- For safety reasons, this swing **MUST** be anchored into the ground.
- Anchors shall be placed level with or under the ground in order to reduce the risk of tripping.
- Ensure the child is not facing the sun when on the swing.
Leave all fittings finger-tight until assembly is complete, for ease of construction. The tighten firmly.
- This item is not for adults or children weighing more than 45kg.
- **DO NOT** install the product on concrete, asphalt or hard surfaces.
- **DO NOT** allow children to stand on the swing seats.
- **DO NOT** allow children to get off the swings while they are still moving.
- **DO NOT** twist swing ropes or wrap them over the top bar.
- **DO NOT** allow loose, hooded or baggy clothes to be worn since children can get trapped and may be unable to free themselves.
- **DO NOT** allow children to climb on this equipment.
- **DO NOT** allow children to wander into the play area when the equipment is in use.
- Swing must not exceed an angle of 60 degrees from the ground.
- Failure to assemble and maintain this item as per these instructions may cause injury to the user.
- Packaging materials are not toys. Please remove all packaging and packing tags/wires before giving this toy to your child.
- Adult assembly required.
- For use under adult supervision.
- Maintenance to be carried out under the direct supervision of a responsible adult.
- For family domestic use only .
- Once assembly is complete, carefully check the equipment before use. If you find any problems, do not allow children to use the equipment until it is fit for use.



Safety Information

Important –Please read these instructions fully before assembly or use.

- Do not let children use the equipment until it has been fully assembled.
- Remove all assembly tools once fully assembled.
- This product accommodates no more than 2 children.
- Do not attach items to the equipment that are not specifically designed for use with this product. Such as, but not limited to cables skipping ropes and chains as they may cause strangulation hazards.
- Not suitable for hiring or commercial use.
- Never use the equipment in any manner other than intended.
- Do not use the product when temperature are expected to drop below 0. Remove all plastic parts and place indoors after each use.
- Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock-absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.
- However each material is only effective when properly maintained. Material should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. Otherwise serious injuries may occur from a fall.
- Please keep assembly and installation instruction for further reference.
- Warning. Only for domestic use.

Parts

If you have damaged or missing parts,
call the **Customer Helpline: (+44) 0330 0904 420**

 
Please Check you have all the parts fittings listed below




1 Beam x 1pcs




2 Beam x 1pcs



3 Leg x 2pcs

 


4 Leg x 2pcs

 

5 Rail x 2pcs



6 Leg x 4pcs

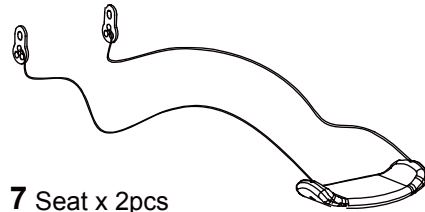

7 Seat x 2pcs

 
 


 
 
 

 


8 Anchor x 4pcs




9 Plasti Cap x 4pcs

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p>A </p> <p>x 2 (M8x62)</p>	<p>B </p> <p>x 4 (M8x54)</p>	<p>C </p> <p>x 24 (Φ19xΦ8.5 mm)</p>	<p>D </p> <p>x 4 (Φ19xΦ8.5mm)</p>
<p>E </p> <p>x 14 (M8)</p>	<p>F </p> <p>x 14 (Φ13.5xΦ8.5mm)</p>	<p>G </p> <p>x 4 (M8 x114mm)</p>	<p>H </p> <p>x 1(6mm)</p>
<p>I </p> <p>x 1 (10&13)</p>			

 Ruler - Use this ruler to help correctly identify the bolts/screws



Assembly Instructions

Step 1

Connect Beams (1) and (2) together. No need to secure with screws in this step.

Attach Legs (3) and (4) to Beam (1) and (2) as shown in Figure 1. The legs need to be inserted on the two sides of the swing frame.

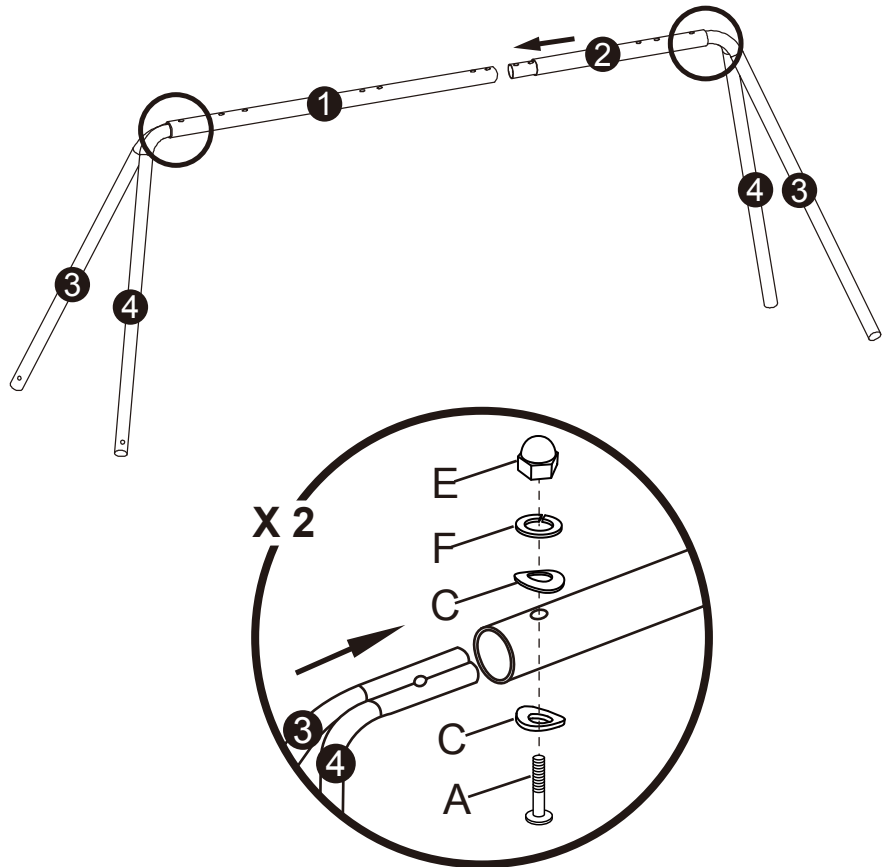
 





Figure 1

			
A	C	J	E
x 2pcs	x 4pcs	x 2pcs	x 2pcs

Assembly Instructions

Step 2

Attach swing Seats (7) to Beam (1) and (2) as shown in Figure 2.

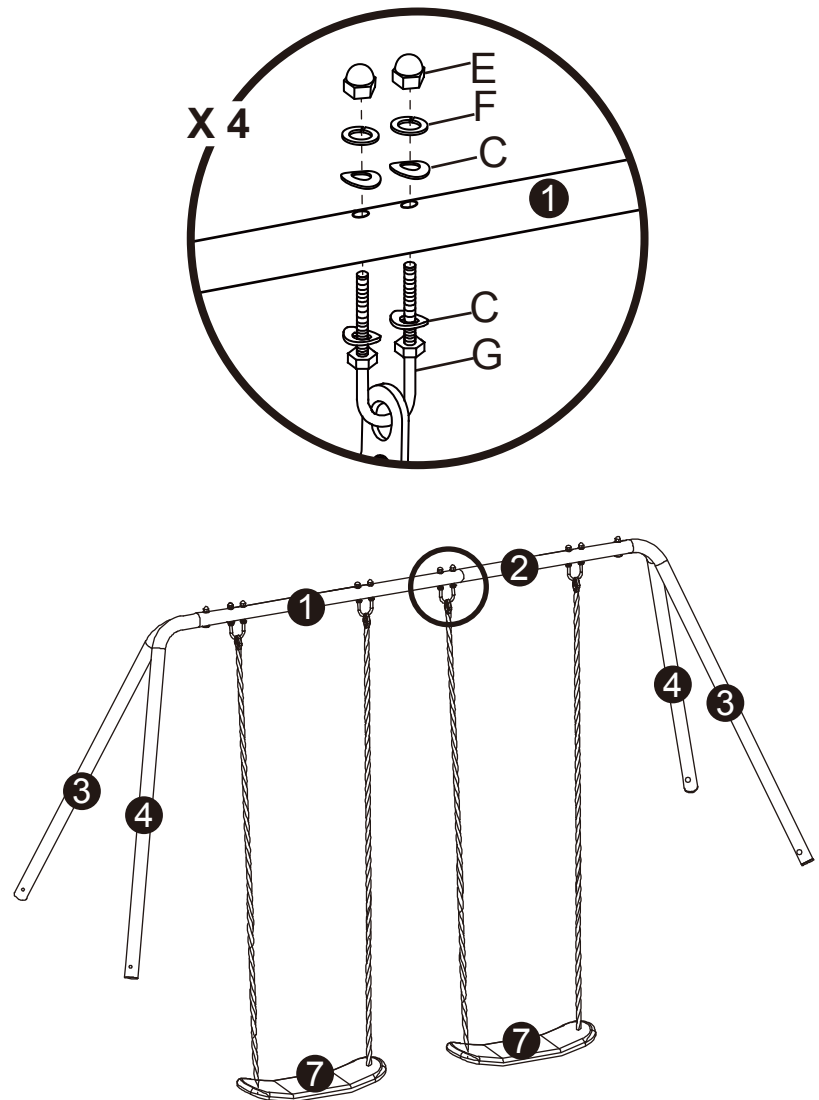


Figure 2

G	C	J	E
x 4pcs	x 16pcs	x 8pcs	x 8pcs

Assembly Instructions

Step 3

Insert Legs (6) into Legs(3) and (4) and secure together with Rail (5) as shown in the enlarged diagram.

Note:

-Plastic cap (9) needs to be inserted into rail (5) before securing the bolt.

-Rail (5) needs to be attached to the outer sides of the swing frame.

After finishing all steps above go over the entire unit and tighten all bolts.

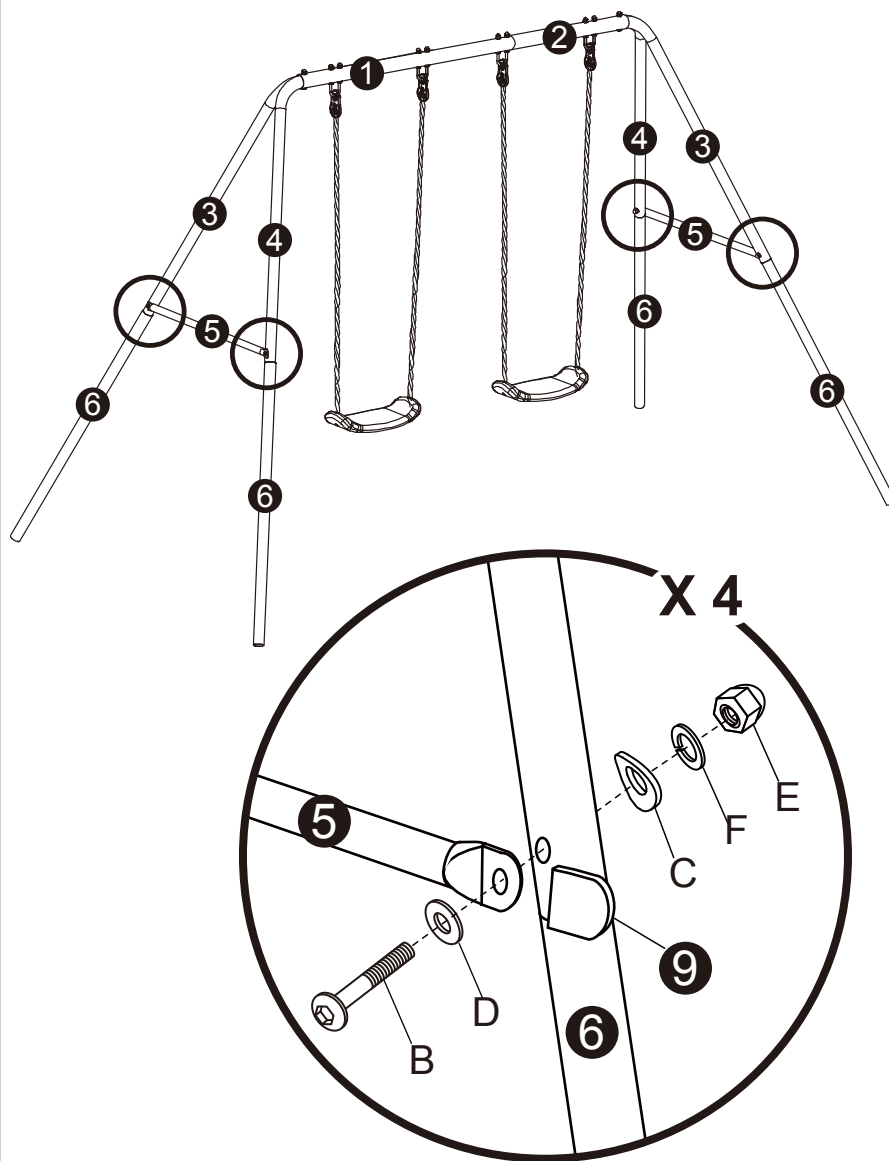
 







Figure 3

				
B	C	D	J	E
x 4pcs	x 4pcs	x 4pcs	x 4pcs	x 4pcs

Assembly Instructions

Step 4

Attach anchors (8) to the bottom of legs (6) as shown in Figure 4

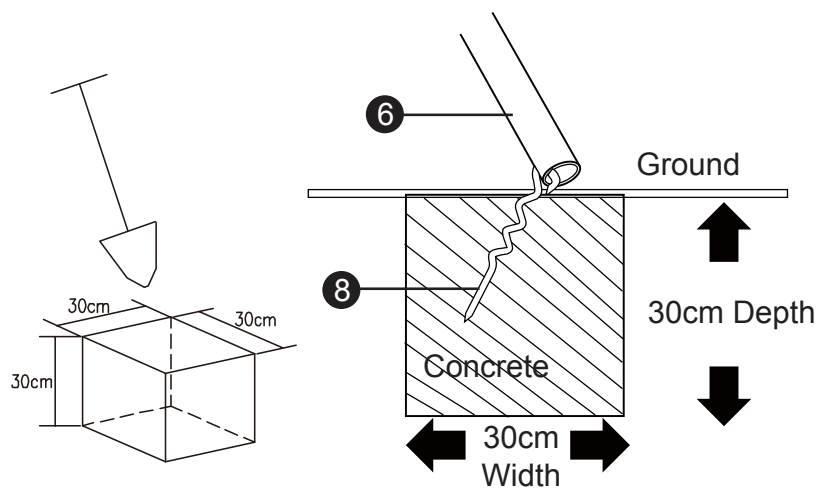

Assembly Instructions


SEAT ADJUSTABLE GUIDE

THE LENGTH OF THE ROPE IS ADJUSTABLE FOR THE HEIGHT OF THE CHILD THROUGH THE SEAT CONNECTOR.

TO ADJUST, LOOSEN THE KNOT ON THE SEAT CONNECTOR, PULL ROPE THROUGH THE HOLES AND TIGHTEN AGAIN.

MAKE SURE THAT THE KNOTS ARE TIGHT AND THAT BOTH ROPES ARE ADJUSTED SO THAT THE SEAT IS HORIZONTAL.

IMPORTANT: MINIMUM CLEARANCE BETWEEN THE FOOTREST/SEAT AND THE GROUND SHOULD BE 35 CM.

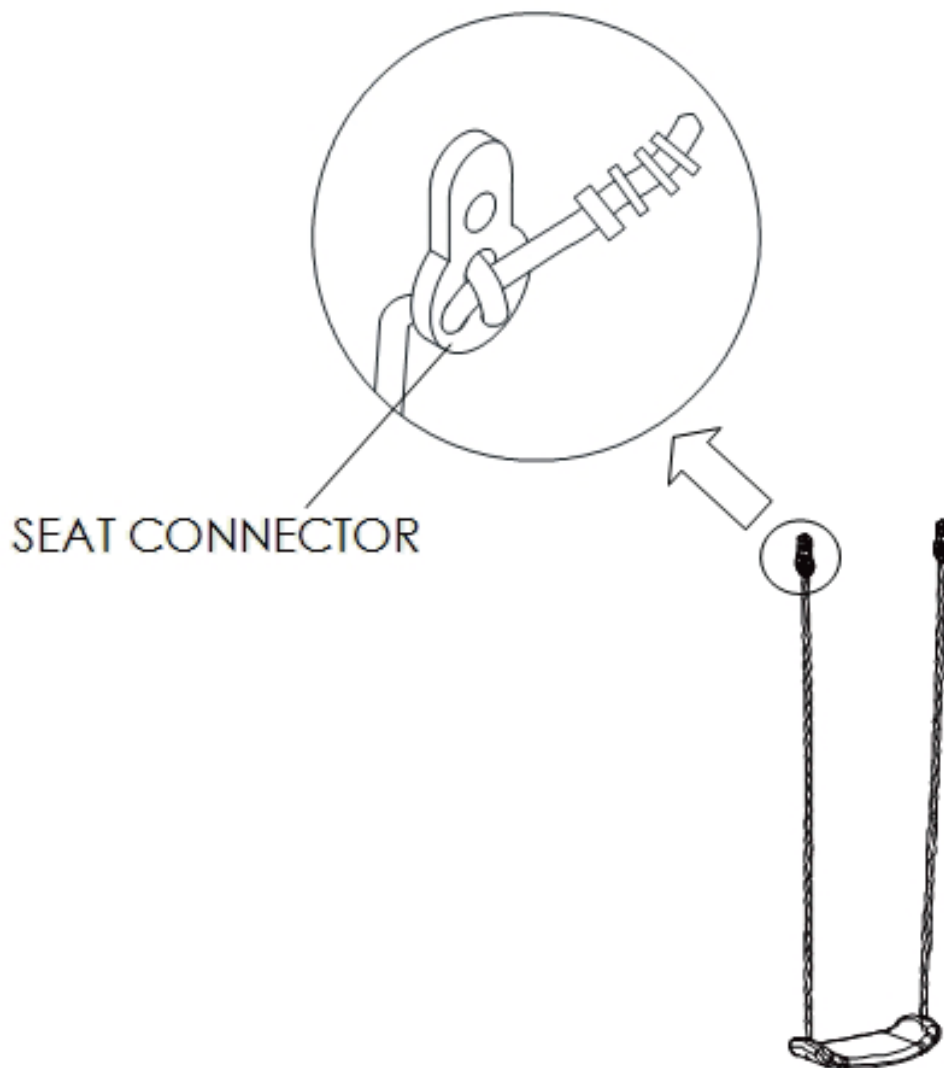

Care and Maintenance

General

This Double Swing Set was designed and manufactured with quality materials and craftsmanship.

If correct care and maintenance is taken, it will provide users with longer usage for exercise, fun and enjoyment.

Inspect regularly for:

CHECK ALL NUTS AND BOLTS TWICE MONTHLY DURING THE USAGE SEASON FOR TIGHTNESS AND TIGHTEN AS REQUIRED. IT IS PARTICULARLY IMPORTANT THAT THIS PROCEDURE BE FOLLOWED AT THE BEGINNING OF EACH SEASON.

- Never use pliers to tighten up screws –these can cause damage to both the paintwork and the special anti-corrosion plating.
- Tighten all nuts and bolts securely. Replace as needed. If not checked regularly, bolts can be loose or missed and components can become detached and cause injuries.
- Check the unit at the beginning of the usage season and monthly thereafter for evidence of deterioration.
- Immediately remove and replace any items that appear to be weak or broken. Contact Customer Support for replacement parts.
- Check all covers designed for bolts and sharp edges regularly to be certain they are present and in good condition. Replace as needed. It is particularly important that all covers are checked prior to the first use each season.
- Inspect handle bar, hardware, and etc., for proper closure and for signs of wear, deterioration, rust and/or damage. Replace as needed.
- Lubricate all metallic moving parts monthly during the usage season. Applying a light coat of automobile wax to all metal tubing surfaces will help protect your unit and add to its longevity. Sand any rusted areas of the metal tubing and repaint using a non-lead based paint.
- Remove plastic seats and store indoors, or do not use when the temperature drops below 32°F/0°C.
- Check unit for scuffs, burrs, sharp edges and any other defects that may occur from assembly, abuse, shipping or everyday use. Burrs and sharp edges may be filed down until smooth and covered with duct tape if necessary.

- To help maintain the products appearance, occasionally clean the seats and metal framework with a damp cloth lightly – but DO NOT use abrasive chemical cleaners.
- When the time comes to disassemble and dispose of this product, please completely disassemble the unit and discard it in a safe place and manner so as not to present any hazard to any individual. It is important to check and maintain the main parts at regular intervals. If these checks are not carried out, the toy could overturn or otherwise become a hazard. Whenever practical, the instructions shall also be affixed to the toy.

IMPORTANT! KEEP FOR FUTURE REFERENCE.

WARNING!

Suitable for children aged 3-8 years. Not suitable for children under the age of 36 months because of small part(s)-choking hazard. Packaging materials are not toys. Please remove all packaging and packing tags/wires before giving this toy to your child. This item is not for adults or children weighing more than 45kg. For family domestic use only. Suitable for outdoor use. It is important that children be supervised at all times. Do not leave children unattended. Packaging materials are not toys.



WARNING! Not suitable for children under 3 years due to small parts, choking hazard.



If you need help or have damaged or missing parts, call the Customer Helpline: (+44) 0330 0904 420
Produced for Chad Valley Toys. Argos Ltd. Country of origin: China
Address: 489 - 499 Avebury Boulevard, Central Milton Keynes, MK9 2NW. www.argos.co.uk