


ASDON Little **Henry**/Lity Vacuum Cleaner

Item

Operating Instructions (TO BE ASSEMBLED BY AN ADULT)

WARNING: The simulated flex and sucker plug must not be attached to mains socket.


Accessories/Tools are located underneath the black hat. To remove black hat, pull both **Tabs A** outwards and lift hat off. To replace hat onto unit, make sure both **Tabs A** are in their open postion. Locate hat onto body with Henry/ Hetty wording directly above eyes, push both Tabs A into body to secure into position.

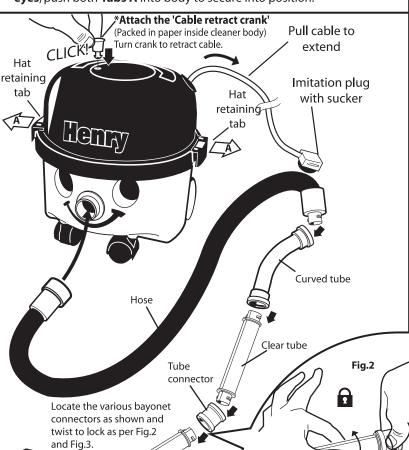

-How does it work? Locating Accessories/ Tools inside Cleaner's body: Tube Floor Tool connector (coil like this) Clear tube Clear tube Curved tube

Removing and replacing **Debris collection box:**

(view from above without hat)

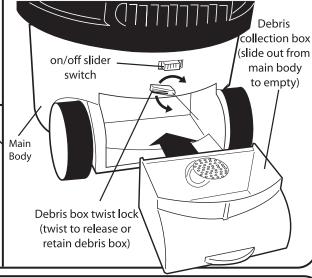

WARNING:

STRANGULATION HAZARD-Long Hose and cord.

CHOKING HAZARD - Small parts.

Floor tool

NOT SHAPP - Small parts.

Not suitable for children under 3 years.

Be careful during use due to posing a potential hazard;

The toy vacuum is an imitation of real product, The toy

vacuum shall be kept out of the reach of very young children.

TO BE USED UNDER THE DIRECT SUPERVISION OF AN ADULT.

Installing Batteries (ADULTS ONLY)

Remove the battery compartment cover (positioned underneath item) by unfastening the pozi-screw. Install 4 x "C" LR14/ E93/ AM2 batteries

Clear tube

ensuring they are placed with the polarities matching the diagram located on the battery compartment (Fig 1)

The use of alkaline Batteries is recommended for maximum performance.

Replace the battery cover and fasten the pozi-screw.

 
This symbol indicates that this product should not be treated as normal household waste. It should be recycled, so please take it to an approved collection facility











1))[

Twist to lock

Twist to lock

Fig.3

pozi-screw

Battery Notice

Install the batteries correctly observing the polarity (+) and (-) signs to avoid leakage.

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

Different types of batteries or new and used batteries are not to be mixed.

Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.