KENWOOD



English 2 - 8

۹ – ۱٤ عربي

HEAD OFFICE: Kenwood Limited, 1-3 Kenwood Business Park, New Lane, Havant, Hampshire PO9 2NH kenwoodworld.com

-A



 \Box





safety

-(13)

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- Switch off and unplug:
 - before fitting or removing parts;
 - when not in use;
- before cleaning.
- Never fit the blade unit to the power unit without the blender goblet or mill iar fitted.
- Always unplug the appliance before putting your hands or utensils in the goblet.
- Always take care when handling the blade assembly and avoid touching the cutting edge of the blades when cleaning.
- Only operate the blender with the lid in place.
- Only use the goblet with the blade assembly supplied.
- Never let the power unit, cord or plug get wet.
- Never use a damaged appliance. Get it checked or repaired: see 'service and customer care'.
- Never use an unauthorised attachment.
- **SCALD RISK:** Hot ingredients should be allowed to cool to room temperature before blendina.
- Never leave the appliance unattended when it is operating.
- When removing the blender or mill from the power unit:
 - wait until the blades have completely stopped;
 - don't accidentally unscrew the goblet or mill jar/lid from the blade assembly.

- Never run the blender empty.
- Never blend more than the maximum capacity stated in the recommended usage chart.
- To ensure long life of your blender and mills, do not run for longer than 60 seconds.
- Smoothie recipes never blend frozen ingredients that have formed a solid mass during freezing, break it up before adding to the goblet.
- Do not process hard spices such as Nutmeg or Turmeric root as they may damage the blade.
- Do not use the blender as a storage container. Keep it empty before and after use.
- Always use the blender on a secure, dry level surface.
- Never place this appliance on or near a hot gas or electric burner or where it could touch a heated appliance.
- Misuse of your blender can result in injury.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

 Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

before plugging in

 Make sure your electricity supply is the same as the one shown on the underside of the appliance.

Important - UK only

- The wires in the cord are coloured as follows:
 - Blue = Neutral
 - Brown = Live.
- The appliance must be protected by a 13A approved (BS1362) fuse.

Note:

- For non-rewireable plugs the fuse cover MUST be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be DESTROYED
 IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility and EC regulation no. 1935/2004 of 27/10/2004 on materials intended for contact with food.

before using for the first time

• Wash the parts: see 'care and cleaning'.

key

blender

- filler cap
 last is a line
- locking lid
- 3 goblet
- ④ blender sealing ring
- blender blade unit
- power unit
- ⑦ cord storage
- (8) speed + pulse control
- ice crushing button

multi mill (if supplied)

- 10 multi mill jar
- 1) multi mill sealing ring
- 12 multi mill blade unit

grinding mill (if supplied)

- (13) mill lid
- (4) grinding mill blade assembly

to use your blender

Use your blender for soups, drinks, pâtés, mayonnaise, breadcrumbs, biscuit crumbs, chopping nuts and crushing ice.

 Fit the blender sealing ring (1) into the blender blade unit (5) - ensuring the seal is located correctly in the grooved area.

• Leaking will occur if the seal is damaged or incorrectly fitted.

- 2 Screw the blade assembly onto the goblet ensuring the blade assembly is fully tightened ①. Refer to the graphics on the underside of the blade unit as follows:
 - unlocked position
 - Iocked position
- 3 Put your ingredients into the goblet.
- 4 Put the filler cap in the lid.
- 5 Fit the lid to the goblet and turn clockwise to lock.

- 6 Place the blender onto the power unit with the handle situated to the right hand side and lock by turning clockwise until you hear a "click" (2).
- The appliance will not work if the blender is incorrectly fitted.
- 7 Select a speed (refer to the recommended usage chart).

blender hints

 To blend dry ingredients - cut into pieces, remove the filler cap, then with the appliance running, drop the pieces down one by one. Keep your hand over the opening. For best results empty regularly.

- The processing of spices is not recommended as they may damage the plastic parts.
- When making mayonnaise, put all the ingredients, except the oil, into the blender. Remove the filler cap. Then, with the appliance running, add the oil slowly through the hole in the lid.
- Thick mixtures, e.g. pâtés and dips, may need scraping down. If the mixture is difficult to process, add more liquid.

	blender recommended usage chart			
speed	usage/food items	max. quantity		
1	Frothing milk	1 litre		
	Light mixes e.g. batters, milkshakes, scrambled egg	1 litre		
2 - 3	Soups & drinks Thicker mixes e.g. pâtés	1.6 litres		
	Mayonnaise	3 eggs + 450ml oil		
	Smoothie drinks Place the fresh fruit and liquid ingredients in first (includes yoghurt, milk and fruit juices) Then add ice or frozen ingredients (includes frozen fruit, ice or ice cream)	800ml liquid		
*	Ice crushing - operate in short bursts until crushed to the desired consistency.	6 cubes (125g)		
(P) pulse	Operates the motor in a start/stop action. The pulse will operate for as long as it is held in position.	_		

to use your multi mill

(if supplied)

Use your multi mill for milling herbs, nuts, coffee beans and purees.

- 1 Put your ingredients into the jar (1). Fill it no more than half full.
- 2 Fit the multi mill sealing ring (1) into the multi mill blade unit (2) - ensuring the seal is located correctly in the grooved area.
- Ensure that the seal is fitted correctly.

- 3 Turn the blade unit (2) upside down.
 Lower it into the jar, blades down
 3. Turn anti-clockwise to lock.
- 4 Place the mill onto the power unit and lock by turning clockwise until you hear a "click" ④.
- 5 Select a speed or use the pulse control.

to use your grinding mill

(if supplied)

Suitable for grinding spices, coffee beans and processing ginger, garlic and chillies.

- 1 Place your ingredients into the blade assembly ().
- 2 Fit the lid (3) and turn anti-clockwise to lock (5).
- 3 Place the mill onto the power unit and lock by turning clockwise until you hear a "click" **6**.
- 4 Select a speed or use the pulse (P) control.

mill recommended usage chart					
ingredients	mill	max qty	speed	operating time	
Herbs - best chopped when clean and dry	Multi	15g	3	5 – 10 secs	
Nuts	Multi or Grinding	50g	3	10 - 15 secs	
Coffee Beans	Multi or Grinding	50g	3	30 secs	
Baby Foods & Purees	Multi	50g	3	30 secs	
Spices – such as black peppercorns, cardamom seeds, cumin seeds, coriander seeds, fennel seeds, whole cloves etc.	Grinding	50g	3	30 – 60 secs	
Chillies	Grinding	30g	3	10 secs	
Fresh Root Ginger	Grinding	30g	3	10 secs	
Garlic	Grinding	4 cloves	3	10 secs	

hints

- For optimum performance when processing spices we recommend that you do not process more than 50g at a time in the mill.
- Whole spices retain their flavour for a much longer time than ground spices so it is best to grind a small quantity fresh at a time to retain the flavour.
- To release the maximum flavour and essential oils whole spices are best roasted prior to milling.
- Baby food/purees allow cooked food to cool to room temperature before processing in the mill.

care and cleaning

- Always switch off, unplug and dismantle before cleaning.
- Empty the goblet before unscrewing it from the blade unit.
- Do not immerse the blade unit in water.
- Do not place any parts in the dishwasher.

power unit

- Wipe with a damp cloth, then dry.
- Do not immerse the power unit in water.
- Store excess cord in the storage area at the back of the power unit (7).

blade assemblies blender and multi mill

 Remove the blade unit from the goblet or mill by turning to the unlock position
 to release.

grinding mill

- Remove the lid from the blade assembly by turning in a clockwise direction.
- 1 **blender/multi mill:** remove and wash the sealing ring.
- 2 Do not touch the sharp blades brush them clean using hot soapy water, then rinse thoroughly under the tap. Do not immerse the blade unit in water.
- 3 Leave to dry upside down.

other parts

Wash by hand, then dry.

service and customer

care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.
- If you experience any problems with the operation of your appliance, before requesting assistance refer to the "troubleshooting guide" section in the manual or visit www.kenwoodworld.com.

UK

If you need help with:

- using your appliance or
- servicing, spare parts or repairs (in or out of guarantee)
- Call Kenwood customer care on 023 9239 2333. Have your model number (e.g. BLP40) and date code (5 digit code e.g. 13L35) ready. They are on the underside of the power unit.

spares and attachments

☎ call 0844 557 3653.

other countries

Contact the shop where you bought your appliance.

- If you experience any problems with the operation of your appliance, before requesting assistance refer to the "troubleshooting guide" section in the manual or visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit www.kenwoodworld.com or the website specific to your Country.

- Designed and engineered by Kenwood in the UK.
- Made in China.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

guarantee (uk only)

If your blender goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and

• you supply your receipt to show when you bought it.

This guarantee does not affect your statutory rights.

carrot and coriander soup

25g butter 50g onion chopped 1 clove garlic crushed 640g carrot cut into 1½ cm cubes cold chicken stock 10-15ml (2-3tsp) ground coriander salt and pepper

- 1 Melt the butter in a pan, add the onion and garlic and fry until soft.
- 2 Place the carrot into the liquidiser, add the onion and garlic. Add sufficient stock to reach the 1.6 L level marked on the goblet. Fit the lid and filler cap.
- 3 Blend on maximum speed for 5 seconds for a coarse soup or longer for a finer result.
- 4 Transfer the mixture to a saucepan, add the coriander and seasoning and simmer the soup for 30 to 35 minutes or until cooked.
- 5 Adjust the seasoning as necessary and add extra liquid if required.

troubleshooting guide

Problem	Cause	Solution	
The Blender will not operate.	No Power.	Check blender plugged in.	
	Blender not assembled correctly.	Check blade unit is fully tightened to the goblet.	
Blender leaking from blade assembly.	Seal missing. Seal incorrectly fitted. Seal damaged.	Check seal is fitted correctly and not damaged. To obtain a replacement seal see "service & customer care".	
Blender seal missing from blade unit when removed from packaging.	The seal is packed pre-fitted to the blade unit.	Unscrew goblet and check that seal is fitted to blade unit. To obtain a replacement seal see "service & customer care".	
If none of the above solve the problem see "Service & Customer Care".			

الخدمة ورعاية العملاء

- في حالة تلف السلك الكهربي، يجب
 استبداله لأسباب متعلقة بالسلامة من قبل
 KENWOOD أو مركز صيانة معتمد من
 قبل KENWOOD.
- في حالة مواجهة أية مشكلة متعلقة بتشغيل الجهاز، قبل الاتصال لطلب المساعدة، يرجى مراجعة قسم "دليل اكتشاف المشكلات وحلها" في الدليل أو زيارة موقع الويب www.kenwoodword.com
 - يرجى الملاحظة بأن جهازك مشمول بضمان، هذا الضمان يتوافق مع كافة الأحكام القانونية المعمول بها والمتعلقة بحقوق الضمان والمستهلك في البلد التي تم شراء المنتج منها.
 - في حالة تعطل منتج Kenwood عن العمل أو في حالة وجود أي عيوب، فيرجى إرساله أو إحضاره إلى مركز خدمة معتمد من KENWOOD. للحصول على معلومات محدثة حول أقرب مركز خدمة معتمد من MOOD ، يرجى زيارة موقع الويب kENWOOD ، أو موقع الويب المخصص لبلدك.
 - تصميم وتطوير Kenwood في المملكة المتحدة.
 - صنع في الصين.



معلومات هامة حول كيفية التخلص الصحيحة من المنتج حسب توجيهات المجموعة الاقتصادية الأوروبية 2002/96/EC.

عند انتهاء العمر التشغيلي للمنتج يجب عدم التخلص من المنتج في مخلفات المناطق الحضرية. لا بد من أخذ المنتج إلى مركز سلطة محلية خاصة متخصصة في جمع النفايات أو موزع يقدم هذه الخدمة .إن التخلص من الأجهزة

المنزلية بشكل منفصل يجنب الآثار السلبية المترتبة على البيئة والصحة والناجمة عن أن هذا الإجراء يساعد في إعادة استخدام المواد التأسيسية مما يوفر جانباً فعالاً من الطاقة والموارد. وللتذكير بوجوب التخلص من الأجهزة المنزلية وبشكل منفصل وضع على المنتج علامة سلة مهملات ذات العجلات مشطوبة.

دليل اكتشاف المشكلات وحلها

الحل	السبب المحتمل	المشكلة
تأكدي من توصيل المازج	د. لا توجد طاقة.	المازج لا يعمل.
بمصدر التيار الكهربي.		
تأكدي من ربط وحدة	لم يتم تركيب المازج بالطريقة	
الشفرّات بإحكام في	الصحيحة.	
الدورق.		
تأكدي من تركيب حلقة	حلقة الإحكام غير مركبة.	هناك تسريب في المازج من
الإحكام بشكل صحيح	حلقة الإحكام مركبة بطريقة	ناحية قاعدة وحدة الشفرات.
وعدم تلفها . للحصول على	غير صحيحة.	
حلقة إحكام بديلة، راجعي	حلقة الإحكام تالفة.	
قسم "الصيانة ورعاية		
العملاء".		
فكي الدورق وتأكيد من	يتم تزويد حلقة الإحكام داخل	عند إخراج وحدة الشفرات من
تركيب حلقة الإحكام في	صندوق التغليف مركبة في	التغليف لم يتم العثور على حلقة
مجموعة الشفرات.	وحدة الشفرات.	الإحكام الخاصة بالمازج.
للحصول على حلقة إحكام		
بديلة، راجعي قسم "الصيانة		
ورعاية العملاء".		
قة، ففي هذه الحالة راجعي	هينها من خلال الخطوات الساب	إن لم تتم حل المشكلة التي تواج
		قسم "الصيانة ورعاية العمّلاء".

	جدول الاستخدامات الموصى بها للمطحنة			
زمن التشغيل	السرعة	الحد الأقصى للكمية	المطحنة	
ہ – ۱۰ ثوان	٣	۱۵ غرام	المطحنة متعددة الاستخدامات	الأعشاب – من الأفضل تقطيع الأعشاب عندما تكون نظيفة وجافة
۱۰ – ۱۰ ثانیة	٣	٥٠ غرام	المطحنة مت عددة الاستخدامات أو مطحنة الفرم	المكسرات
۳۰ ثانية	٣	٥٠ غرام	المطحنة مت ع ددة الاستخدامات أو مطحنة الفرم	حبوب القهوة
۳۰ ثانية	٣	٥٠ غرام	المطحنة متعددة الاستخدامات	طعام الأطفال والأطعمة المهروسية
۲۰ – ۲۰ ثانیة	٣	٥٠ غرام	مطحنة الفرم	التوابل – مثل الفلفل الأسود وبذور الهيل والكمون والكزبرة والشمرة وقرون الفلفل الحار وغيرها من أنواع التوابل
۱۰ ثوان	٣	۳۰ غرام	مطحنة الفرم	الفلفل الأحمر الحار
۱۰ ثوان	٣	۳۰ غرام	مطحنة الفرم	الزنجبيل الطازج
۱۰ ثوان	٣	٤ فصوص ثوم	مطحنة الفرم	الثوم

تلميحات

- للحصول على الأداء الأمثل عند تحضير التوابل ننصحك بعدم تحضير أكثر من
 • غرام من المكونات في المرة الواحدة داخل المطحنة.
- تحتفظ قرون التوابل الكامل بنكهتها فترة زمنية أطول من التوابل المطحونة لذلك فمن الأفضل طحن كمية صغيرة من قرون التوابل الكاملة لاستخدامها وذلك للاحتفاظ بالنكهة.
 - للحصول على أقصى نكهة وزيوت
 أساسية من قرون التوابل الكاملة فمن
 الأفضل تحميص التوابل قبل طحنها.
 - غذاء الرضع/المهروسات اتركي الأطعمة المطهية لتبرد في درجة حرارة الغرفة قبل معالجتها في المطحنة.

العناية والتنظيف

- قومي دائماً بإيقاف الجهاز، فصله عن مصدر التيار الكهربي وفك مجموعة الدورق عن وحدة الطاقة قبل التنظيف.
- قومي بإفراغ محتويات الدورق قبل فكه من وحدة الشفرات.
- لا تقومي بغمر وحدة الشفرات في الماء.
- لا تضعي أي من الأجزاء في غسالة الأطباق.

وحدة الطاقة

- قومي بمسحها بقطعة قماش رطبة، ثم تجفيفها.
- لا تقومي بغمر وحدة الطاقة في الماء.

 قومي بلف السلك الزائد في مكان تخزين السلك أسفل وحدة الطاقة ⑦.

> وحدات الشفرات الخلاط والمطحنة متعددة الاستخدامات

مطحنة الفرم

- أزيلي الغطاء العلوي عن وحدة الشفرات عن طريق لفه في اتجاه عقارب الساعة.
 - ١ الخلاط/المطحنة متعددة
 الاستخدامات: أزيلي حلقة الإحكام واغسليها.
- ٢ لا تلمسي الشفرات الحادة قومي بتنظيف الشفرات بواسطة الفراشاة باستخدام ماء ساخن وصابون، ثم قومي بشطفها جيداً تحت الصنبور. لا تقومي بغمر وحد الشفرات فى الماء.
 - ٢ أتركيها تجف في وضع مقلوب.
 الإجزاء الإخرى
 تغسل باليد، ثم تجفف.

 عند تحضير المايونيز، ضعي كل المكونات في الخلاط عدا الزيت. أزيلي غطاء فتحة التعبئة. ثم صبّي الزيت بطريقة بطيئة من خلال الفتحة الموجودة في الغطاء العلوى أثناء تشغيل الجهاز.

قد تحتاج الخلطات السميكة مثل
 المعجنات الهشة والمغموسات إلى تقطيع.
 إذا وجدت صعوبة في تحضيرها، أضيفي
 المزيد من السوائل.

جدول الاستخدامات الموصى بها للمازج			
أقصى كمية	أنواع الطعام/الاستخدام	السرعة	
۱ لتر	رغوة اللبن	١	
۱ لتر	الخلطات الخفيفة مثل الدمج ومخفوق اللبن ومزج البيض		
	الحساء والمشروبات	۳-۲	
۱،٦ لتر	الخلطات السميكة مثل المعجنات		
۳ بیضات +	المايونيز		
٤٥٠ مل زيت			
	المشروبات المرطبة		
	أولاً ضعي الفاكهة الطازجة والمحتويات السائلة في ٨٠٠		
۸۰۰ مل من السوائل	مل من السائل (بما فيها الزبادي واللبن وعصير الفاكهة)		
	ثم أضيفي الثلج أو المحتويات المجمدة (بما فيها الفاكهة		
	المجمدة والثلج والآيس كريم)		
٦ مكعبات	جرش الثلج – شغلي الجهاز في وضع التشغيل النبضي	*	
170	لحين الحصول على القوام المطلوب.	745	
	يؤدي إلى عمل المحرك بشكل بدء/ إيقاف الأداء. سوف	(P)	
-	يعمل النبض طالما يبقى في الوضع مضغوطاً.	النبض	

استخدام المطحنة متعددة الاستخدامات (في حالة تزويدها مع عبوة البيم)

- استخدمي المطحنة متعددة الاستخدامات في طحن الأعشاب والمكسرات وحبوب القهوة والمكونات ذات قوام يشبه المهروس.
 - ٢ ضعي مكوناتك بداخل الإناء (). إملئيها
 بما لا يزيد على النصف.
- ٢ ركبي حلقة الإحكام الخاصة بالمطحنة متعددة الاستخدامات (() على وحدة شفرات المطحنة متعددة الاستخدامات (() ذمع التأكد من استقرار حلقة الإحكام في موضعها بشكل صحيح داخل التجويف.
- تأكدي من استقرار حلقة الإحكام في موضعها بشكل صحيح.
- ۲ اقلبي وحدة الشفرات (1). ضعيها داخل وعاء الطحن بحيث يكون اتجاه الشفرات لأسفل (2). لفيها في اتجاه عكس عقارب الساعة لإحكام ربطها.
- ٤ ضعي المطحنة على وحدة الطاقة (الموتور) ولفيها في اتجاه عقارب الساعة لتستقر في موضع القفل وسماع صوت

- "طقطة" ().
 حددي السرعة أو استخدمي النبض للتحكم.
 استخدام مطحنة القرم (في حالة تزويدها مع عبوة البيع)
 مناسبة لفرم التوابل وحبوب القهوة وتجهيز الزنجبيل والثوم والفلفل.
 ٢ ضعي المكونات داخل مجموعة الشفرات ().
 ٢ ركبي وعاء الطحن () ولفيه في اتجاه عكس عقارب الساعة ليستقر في موضع القفل ().
 ٣ ضعي المطحنة على وحدة الطاقة ().
 ٣ ضعي المطحنة على وحدة الطاقة للمقور) ولفيها في اتجاه تشعي المطحنة على وحدة الطاقة للستقر في موضع للتستقر في موضع للقفل و).
 - ٤ حددي السرعة المطلوبة أو استخدمي وضع التشغيل النبضي (P).

 استخدمي الجهاز فقط في الاستخدامات المنزلية المخصص لها . لن تتحمل شركة Kenwood أية مسئولية في حالة استخدام الجهاز بطريقة غير صحيحة أو عدم الامتثال للتعليمات المذكورة.

قبل توصيل الجهاز بمصدر التيار الكهربي

- يجب التآكد من تماثل مواصفات المصدر الكهربي مع المواصفات الموضحة على الجانب السفلى للجهاز.
 - يتوافق هذا الجهاز مع توجيهات المجموعة الأوروبية 2004/108/EC المتعلقة بالتوافق الكهرومغناطيسي وتنظيمات المجموعة الأوروبية رقم 1935/2004 بتاريخ ٢٠٠٤/١٠/٢٧ المتعلقة بالمواد المتلامسة مع الطعام.
- قبل استخدام الجهاز للمرة الأولى ● اغسلي الأجزاء المسموح بغسلها: راجعي قسم "العناية والتنظيف".

الدليل

- الخلاط غطاء فتحة التعىئة \bigcirc الغطاء العلوي (2) الدورق (3) طوق الإحكام الخاص بالخلاط (4) وحدة شفرات الخلاط (5) 6) وحدة الطاقة مكان تخزين السلك (7)وحدة التحكم في السرعة + النبض (8) (๑) زر جرش الثلج المطحنة متعددة الاستخدامات (في حالة تزويدها) (1) وعاء المطحنة متعددة الاستخدامات حلقة إحكام المطحنة متعددة 1 الاستخدامات
 - ② وحدة شفرات المطحنة متعددة الاستخدامات

مطحنة الفرم (في حالة تزويدها)

- الغطاء العلوي للمطحنة
- هجموعة شفرات مطحنة الفرم

استخدام الخلاط

استخدمي الخلاط لتحضير الحساء، المشروبات، المعجنات، المايونيز، كسرات الخبز، كسرات البسكويت، تحضير المكسرات وجرش الثلج.

- ١ ركبي حُلقة الإحكام الخاصة بالخلاط () على وحدة شفرات الخلاط () – مع التأكد من استقرار حلقة الإحكام في موضعها بشكل صحيح داخل التجويف.
- إذا كانت حلقة الإحكام تالفة أو غير محكمة بشكل صحيح فسوف يحدث تسريباً.

٢ اربطي وحدة الشفرات في الدورق - مع
 التأكد من ربط مجموعة الشفرات بإحكام
 ①. راجعي الرسوم التوضيحية الموجودة على الجانب السفلي لوحدة الشفرات وهي كالتالي:
 كالتالي:
 موضع الفتح

- 🖨 موضع القفل
- ۲ ضعي مكوناتك بداخل الدورق.
 ٤ ركبي غطاء فتحة التعبئة في الغطاء
- ربي المصلح المعلوي على الفررق ولعية في اتجاه عقارب الساعة حتى موضع القفل. ٦. ضعي الخلاط على وحدة الطاقة (الموتور)
- مع توجيه المقبض تجاه الجانب الأيمن ولفيه في اتجاه عقارب الساعة ليستقر في موضع القفل وسماع صوت "طقطقة" 2.
 - لن يعمل الجهاز في حالة تركيب الخلاط بشكل غير صحيح.
 - ۷ حددي السرعة المطلوبة (راجعي جدول
 السرعات الموصى بها)

تلميحات متعلقة بالخلاط

- لخلط مكونات جافة قطعيها إلى أجزاء صغيرة ثم أزيلي غطاء فتحة التعبئة وأسقطيها قطعة تلو الأخرى أثناء تشغيل الجهاز. أبق على يديك فوق الفتحة. للحصول على أفضل النتائج أفرغي المحتويات بشكل منتظم.
 - لا يوصى بطحن التوابل فقد تؤدي إلى إحداث أضرار بالأجزاء البلاستيكية.

عند إزالة المازج أو المطحنة من وحدة الطاقة: انتظرى حتى توقف الشفرات تماماً؛ لا تحاولي فك الدورق أو دورق/غطاء المطحنة عن وحدة الشّغرات. يحذر تشغيل المازج فارغاً. لا تقومي بإجراء عملية مزج متجاوزة الحد الأقصى للسبعة المحددة في جدول السبرعات الموصى بها . لضمان إطالة عمر الخلاط والمطحنة، لا تشغليهما لفترة زمنية أطول من ٦٠ ثانية. بالنسبة لوصفات المشروبات المخفوقة ذات الرغوة – لا تمزجي المكونات المجمدة التى تحولت إلى كتلة صلبة أثناء التجميد، ولكن هشميها إلى أجزاء قبل إضافتها إلى الدورق. لا تستخدمي المازج في معالجة التوابل الصلبة مثل جوزة الطيب أو جذور الكركم فقد تتسبب في تلف المازج. لا تستّخدمي المازج كحاوية تخزين. حافظي على الدورق فارغاً قبل وبعد الاستخدام. استخدمي المارج دائماً على سطح أمن وجاف. لا تضعي الجهاز على أو بالقرب من موقد غازي ساخن أوَّ شعلة كهرباًئية أو في أي مكان يتلامس فيه الجهاز مع جهاز ساخن. قد يؤدي سوء استخدام المازج إلى حدوث إصابات. لا يجوز استخدام هذا الجهاز من قبل الأطفال. احتفظي بالجهاز والسلك الكهربي بعيداً عن متناول الأطفال. يمكن استخدام الأجهزة من قبل أشخاص ذوي قدرات جسدية أو حسية أو عقلية منخفضة وممّن هم دون خبرة أو معرفة باستخدام الأجهزة في حالة منحهم التعليمات الخاصة بالأستخدام أو الإشراف عليهم بحيث يمكنهم استخدامه بطريقة آمنة مع إدراك المخاطر التي تنطوي على استخدام الجهاز.

عربي قبل القراءة، الرجاء قلب الصفحة الأولى لعرض الصور

لسلامتك

اقرئي التعليمات التالية واحتفظي بها في المتناول للاستّخدامات المستقبلية المرجّعية. أزيلي مكونات التغليف وأية ملصقات. قومي بإيقاف تشغيل الجهاز وفصله عن مصدر التيار الكهربي: قبل تركيب وإزالة الأحزاء فى حالة عدم الاستخدام؛ قبل التنظيف. لا تركبي وحدة الشفرات على وحدة الطاقة (المُوتُور) بدون تركيب دورقَ المازج ووعاء الطحن الخاص بالمطحنة. افصلي الجهاز عن مصدر التيار الكهربي دائماً قبل وضع يديك أو أدوات المائدة في الدورق. تُوخى الحذر دائماً عند التعامل مع وحدة الشفرات وتجنبي لمس حافة القطع الخاصة بالشفرات أثناء التنظيف. يجب تشغيل المازج فقط مع تركيب الغطاء العلوي في موضعه. استخدمي الدورق فقط مع وحدة الشفرات المزودة. يحذر تعرض وحدة الطاقة، السلك الكهربي أو قابس التوصيل للماء. يحذر استخدام الجهاز في حالة تلفه. يجب فحص الجهاز أو إصلاحه: راجعَّي قسم "الصّيانة ورعاية العملاء". يحذر استخدام أية ملحقات غير معتمدة. مخاطر التعرض لحروق: يجب السماح بتبريد المكونات الساخنة إلى درجة حرارة الغرفة قبل عملية الخلط. لا تتركي الجهاز دون ملاحظة أثناء تشغيله.