


Dragon-i® www.dragon-itoys.com		Product Description: #80116 Pirate Shot	
Part no.	#D80116004 IS	Prepared by	Riman
Artwork Size	297(L) x 210(H) mm A4-2Sides	Checked by	
Coating	N/A	Approved by	
Packaging Color	K	Remarks	Customer : Argos
Language	English		
Date	2015/04/13		

390*8965 A4 Front P.1-2

Pirate Target Shooting Game

Assembly & User instructions - please keep for future reference 390/8965

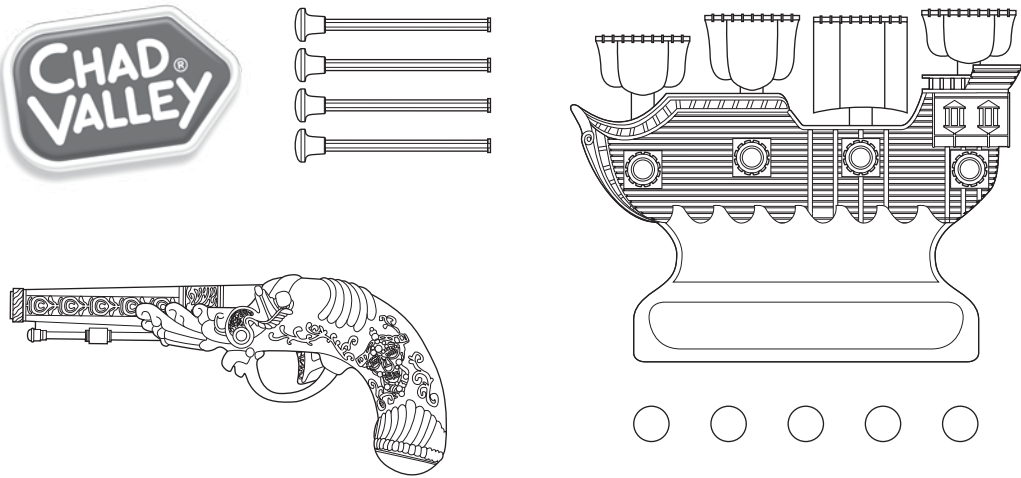

Important

For ages 3 years or over

Important – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**



Safety Information

Important – Please read these instructions fully before assembly or use

- Product and colors may vary from those pictured.
- Keep packaging for reference as it contains important information.
- Remove all fastening materials and dispose in a safe place away from small children.
- Recommended for indoor use for best performance.
- Surface clean with a damp cloth.
- The shooter is a toy however pointing it at people, animals or at objects other than the toy targets provided in the set can be disturbing to others.
- Do not use missiles or projectiles other than those supplied with the toy or recommended by the manufacturer. Warning! Do not aim at the eyes or face.
- Warning.** Not suitable for children under 36 months. Small parts.
- IMPORTANT** : Use alkaline batteries for best performance. Always make sure batteries are fresh. When batteries are low, product may not function properly.

390*8965 A4 Back P.3-4

User Instructions

Rules of using the Pirate Target Shooting Game

Recommended operation procedure

1. After the batteries are installed, place the ship up against a wall at waist or eye level (fig.1).

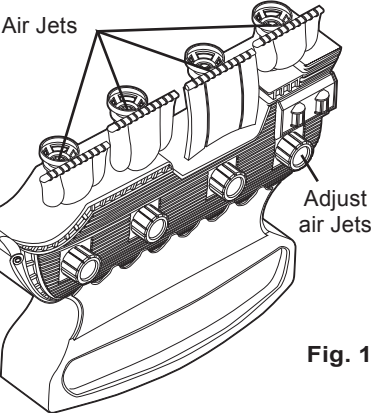


Fig. 1

2. Place all 4 balls directly over the 4 air jets (fig.2) and slide the “ON / OFF” switch located on the back of the “Pirate Ship” (fig.3) and place a dart into the shooter (fig.4). Once you turn on the “Pirate Ship”, the balls will begin to float. You can adjust how high or how low the ball is by turning the knob (fig. 5).

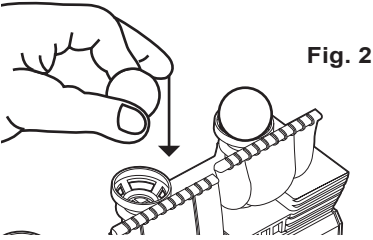


Fig. 2

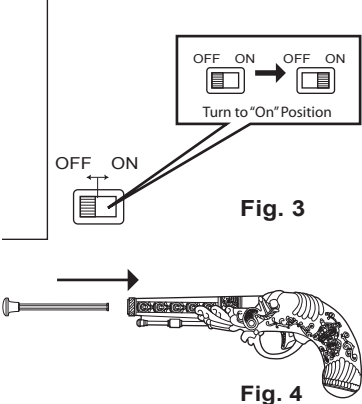


Fig. 3

Fig. 4

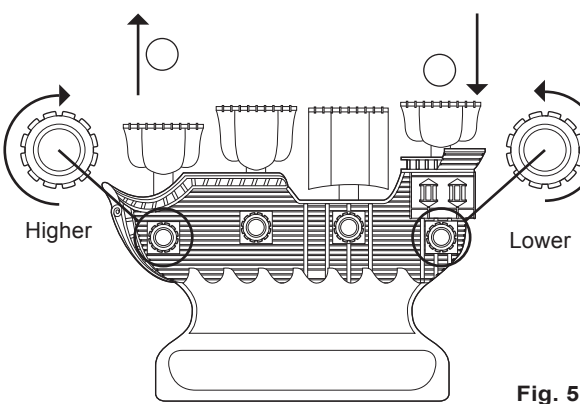


Fig. 5

User Instructions

Rules of using the Pirate Target Shooting Game

Recommended operation procedure

3. The shooter is spring loaded, so the way you aim should be determined how far you are away from the target. The further away you are from the target, the higher you should aim.

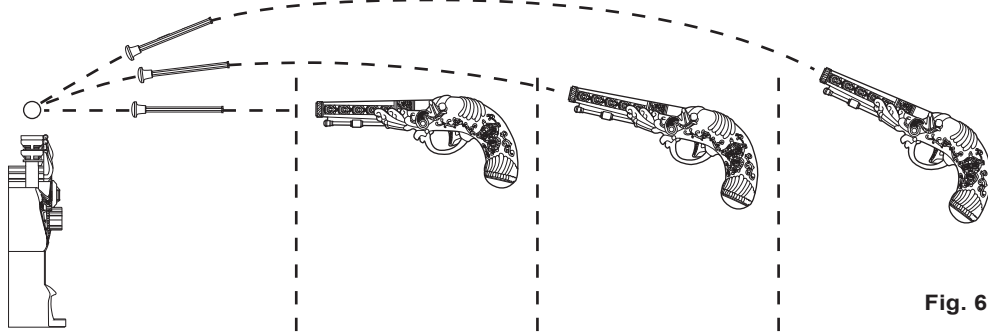


Fig. 6



Not suitable for children under 3 years due to small parts, choking hazard.

Disposal information



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly

will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council of waste disposal service or the shop where the product was purchased.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**
Produced for Chad Valley Toys. Country of origin: China
Address: 489 - 499 Avebury Boulevard, Central Milton Keynes, MK9 2NW.
Visit www.argos.co.uk/chadvalley