

BUSH *Classic*

Instruction Manual



Retro DAB Radio

Contents

Important safety information.....	3	Using the FM radio.....	13
Instructions for use.....	5	Telescopic aerial.....	13
Check the package contents	5	FM Radio mode	13
Where to put your Radio	5	Tuning to an FM station.....	13
Setting up.....	5	Using the Alarm	14
Time and date	6	Setting the alarm.....	14
Using headphones	6	Stop the alarm	15
Your Retro DAB Radio	7	Snooze	15
Front view	7	Turn off the alarm	15
Top view	7	Sleep timer	15
Rear view.....	7	Cancel the Sleep timer	15
Using your Retro DAB Radio.....	8	Menu system settings.....	16
Switch on.....	8	Manually set the date and time	16
Switch off.....	8	Display backlight timeout.....	17
Change the mode	8	Display language	17
Adjusting the volume	8	Software version.....	17
Using the DAB radio.....	9	Factory reset	18
Telescopic aerial.....	9	Technical information	19
DAB radio mode.....	9	Specification	19
Changing DAB stations.....	9	Troubleshooting	20
Scanning for DAB stations.....	9	General information.....	21
Prune DAB stations.....	10	Product guarantee.....	22
Storing a DAB station preset.....	10		
Tune to a DAB station preset.....	10		
DAB display information	11		
Dynamic range control (DRC).....	12		



Important safety information

Your Radio should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Do NOT block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- Do NOT store in dusty or dirty areas.
- Disconnect your Radio from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Radio, before you change or disconnect the power supply.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do NOT use your Radio near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.
- Do NOT use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
- If the Radio will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment and the mains power is unplugged.
- Only use recommended batteries or those of the same equivalent type.





- Do not mix old and new batteries or batteries of different types.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Remove the batteries from the Radio if they will not be used for an extended period of time.
- Do not attempt to recharge non-rechargeable batteries.
- Dispose of old batteries carefully.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.
- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.



Instructions for use

Check the package contents

The package contains:

- 1 x Retro DAB/FM Radio
- 1 x mains adaptor
- 1 x instruction manual

Where to put your Radio

It is important that you consider carefully in advance where your Radio will be situated and make sure that it is:

- on a flat and stable surface
Note: Never place your Radio directly onto antique or polished surfaces.
- within 1.4 metres of a power socket (if using mains power). Please ensure that the mains power lead is not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference
- where you can fully extend the telescopic aerial
- away from bright sunlight or heat sources, such as a radiator
- not in a humid or very damp place such as a bathroom

Setting up

1. Connect the mains power lead into the socket on the back of the Radio and fully extend the radio aerial in a vertical position to obtain the maximum signal strength.
2. Plug the power adaptor into the mains power wall socket and switch on.
3. Rotate the On/Off wheel on the top of the radio to 'On'. The display will light up and 'Welcome to Digital Radio' will be displayed.
4. Press and release the 'Standby' button on the top of your radio. Your radio will switch on and begin an automatic scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

Note: The DAB radio station list is stored in the memory and so the next time you switch your radio on, the station search does not take place. It is possible to scan manually for stations. Please see page 9.



5. Inserting the batteries (optional). Before installing the batteries (not included) please ensure that the Radio is switched off (rotate the wheel on the top to 'OFF') and is unplugged from the mains power supply.

On the back of the Radio, push down the two tabs to release and remove the battery compartment cover.

Insert 4 x 1.5V C-size (also known as LR-14) batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around.

Replace the battery cover, making sure it 'clicks' shut.

If used continuously on battery power, your Radio has an approximate battery life of 5 hours when using good quality alkaline batteries. When the battery power is low, please switch off the Radio and replace the batteries.

For battery operation, please switch off the mains adaptor and remove the mains power plug from the back of the Radio.

Time and date

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, so there is no need to set the time and date manually.

If you do wish to set the time and date manually, please see page 16.

Using headphones

You can connect headphones with a 3.5mm plug (not included) to your Radio. The stereo headphone socket can be found on the back of the Radio at the bottom. When you have headphones connected the Radio speaker is switched off and all sound is via the headphones.



Note: Always keep the volume within reasonable limits.




Your Retro DAB Radio

Front view

Rear view

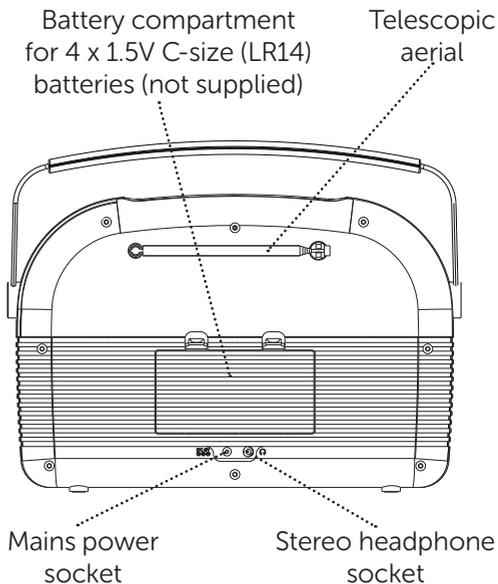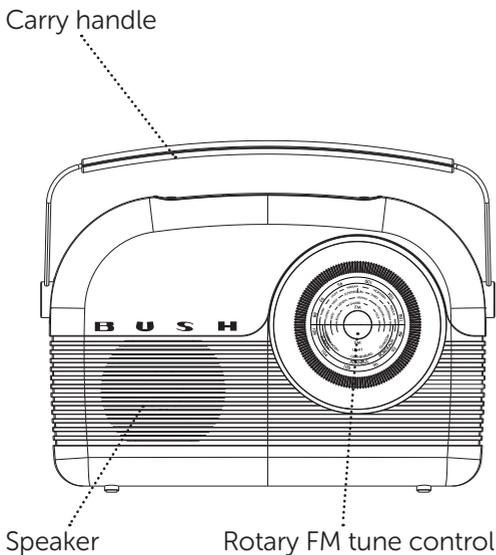

Top view

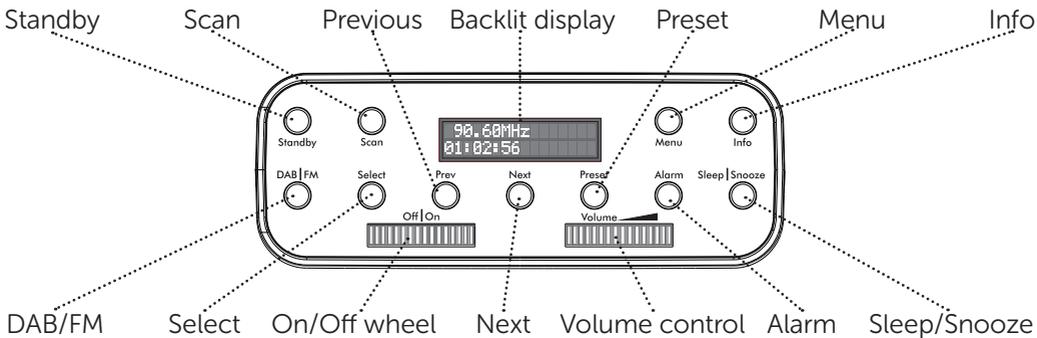



Using your Retro DAB Radio

Switch on

Rotate the On/Off wheel on the top of the radio to 'On'. Press and release the 'Standby' button on the top of the radio. The display will fully switch on and your Radio will return to the mode that it was last used in (DAB/FM). If you were listening to a radio station when you turned the radio off, then this station will be automatically selected.

Note: Always make sure that the aerial is fully extended, to ensure the maximum signal strength and the best possible sound quality

Switch off

Press and release the 'Standby' button on the top of the radio. The Radio will go into Standby mode and the time and date will be displayed.

To completely switch off the Radio and the display, rotate the On/Off wheel on the top of the radio to 'Off' and switch off the mains power at the wall socket.

Change the mode

Briefly press and release the 'DAB/FM' button to change between DAB and FM mode. Please check the display, which will confirm the mode.

Adjusting the volume

Turn the rotary volume wheel on the top of the radio, anti-clockwise to decrease the volume and clockwise to increase the volume. When you adjust the volume, please check the display which will confirm the volume setting.





Using the DAB radio

Telescopic aerial

Please make sure that the aerial on the back of the Radio is fully extended and adjusted before you attempt to tune to a DAB radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the Radio begins to scan. Extending the aerial also ensures the best possible sound quality.

DAB radio mode

Check that your Radio is in DAB radio mode. If you are not already in DAB mode, briefly press and release the 'DAB/FM' button until you are in DAB mode (check the display). The DAB/FM button can be found on the top of the radio.

The first time you use the Radio or if the station list is empty, your radio will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

Changing DAB stations

In DAB mode:

1. Press and release the 'Prev' and 'Next' buttons on the top of the radio to scroll through the available stations in the station list.
2. When the station that you would like to listen to is displayed press and release the 'Select' button on the top of the radio. There will be a short delay whilst your DAB radio tunes to your selected station.

Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your Radio. If you have moved your Radio to another location, e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

In DAB mode:

1. Press and release the 'Scan' button on the top of the radio to begin a search for stations. The display will change to 'Scanning...'. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.



Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

1. Press and release the 'Menu' button and use the 'Prev' and 'Next' buttons to scroll to <Prune>. Press and release the 'Select' button.
2. 'Prune? <No> Yes' is displayed. Use the 'Next' button to move to 'Yes'. Press and release the 'Select' button to confirm and prune the station list. Stations with a '?' prefix will now no longer be displayed. Press and release the 'Menu' button to return to the station display.

Storing a DAB station preset

Your Radio can store up to 10 DAB radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Radio to the DAB radio station that you wish to preset.
2. Press and hold the 'Preset' button for approximately 2 seconds until 'Preset Store' <1:(Empty)> is displayed.
3. Use the 'Prev' or 'Next' buttons to move to the preset location that you would like to store the radio station to (1-10).
4. Press and release the 'Select' button, the display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

Note: If there is already an existing DAB station stored under a preset, it will be over written when you store the new station.

Tune to a DAB station preset

In DAB mode:

1. Briefly press the 'Preset' button. 'Preset Recall <1:>' is displayed together with the name or frequency of the station stored there, or (Empty) if no previous station has been stored.
2. Use the 'Prev' and 'Next' buttons to move to the Preset location and station that you would like to listen to (1-10).
3. Press and release the 'Select' button. The radio will instantly tune to that station and begin to play.

Note: If no DAB station has been stored under the preset button, 'Preset Empty' will be displayed, then the radio will revert to the previously selected radio station.

DAB display information

When listening to a DAB station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

- Signal Strength - An empty will appear on the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicate the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.
 - Program Type (PTY) - such as 'Rock', 'Pop', 'Talk' or 'News'
 - Multiplex Name - displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.
 - Channel and Frequency - e.g.: 12B 225.648 MHz
 - Signal error - This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your radio to improve reception.
 - Signal information - The data rate at which the signal is being transmitted.
 - Time and date - supplied by the broadcaster.
 - Dynamic Label Segment (DLS) - this is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
1. Repeatedly press and release the 'Info' button on the top of the Radio to cycle through the different information options.



Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- DRC off - no compression. This is the default setting.
 - DRC low - medium compression.
 - DRC high - maximum compression.
1. Press and release the 'Menu' button, <Full scan> is displayed.
 2. Use the 'Prev' and 'Next' buttons to scroll to <DRC>. Press and release the 'Select' button. The current DRC setting will have an '*' next to it.
 3. Use the 'Prev' and 'Next' buttons to scroll through the options and press the 'Select' button to confirm.
 4. Press and release the 'Menu' button to return to the station display.





Using the FM radio

Telescopic aerial

Please make sure that the aerial on the back of the Radio is fully extended before you attempt to tune to an FM station. This will ensure that the maximum signal strength is available when the Radio is tuning to a station. Extending the aerial also ensures the best possible sound quality.

FM Radio mode

Check that your Radio is in FM radio mode. If you are not already in FM mode, briefly press and release the 'DAB/FM' button until you are in FM mode (check the display). The DAB/FM button can be found on the top of the radio.

If you were listening to an FM station when you switched the Radio off, and you have not adjusted the tuning dial, then this station will be automatically selected when you switch the Radio back on.

Tuning to an FM station

In FM mode:

Use the rotary tuning dial on the front of the radio to tune to your favourite FM station. Please use the frequencies marked on the dial as a guide.

The tuning dial will move both clockwise and anti-clockwise but does have a 'stop' point. If you turn the tuning dial and reach the 'stop' point, please turn the dial in the opposite direction to tune.

Note: If reception is still poor, check that the aerial is fully extended and then adjust the tuning dial slowly, or try moving the Radio to another location.



Using the Alarm

Setting the alarm

Note: Check that the radio has the correct time and date before you set an alarm.

There are 2 alarm settings available.

With the radio switched on and in DAB mode:

1. Press and release the 'Alarm' button, 'Alarm 1 Setup' is displayed. Press and release the 'Select' button.

Note: Press and release the 'Alarm' button twice to set Alarm 2.

2. 'Alarm 1 Wizard, On time' is displayed and the hour digits for the alarm will flash.
3. Use the 'Prev' and 'Next' buttons to display the hour for the alarm. Press and release the 'Select' button.
4. The minute digits for the alarm will flash. Use the 'Prev' and 'Next' buttons to display the minutes for the alarm. Press and release the 'Select' button.
5. Use the 'Prev' and 'Next' buttons to display the duration for the alarm. You can choose from 15, 30, 45, 60 and 90 minutes. Press and release the 'Select' button.
6. Use the 'Prev' and 'Next' buttons to display the sound source for the alarm. You can choose from Buzzer, DAB or FM. Press and release the 'Select' button.
7. Use the 'Prev' and 'Next' buttons to display the frequency for the alarm. You can choose from Daily, Once, Weekends or Weekdays. Press and release the 'Select' button.

Note: If you choose Once, you will be prompted to set the date for the alarm.

8. Use the 'Prev' and 'Next' buttons to display the volume setting for the alarm. Press and release the 'Select' button.

Note: Remember to set the alarm radio volume to one that will wake you. The alarm volume will increase progressively until it reaches the alarm volume you have set.

9. 'Alarm 1 Wizard' is displayed again, together with 'Alarm On (or Off)'. Use the 'Prev' and 'Next' buttons to display 'Alarm On' or 'Off'. Press and release the 'Select' button. 'Alarm Saved' is displayed.
10. In Standby mode a bell symbol in the top right of the display, together with the digit '1' or '2' will confirm when an alarm has been set.

Note: If the time is not set or has failed to update from the radio signal, 'Time is not set' will be displayed when you try to set the alarm. The radio will then prompt you to set the time. An alarm can only be set after the time has been set.



Stop the alarm

When the alarm sounds press and release the 'Standby' button. Alternatively, you can press and release the 'Snooze' button to 'Snooze' (see Snooze function below).

Note: If you press the 'Standby' button to stop the alarm, the alarm symbol will remain in the display and the alarm will sound again at the same time the next day unless it was set for 'Once' only.

Snooze

When the alarm sounds press and release the 'Snooze' button to Snooze. The Snooze time countdown will be displayed and the alarm will sound again in approximately 5 minutes.

Turn off the alarm

In Standby mode:

Briefly press and release the 'Alarm' button repeatedly to turn Alarm 1 and Alarm 2 'On' or 'Off'. Press and release the 'Select' button. 'Alarm Saved' is displayed.

Alternatively, follow the steps for 'Setting an Alarm' and select 'Off' in step 9.

Sleep timer

You can set your Radio to turn off automatically using the sleep timer. You can choose from 15, 30, 45, 60 and 90 minutes or Sleep off.

With the Radio switched on and in DAB mode:

1. Press and release the 'Sleep' button on the top of the Radio. 'Set sleep time, Sleep off' is displayed.
2. Repeatedly press and release the 'Sleep' button to cycle through the available options of 15, 30, 45, 60 and 90 minutes or Sleep off.
3. When the sleep time that you would like is displayed. Press and release the 'Select' button. The sleep time minutes that you have selected will be displayed on the top line of the display and will countdown until the radio switches off.

Cancel the Sleep timer

1. Press and release the 'Sleep' button on the top of the Radio until 'Sleep off' is displayed.
2. Press and release the 'Select' button.





Menu system settings

Your radio must be switched on and in DAB mode when you change the system settings.

Manually set the date and time

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, but if you do wish to set the time manually, please follow the steps below.

In DAB mode:

1. Press and release the 'Menu' button.
2. Use the 'Prev' and 'Next' buttons to scroll to <System>. Press and release the 'Select' button.
3. <Time> is displayed. Press and release the 'Select' button.
4. <Set Time/Date> is displayed. Press and release the 'Select' button.
5. 'Set Time' is displayed and the hour digits will flash. Use the 'Prev' and 'Next' buttons to display the correct hour in 24 hour clock. Press and release the 'Select' button.
6. The minutes will flash. Use the 'Prev' and 'Next' buttons to display the correct minutes. Press and release the 'Select' button.
7. 'Set date' is displayed and the 'Day' will flash. Use the 'Prev' and 'Next' buttons to display the day. Press and release the 'Select' button.
8. The 'Month' will flash. Use the 'Prev' and 'Next' buttons to display the month. Press and release the 'Select' button.
9. The 'Year' will flash. Use the 'Prev' and 'Next' buttons to display the year. Press and release the 'Select' button. 'Time Saved' is displayed and then returns to 'Set Time/Date'.
10. You can now use the 'Prev' and 'Next' buttons to scroll through the other options available. Press and release the 'Select' button and confirm as required.

You can change the settings for:

- 12/24 hour clock display
- date format, DD-MM-YYYY or MM-DD-YYYY
- to auto update the time from the DAB signal or no update.

Note: An '*' will be displayed next to the current setting.

11. Press and release the 'Menu' button to return to the station display.





Display backlight timeout

You can adjust the display backlight timeout. Options of permanently On, 10, 20, 30, 45, 60, 90, 120, and 180 seconds are available.

Note: A '*' will be displayed next to the current setting.

In DAB mode:

1. Press and release the 'Menu' button.
2. Use the 'Prev' and 'Next' buttons to scroll to <System>. Press and release the 'Select' button.
3. Use the 'Prev' and 'Next' buttons to scroll to <Backlight>. Press and release the 'Select' button.
4. 'Timeout' is displayed. Press and release the 'Select' button. Use the 'Prev' and 'Next' buttons to scroll through the available backlight timeout options of permanently On, 10, 20, 30, 45, 60, 90, 120 or 180 seconds. Press and release the 'Select' button to confirm.

Display language

You can change the display language of your radio, there are 4 options available; English, French, German and Italian.

Note: A '*' will be displayed next to the current setting.

In DAB mode:

1. Press and release the 'Menu' button.
2. Use the 'Prev' and 'Next' buttons to scroll to <System>. Press and release the 'Select' button.
3. Use the 'Prev' and 'Next' buttons to scroll to <Language>. Press and release the 'Select' button.
4. Use the 'Prev' and 'Next' buttons to scroll to the display language you would like. Press and release the 'Select' button.

Note: As soon as you select a different display language, all of the display information will be in this new language.

5. Press and release the 'Menu' button to return to the station display.

Software version

You can check the software version of your radio.

In DAB mode:

1. Press and release the 'Menu' button.
2. Use the 'Prev' and 'Next' buttons to scroll to <System>. Press and release the 'Select' button.
3. Use the 'Prev' and 'Next' buttons to scroll to <SW version>. Press and release the 'Select' button.





4. The software version will be displayed and you may wish to make a note of it here:

.....

5. Press and release the 'Menu' button to return to the station display.

Factory reset

You can reset your radio and restore all of the original factory settings.

Note: If you reset your radio all of your DAB station presets will be deleted.

1. Press and release the 'Menu' button.
2. Use the 'Prev' and 'Next' buttons to scroll to <System>. Press and release the 'Select' button.
3. Use the 'Prev' and 'Next' buttons to scroll to <Factory Reset>. Press and release the 'Select' button.
4. 'Factory Reset? <No> Yes' will be displayed. Use the 'Prev' and 'Next' buttons to scroll to '<Yes>'. Press and release the 'Select' button to confirm.
5. 'Restarting...' is displayed. After a few seconds the display will change to 'Welcome to Digital Radio' and will then go to standby mode.
6. Press and release the 'Standby' button on the top of your radio. Your radio will switch on and begin an automatic scan for DAB radio stations.

A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.



Technical information

Specification

Power adaptor: Output DC 5V 1A
Input AC 100-240V/50Hz

Batteries: 4 x 1.5V C size (LR14)
(Optional, not supplied)

Output: 1 x 2W RMS

Frequency range: DAB: Band III, 174 MHz to 240 MHz
FM: 87.5 MHz to 108 MHz

Troubleshooting

If you are experiencing problems with your Radio, there are some quick and easy checks that you can do, which may help to solve the problem.

No sound / power:

- Adjust the volume using the rotary wheel on the top of the radio.
- You may have headphones connected. Either use the headphones to listen to your radio or unplug the headphones.
- If you have batteries fitted, they may be exhausted and need to be replaced. Please use only good quality C size batteries.
- Check that the mains power lead is connected at the back of the radio, the mains power wall socket is switched on and the rotary wheel on the top of the radio is switched to 'On'. Press and release the 'Standby' button.
- In DAB mode you may need to re-scan if the station you last listened to is no longer available. In FM mode, try adjusting the tuning dial on the front of the radio.

Radio reception is poor:

- Fully extend the aerial to get the best reception and sound quality.
- Retune for radio stations, see pages 9 and 13.
- Try moving your Radio to another location to see if reception improves.
- Check that you do not have other electrical equipment too close to your Radio, causing interference.
- Visit www.digitalradionow.com for information about DAB reception in your area.

The function buttons do not respond:

- Check that the mains power lead is connected at the back of the radio, the mains power wall socket is switched on and the rotary wheel on the top of the radio is switched to 'On'. Press and release the 'Standby' button
- Check that you are trying to use the function buttons for the mode that you are in. In FM mode, only the 'Standby', 'DAB/FM', 'Alarm' and 'Sleep/Snooze' buttons on the top of the radio will function.
- If you are using batteries, they may be exhausted and need to be replaced.
- Unplug the mains power and remove the batteries. Leave the Radio for 3 minutes and then reconnect the power.
- Try a reset to factory defaults. See page 18.

Note: All of your settings, including the radio station list and any presets will be deleted when you reset the Radio.



General information



This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.



This symbol  indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Never throw batteries in a fire or attempt to open the outer casing





PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.

The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd.,
489-499 Avebury Boulevard
Central Milton Keynes
MK9 2NW





CE

Apr 15/Issue:1

