

**TRESemmé**  
USED BY PROFESSIONALS

## Thank you for buying the TRESemmé Compact Dryer 2000

We hope you enjoy using it. From our origins in salons in 1948, TRESemmé has been driven by a simple truth: every woman deserves to look & feel fabulous, like they've just stepped out of the salon.

TRESemmé is dedicated to creating haircare products that are salon quality. Inspired by stylists and tested in salons the products are designed to help you achieve salon gorgeous hair every day.

TRESemmé® – Professional. At your fingertips. ©



**COMPACT  
DRYER 2000**

Model: 9547TU

## Safety Cautions

- This appliance should only be used as described within this instruction booklet. Please retain for future reference.

### **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

### **WARNING! THIS APPLIANCE GETS HOT!**

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

### **IMPORTANT SAFETY**

- **UK Only:** This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual

operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

**WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.

- Do not use the appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Never look directly into the barrel of the hairdryer when it is switched on.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of lead damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not leave the appliance unattended when switched on or plugged in.
- This unit is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the dryer to the '0' position, unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear



of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug, and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).

- Take care that the air vents do not become blocked when in use. Ensure the rear filter is clear of hair and other debris before use.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic).

## How to use your new TRESemmé Compact Dryer 2000

- Towel dry and detangle the hair.
- Use TRESemmé Heat Defence Styling Spray to help protect from styling; and if a perfectly smooth finish is desired, use TRESemmé's Silky Smooth product range.
- There are 2 heat/speed settings plus a cool shot button. Use the high heat/speed setting for initial drying and use the low heat/speed setting for styling as the hair begins to dry and scrunch drying.
- Use the cool shot button on warm hair to set your style for long-lasting effect.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away.

### **Concentrator Nozzle**

The concentrator nozzle is great for straightening or styling hair when using a brush. Use the concentrator nozzle for directing the airflow just where you want it. When using the concentrator nozzle use the lower heat/speed setting.

# Hints and Tips from the Stylists at TRESemmé

## General Hair Maintenance

- Don't rub hair with a towel when drying – this makes the cuticle rough, which can give the appearance of frizz and therefore prevents shine. Instead, gently squeeze excess water out of the hair with a towel.
- Try not to shampoo every day – washing too often can dehydrate your hair. Try one of TRESemmé's Instant Refresh Dry Shampoos for a quick alternative to shampooing your hair.

## Body & Volume

- To help create extra body and volume in the hair, lean forward so the head is upside down when drying. Direct the airflow towards the roots for maximum lift. When the hair is dry, brush back in to required style.

## Straightening

- To create a smooth, straight look, first divide the hair into sections.
- Attach the concentrator nozzle to the hairdryer, using a brush, hold the hair taut and direct the airflow down the hair section. Roll the ends of the hair under whilst drying to finish the style.

## Making Waves

- To create tousled, natural-looking waves, position the head upside down. Using the hairdryer without the nozzle, grasp the hair at the roots and scrunch between fingertips whilst drying. When the hair is dry, move it back into the required position, for a casual, natural look.

# Care and Maintenance

## General

- Do not wrap the lead around the dryer, instead coil the lead loosely by the side of the dryer.
- Do not use the dryer at a stretch from the power point.
- Always unplug after use.

## Cleaning the Filter

- Ensure the appliance is switched off, unplugged and cool.
- Using a soft brush, clean any hair and other debris from the filter.
- To clean the outside of the appliance, wipe with a damp cloth. Make sure no water enters the appliance and it is completely dry before use.

# UK Guarantee

This TRESemmé appliance is guaranteed for consumer use for 3 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights. UK

# UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@coanir.com](mailto:ukinfo@coanir.com).


The return address is:

Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

TRESEmmé is a registered trade mark of Unilever and is used under license. All rights reserved.

# Safe Disposal

The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.


# UK Wiring Instructions

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 13A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 13A fuse must be fitted.