 


WATER HYACINTH CHEST

Assembly Instructions - Please keep for future reference

417/9456

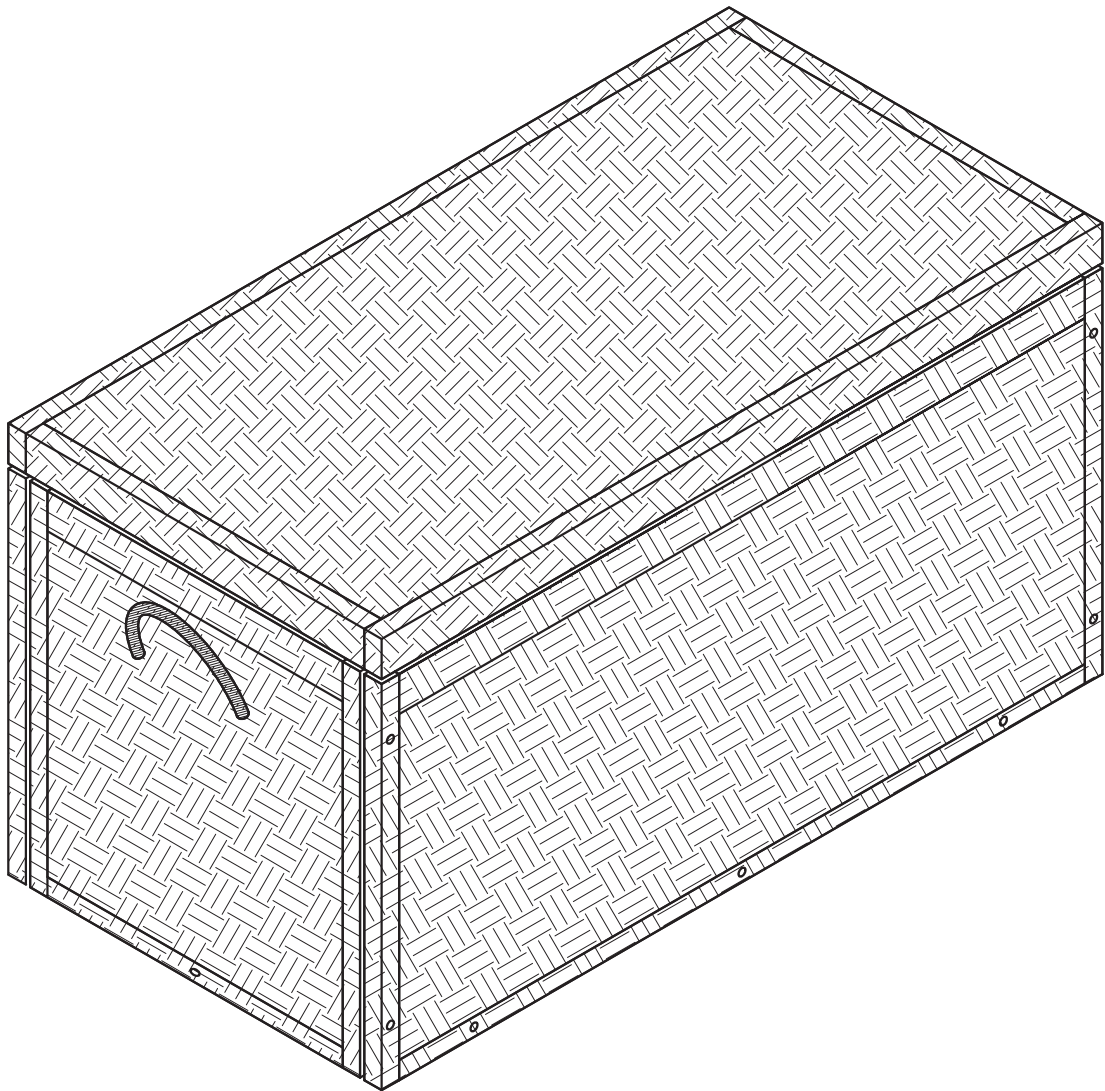

Dimensions

Width - 84 cm

Depth - 44 cm

Height - 45cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos**
0345 6400800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly may be easier with 2 people.



- To reduce the likely hood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Regularly check and ensure that all bolts and fittings are tightened properly.
- Assemble the item as close to its final position (in the same room) as possible.

 
Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components


If you have damaged or missing components,
call the **Customer Helpline: Argos 0345 6400800**

Please check you have all the panels listed below


1 Top Panel 84*44 cm

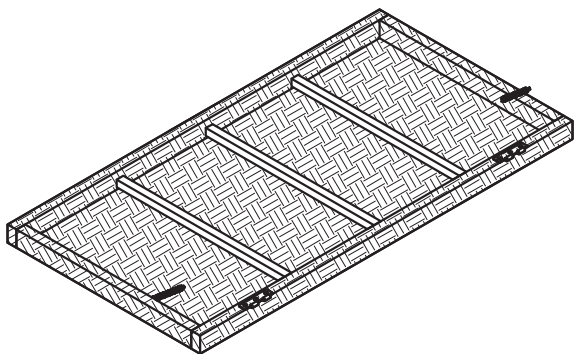


2 Front Panel 84*41 cm

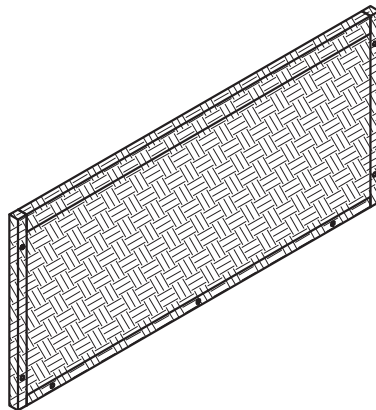 


3 Front Panel 84*41 cm

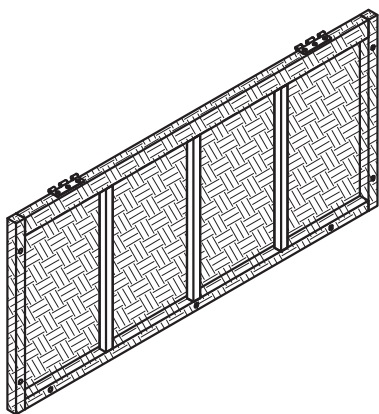 


4 Left Panel 38*41 cm

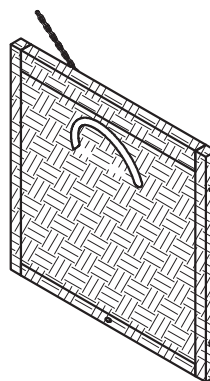 

5 Right Panel 38*41 cm

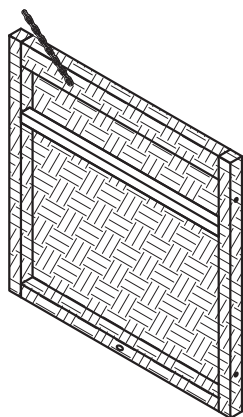 

  

 
 
6 Bottom Panel 78.5*38cm

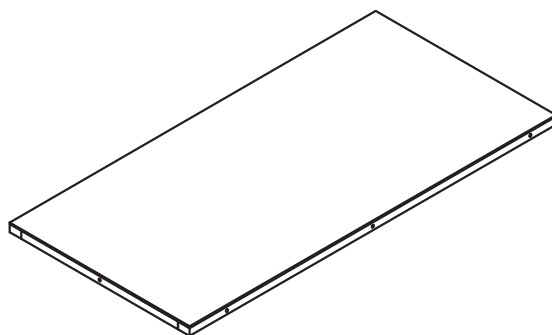

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Screw Ø6*50 mm x 8	B  Allen key	C  Bolt Ø3*30 mm x 4
D  Screw Ø6*40 mm x 8		

 
 
Tools required



Hammer

The Screw length is measured from the head to the point (50mm screws shown).

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

 
NOTE: It would be useful to ask someone to help you assemble the chest.

Step 1

Attach left panel **4** and right panel **5** in to bottom panel **6**. Using 2pcs screw **D**

STEP 1

D x 2

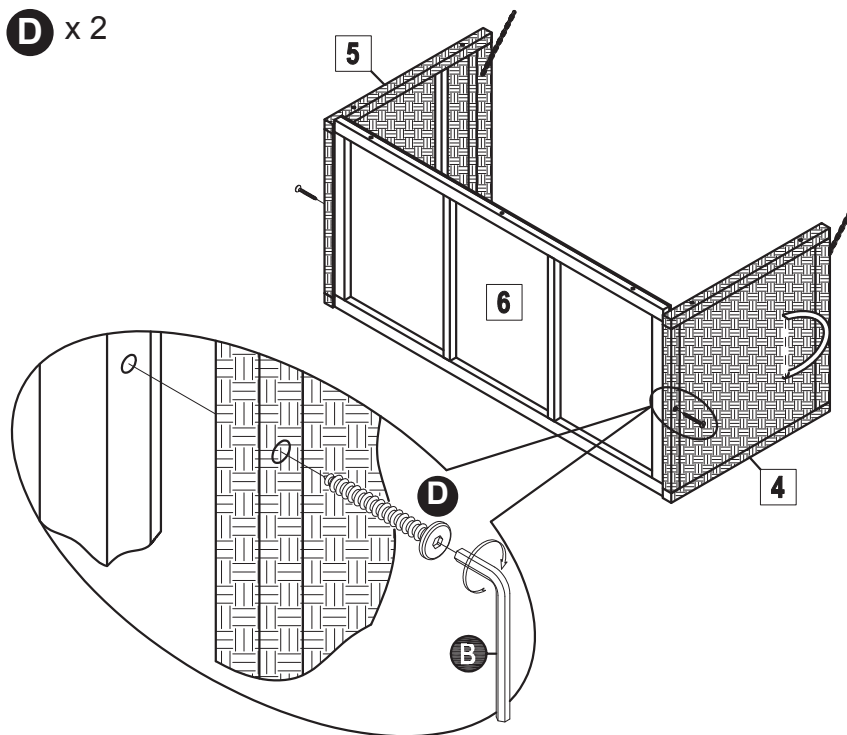


Step 2

Attach back panel **3** in to bottom panel **6**, left panel **4** and right panel **5**. Using 4pcs screw **A** and 3pcs screw **D** as show.

STEP 2

A x 4

 D x 3

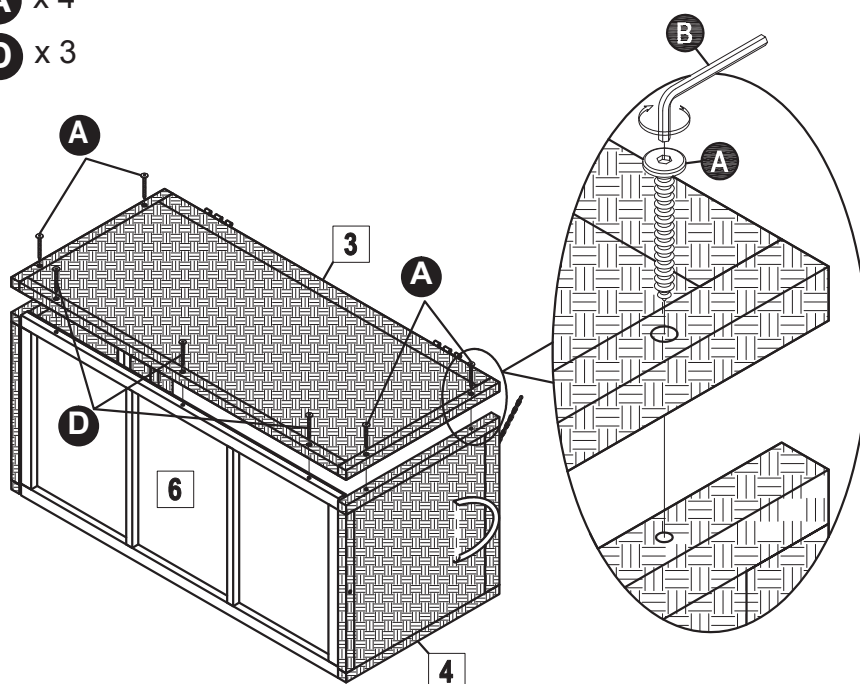

Assembly Instructions

 
Step 3

Attach front panel **2** in to bottom panel **6**, left panel **4** and right panel **5**. Using 4pcs screw **A** and 3pcs screw **D** as show.

STEP 3

A x 4

D x 3

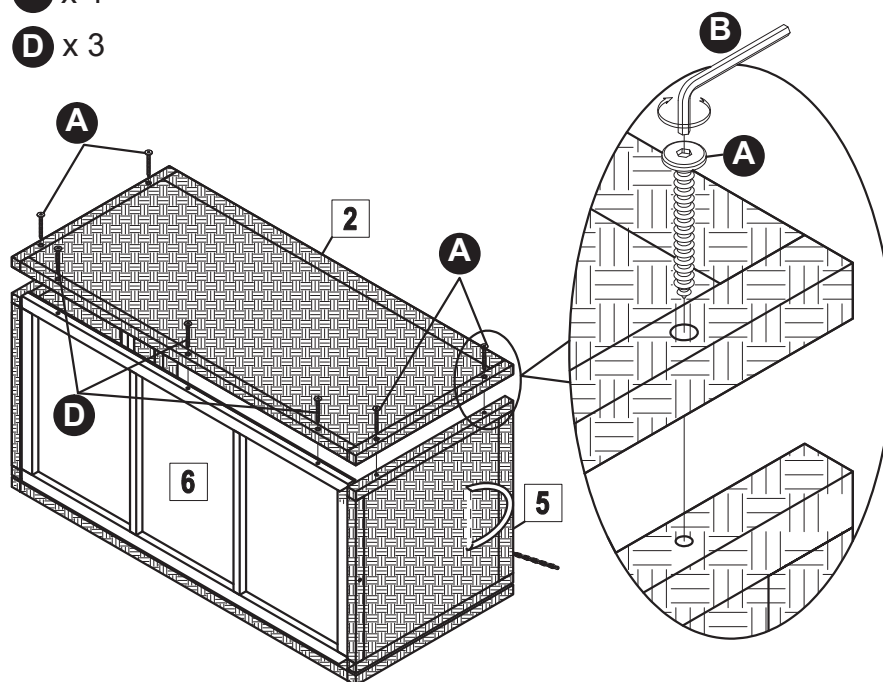

Step 4

 
Connect top panel **1** to back panel **3** using 4pcs bolt **C** at the hinges. A hammer may be used to help to insert the bolts into the hinges.

Connect the strings by pressing the hook of the string on top panel **1**.

Assembly is complete.

STEP 4

C x 4

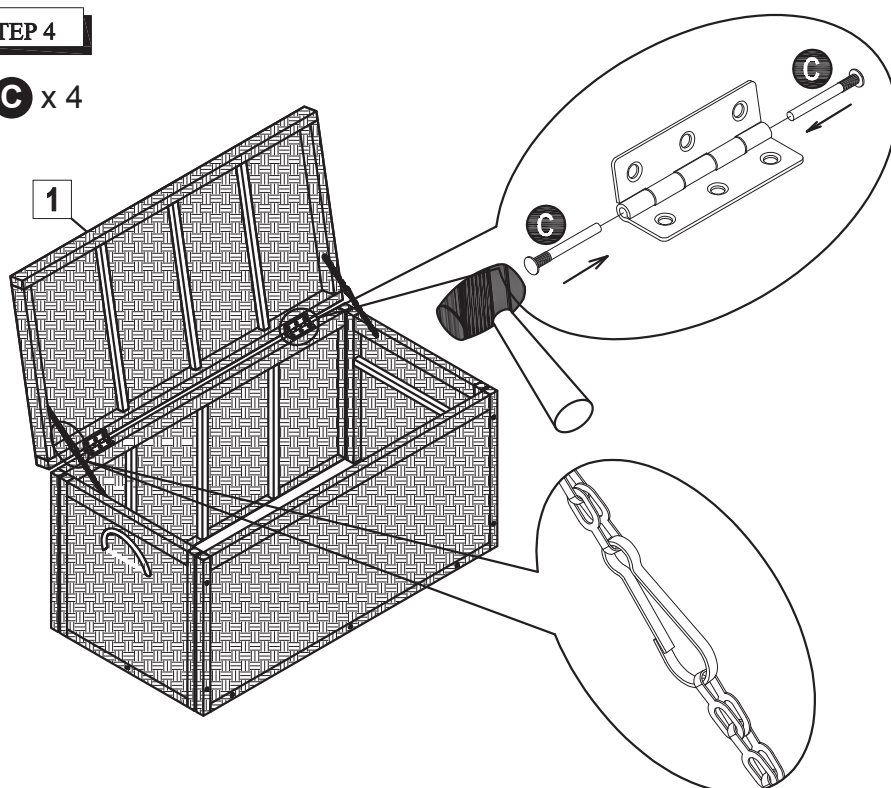

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos**
0345 6400800