

gourmet
by sensiohome



Double Boiling Rings

Instruction Manual



Thank you for purchasing these gourmet by sensiohome double boiling rings

This product has been designed to offer you the following benefits:


- Independent cooking controls – For optimum cooking flexibility.
- Small and large hotplates – Accommodates both small and large pans.

IMPORTANT: Use of any electrical equipment should be undertaken with care.
Please read the Important Safeguards on page 2 before first use.
This appliance is for household use only.

table of contents

Features.....	1
Before first use	1
Important safeguards	2
Notes on the cord.....	3
Notes on the plug	3
Using the double boiling rings.....	4
Cleaning and maintenance.....	5
Technical data	5
Electrical information	6

 features

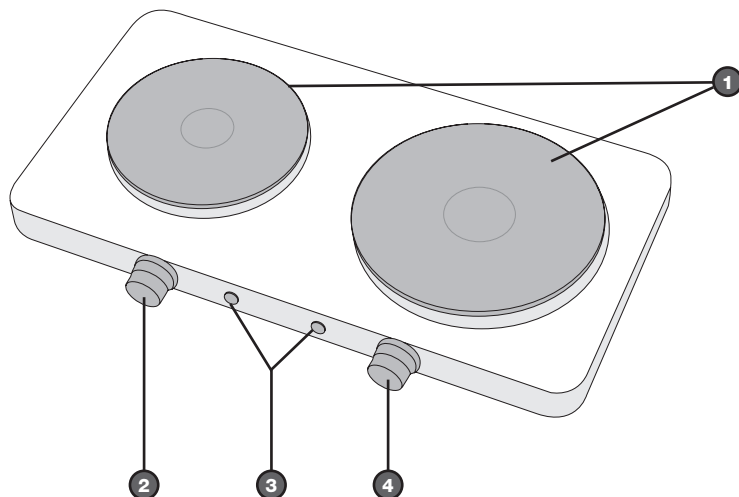

1. Hotplates (Small - 1000W, Large - 1500W)
2. Temperature control dial for 1000W hotplate
3. Neon power indicators
4. Temperature control dial for 1500W hotplate

Missing part or damaged part? Please call: 0345 467 6743

Due to continuous product improvement, the actual product may differ slightly from the one illustrated in these instructions.

before first use

1. Remove all packaging materials.
2. Before using for the first time, turn on to the highest setting for approximately 5 minutes to condition the protective coating and remove any manufacturing dust that may have settled prior to final packing.
3. During this process, a slight smoke may emerge from the appliance. However, this is harmless and short-lived. This should be the only time the hotplate is turned on without a cooking utensil on it.

important safeguards



WARNING: When using electrical appliances, basic safety precautions should always be followed, including the following:

- ✔ **Always read instructions before use.**
- ✔ Always ensure the appliance is only used by a responsible adult.
- ✔ Always use this appliance on a stable, level surface, close to a power socket and out of reach of children.
- ✔ Always turn the control dial to “..” setting and disconnect from the power outlet when not in use and before cleaning.
- ✔ Always carry out regular checks on the appliance and power cord. Should there be any signs of damage; the entire appliance should be returned to the retailer's Customer Service Department.
- ✔ Always remove the plug from the power socket to disconnect. Do not pull the plug out by the cord.
- ✔ Always ensure that food is cooked in a pan or saucepan, do not attempt to cook food directly on the hot plate.
- ✔ Always ensure that the cookware used on the boiling ring does not project beyond the boiling ring or overhang the controls.
- ✘ Never use this appliance outdoors.
- ✘ Never immerse the power supply cord, plug or appliance in water or any other liquid. This is to protect against electrical shock
- ✘ Never use this appliance for other than intended use. This appliance is for household use only.
- ✘ Never let the power cord hang over the edge of a counter or table.
- ✘ Never leave this appliance unattended during use.
- ✘ Never allow children to use this appliance, close supervision is necessary when this appliance is in use near children.
- ✘ Never touch the housing and/or boiling rings when in use, as they get hot and may cause injury.
- ✘ Never leave oil or fat that is being heated, unattended, this is a fire risk.
- ✘ Never operate this appliance with a damaged cord or plug, or after the product malfunctions or is dropped or damaged in any manner.
- ✘ Never operate the appliance by means of an external timer or separate remote-control system.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

notes on the cord

The provided short power supply cord should ideally be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power supply cord or extension cord is used:


1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The extension cord should be an earthed type 3-core cord if the appliance is of the earthed type.

notes on the plug

Connect to a properly earthed socket only. Do not attempt to modify the plug in any way.

using the double boiling ring

1. For the most efficient operation, the cookware used should have a solid base and be as even as possible, and a diameter of approximately 15 to 17cm and a maximum capacity of 1L (1000W boiling ring). The base diameter of cookware smaller than the diameter of the boiling ring should not be used.
2. Cooking utensils, regardless of their size, should not protrude beyond the boiling ring or intrude into the area of close proximity of the controls.
3. Utensils with convex, concave or uneven bottoms should not be used.

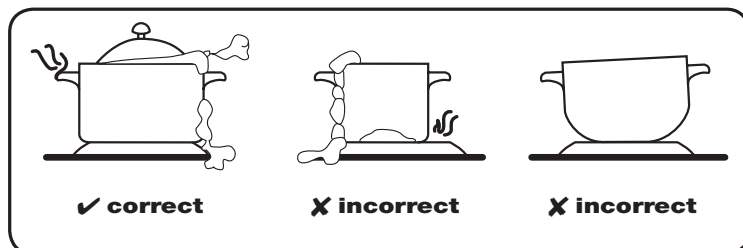

4. Turn the controls to the required temperature setting to achieve the desired temperature.
5. Use the following guide as a reference.

NOTE: Both Boiling Rings can be used at the same time, however care must be exercised to prevent the cookware handles from protruding over the adjacent boiling ring.

IMPORTANT: When not in use, always turn the control dials to the “...” position and then disconnect from the power outlet.

NOTE: The neon power indicator will go off when the appliance reaches the selected temperature, and will cycle on and off as it maintains the selected temperature.

cleaning

1. Disconnect from the power outlet and allow to completely cool.
2. Do not immerse the appliance in any liquid.
3. Do not allow the cord to touch any hot surfaces.
4. Clean the painted surface with a damp soft cloth.
5. Baked on marks can be removed with a mild kitchen cleaner or a cloth moistened with mild detergent.
6. Wipe with a dry cloth or paper towel and allow to completely dry.
7. Commercially available double boiling ring cleaners are recommended to preserve the natural finish of the appliance.

NOTE: In order to avoid any danger, if the power cord is damaged, it must be returned to the retailer or examined by a qualified repair technician.

maintenance

This appliance requires little maintenance. It contains no user serviceable parts. Do not use the unit if it appears damaged in any way. Do not attempt to repair the unit by yourself. Any servicing that requires disassembly other than cleaning must be performed by a qualified appliance repair technician.

technical data

Model No.: GBSDHP001

Voltage: 220 - 240 V~50Hz

Power Consumption: 2500W

Capacity: Small hotplate - 155mm diameter
Large hotplate - 185mm diameter

electrical information

This appliance is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard. If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

wiring instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given below. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

2-core plug




WARNING: Do not connect either wires to the earth terminal



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

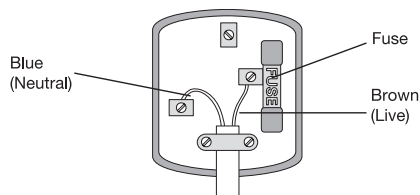

3-core plug




WARNING: This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol (⏏), or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

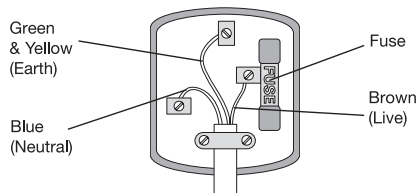





**For customer service enquiries
just call 0345 467 6743**

www.sensiohome.com