

Playback Modes

REPEAT

- To play a single track repeatedly, press the mode button repeatedly until "REP 1" appears on the LCD display. If your Disc has stopped, press the play button to resume play.
- To play the entire CD repeatedly, press the mode button repeatedly until "REP ALL" appears on the LCD display. If your Disc has stopped, press the play button to resume play.
- To cancel the repeat function, press the mode button repeatedly until "REP 1" or "REP ALL" disappears on the LCD display.

RANDOM PLAY

- Press the mode button repeatedly until the "RND" indicator appears on the LCD display. Press the play button to begin playback of tracks in a random sequence.
- To cancel this play function, press the mode button repeatedly until "RND" disappears on your LCD display.

PROGRAMMED PLAY:

- Press the stop button during playback.
 - Press the program button and select the desired track by pressing the previous or next button. Once you have selected your desired track, press the program button again to program the track.
 - If you want all tracks to be programmed, repeat step 2.
 - To begin the programmed playback, press the play button.
- NOTE: When playback stops, your programming will be erased.
- To cancel programmed playback, press the play button.

BBS FUNCTION:

- Enable or disable bass boost system.
 - The bass boost system enhances the low frequency (bass) response of the output. To activate this function, set the volume to a low level and set the BBS switch to the on position.
- NOTE: Do not play BBS on high volumes as it can damage your hearing and your headphones.

Specifications

CD Frequency Response	20 Hz - 20 KHz
Wow and Flutter	Below measurable limits
Sampling Frequency	44.1 KHz
D/A Converter	16-bit DAC
Error Correction Method	Cross-Interleave Reed-Solomon (CIR)
Pickup	Optical 1-beam semiconductor laser (780 nm wavelength)
Headphone Jack	For headphones with 1/8" (3.5 mm) diameter plug and 16-32 Ω impedance
Maximum Output (headphones)	16 mW + 16 mW (32 Ω)
Compact Disc Format	Mp3 / CD / CD-R
Power Source	2 x UM-3 or "AA" Size Batteries
AC Power Adapter (not included)	Output: DC 4.5V, 600mA
Anti skip	40 sec for CD and anti skip 110 sec for MP3.

MAINTENANCE AND CARE

To clean the Personal CD player

- Ensure the unit is in standby.
- Wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.
- Do not allow liquids to spill or objects to drop into any openings.
- Always use original packaging if it is necessary to transport the unit at any time.

If this unit is used in a dusty environment, it may be necessary to have the unit serviced at your local dealer periodically.

It is not advisable to allow large deposits of dust to accumulate within the unit as it may prevent adequate cooling. Similarly dust deposits which become damp can sometimes lead to electrical problems which may cause severe damage to the delicate electronics within this unit.

Handling Discs

To remove the disc from its storage case, press down on the centre of the case and lift the disc out. Hold it carefully by the edges as shown below



Insert the disc into the unit with the label of the disc facing UP. Gently wipe the disc using a soft cloth from the centre to the outer direction to remove dust, fingerprints or any other particles on the disc surface. Never use chemicals, such as record sprays, anti-static

MAINTENANCE AND CARE

sprays, benzene or thinners to clean the CD. These chemicals can damage the disc surface permanently.

To avoid serious scratches on CD, keep them in the cases after each use. Scratches can cause the laser pick-up skip in the future play. Do not place stickers or write anything on the disc.


BUSH

Instruction manual

CD PLAYER WITH MP3 PLAYBACK



Parts and Controls

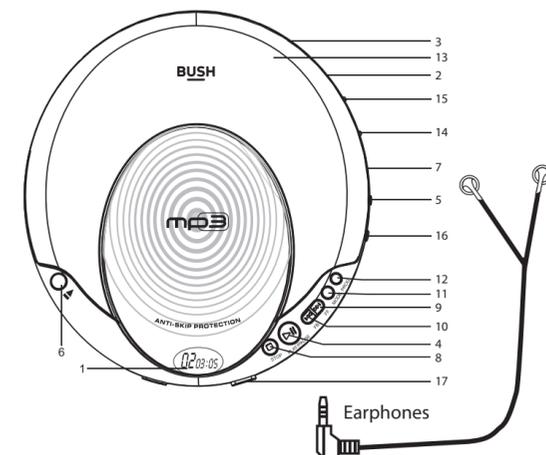

- | | |
|---------------------------------------|--------------------------------|
| 1. LCD Display | 9. Next Button |
| 2. DC Power Jack | 10. Previous Button |
| 3. Battery Compartment Cover (Bottom) | 11. Mode Button |
| 4. Play / Pause Button | 12. Program Button |
| 5. Volume + (Increase Volume) | 13. Unit Door |
| 6. Door Open Button | 14. BBS Switch (ON / OFF) |
| 7. Earphone Jack | 15. HOLD Switch (ON / OFF) |
| 8. Stop / Power Off Button | 16. Volume - (Decrease Volume) |
| | 17. ASP/DIR Button |

Power

Battery Installation:

- To open the battery cover, slide the battery cover in the direction of arrow and then lift the cover up.
- Place two "AA" size batteries (not included) into the vacant battery slots. Be sure to place the flat side (-) going in first against the spring inside the battery pack. Depress the spring with the battery as you push the opposite end into the battery slot.

CAUTION: Failure to properly align the battery polarity may cause personal injury and / or property damage.

- Place the battery cover on by placing the door down and sliding it against the arrow.

Optional AC Adapter Use (Not Included)

- Remove the batteries from the unit.
- Insert the small end of a 4.5-volt DC, 600 mA AC adapter into the DC power jack located on the back of the unit. Plug the adapter into an AC electrical outlet.

CAUTION: To prevent possible injury and / or property damage, use a 4.5-volt DC, 600 mA adapter only and follow all safety instructions provided by the adapter manufacture.

To Use

NOTICE: Do not use discs that have been scratched or damaged with this CD Player, as they may cause the unit to skip or stop.

Basic Operation

- Open the unit door by pushing down on the door button.
- Place the CD Disc or MP3 Disc (label side up) onto the spindle until it snaps into place. Once you have placed the Disc properly, close the unit door.
- Plug your headphone into the headphone jack located on the side of the unit.
- Press the play / pause button to start playing your Disc.
- Once the CD disc / MP3 disc is playing, the electronics anti-shock protection will automatically turn on. The "ESP" will flash and displayed on the LCD display.

- Adjust the volume by pressing the volume + or volume - button.

WARNING: Avoid prolonged exposure to high sound levels, as this may cause permanent hearing damage.

- Use the other controls as follows:


BUTTON	FUNCTION
Play / Pause	<ul style="list-style-type: none"> Press to start playback. Press to pause playback and again to resume playback.
Previous	<ul style="list-style-type: none"> Press once to restart the current track. Press once or repeatedly to skip the a previous track. Press and hold to scan backward through the current track.
Next	<ul style="list-style-type: none"> Press once or repeatedly to skip forward to a track. Press and hold to scan forward through the current track.
HOLD On / Off Switch	<ul style="list-style-type: none"> Switch to lock all buttons.
BBS On / Off Switch	<ul style="list-style-type: none"> Bass boost sound on / off switch.
ASP/DIR	<ul style="list-style-type: none"> Anti-shock function on/off button (only when CD playback) Dir function on/off button (only when MP3 playback)
Stop / Power Off	<ul style="list-style-type: none"> Press once to stop playback or twice to turn the unit off.

- To turn the CD Player off, press the stop / power off button twice during playback or once while the CD is not playing.
- To remove the CD Disc / MP3 Disc, open the unit door, ensure the CD / MP3 Disc has stopped spinning. Carefully remove the disc from the spindle.
- Close the unit door.

CAUTION: If you are using the CD Player with an adapter, disconnect it from the outlet before removing the Disc.

NOTE: When the battery replacement indicator begins to flash in the LCD display, this means that you need to replace the batteries.

IMPORTANT SAFETY INFORMATION

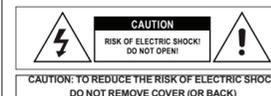

This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

This symbol indicates that dangerous voltage constituting the risk of electric shock is present in this unit.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK)

LASER SAFETY

This unit employs a laser, only qualified service personnel should attempt repair. DANGER: Invisibly laser radiation when open and interlock failed or defeated avoid direct exposure to beam. CAUTION: hazardous laser radiation when open and interlock defeated.

Read these instructions. Do not use this apparatus near water. Keep these instructions. Clean only with a slightly damp cloth. Heed all warnings. Do no block and ventilation openings. Follow all instructions.

Install in accordance with the manufacturer's instructions. Do not install or operate near any heat sources such as radiators, stoves or other apparatus that produce heat. Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.

No naked flame sources such as candles should be placed on the product. CAUTION: Changes or modifications not expressly approved by the manufacturers could void the user's authority to operate this device.

CAUTION: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

SAFETY INFORMATION CONTINUED

IMPORTANT: This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Consult the dealer or an experienced radio/TV technician for help.

CONTENTS

The carton should contain:
 1 x Personal CD player
 1 x Headphones
 1 x Operating manual

If any items are missing or damaged, contact your nearest Argos store for a replacement. Have your receipt ready when you call. Retain the packaging. If you dispose of it, do so having regards to any recycling regulations in your area.

BATTERY INSTALLATION

- Slide off the battery cover as shown by the 2 arrows in the diagram (it is hinged so it will not remove completely).
- Insert 2 x AA batteries as shown. Take care to match the + & - polarity markings.
- Replace the battery cover.

