

BaByliss®



PRO CURL 210

Model 2287BU



Pro Curl 210

This 210°C Salon Performance tong makes curling quick and easy. With its Advanced Ceramic Heating System it is ready to use in seconds and has ultra fast heat recovery to maintain constant high heat during use.

The 25mm barrel with Tourmaline-Ceramic creates perfectly defined curls with a smooth shiny finish or run your fingers through for natural looking tousled waves.

FEATURES:

- Up to 210°C salon temperature
- 25mm tourmaline-ceramic coated barrel
- 5 temperature settings: 150°C (Power), 165°C, 180°C, 195°C and 210°C
- Ultra-fast heat up - ready to use in seconds
- Salon type swivel cord for easy use
- Integrated heat rest
- 3 year guarantee

INSTRUCTIONS FOR USE

IMPORTANT: This appliance gets very hot. Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

- Ensure hair is dry and combed through.
- Press the button marked "I/O" to switch on.
- Press the -/+ button to select the desired temperature. If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the high heat settings.

- Allow the appliance to heat up for 30 seconds. Allow slightly longer if using on the higher temperature settings.
- Section damp or dry hair evenly, and comb through before styling. Pressing the spoon lever, place the curling tong midway up the hair section and spread hair evenly between spoon and barrel. Once hair is in place, carefully let go of the curl release so that the hair is held securely between spoon and barrel.
- Gently slide the curling tong down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl.

IMPORTANT: When using the tong on the highest heat setting, be careful not to leave the tong in the hair for longer than a few seconds.

- Wind the hair as far as you want it curled, being careful not to let the tong touch the scalp. Hold in place for 5-8 seconds depending on the texture and length of your hair. For tighter, bouncier curls, roll less hair. For loose, free flowing curls, roll more hair.
- To remove the curling Tong press the spoon lever and pull tong away. To “set” the curl, do not comb or brush hair until it cools.
- Repeat as necessary.
- Allow the hair to cool before combing through.
- Press the button marked “I/O” to switch off and unplug the appliance.
- Allow to cool before storing away.

SAFETY CAUTIONS

This appliance should only be used as described within these instructions.

Read carefully before use. Please retain for reference.

WARNING! Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. These bags are not toys.

- Do not use the appliance in the bathroom.
- Do not use the appliance near basins or other vessels containing liquids.



- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to UK After Sales Service section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Conair Service Centre (refer to UK After Sales Service section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surfaces of the appliance coming into direct with the skin, in particular the eyes, ears, face and neck.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Allow the appliance to cool before storing.
- After use, do not coil the lead around the appliance as this may cause damage. Instead coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 04/108/EEC (Electromagnetic Compatibility) and 2006/95/EEC (Electrical Safety of Domestic Appliances).

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily

due to defects in materials or manufacture it will be repaired or replaced through Conair UK After Sales Service. Conair reserve the right to amend terms and specifications without prior notice. This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or alternatively email your enquiry to ukinfo@conair.com.

In Guarantee

Return the product to the Conair Service Centre at the following address:

Conair Service Centre
PO Box 506
Wigan
WN1 9AA

Enclose your name and address, together with proof of purchase and details of the fault. Conair will either repair or replace the product as appropriate.

Out of Guarantee

Contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or alternatively email your enquiry to ukinfo@conair.com for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Conair Service Centre at the following address:

Conair Service Centre
PO Box 506
Wigan
WN1 9AA

Enclose your name and address together with details of the fault and cheque made payable to The Conair Group Ltd.


UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.
- Neither core should be connected to the earth terminal of a three pin plug marked with the letter E or  or is coloured green or green and yellow.

With this appliance, if a 13 amp plug is used a 3 amp fuse should be fitted. If any other type of plug is used a 5 amp fuse must be fitted either in the plug or at the distribution board.