


BaByliss[®]

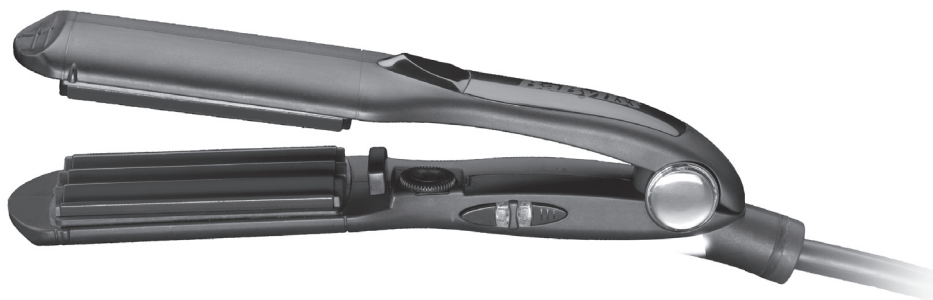

PRO CRIMPER 210

Model 2165BU

BaByliss[®]

Pro Crimper 210

With its 210°C salon high temperature, ultra fast heat up and tourmaline-ceramic plates, this salon class crimper instantly creates shiny, perfectly defined, long-lasting texture in the hair.

FEATURES:

- Up to 210°C salon temperature performance
- 1 ½" Tourmaline-ceramic coated plates
- 10 temperature settings
- Cool tips
- On/off button
- On/off indicator light
- Heat-up indicator light
- Professional rubber cord
- 3 year guarantee

INSTRUCTIONS FOR USE

WARNING! This appliance gets very hot. Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

You can experiment with different styles - crimping all the hair or playing with a contrast of flat and crimped hair. It is worth being adventurous by trying a variety of different styles. To add body and fullness, separate the top layer of the hair and crimp the underneath sections. Or you can put your hair up in a pony tail and crimp the ends only. The list is endless. For extra effect, use gel or mousse on the hair before styling.

- Ensure hair is dry and combed through.
- Plug the appliance into a suitable mains socket, the 'on' indicator light will illuminate red.
- Press the "I" button and both the red and green lights will flash, when the appliance has reached optimum temperature the indicator lights will stop flashing and will remain green.
- Select the required heat setting using the temperature dial. If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings.
- Separate a 5cm (maximum) section of hair.
- Place the section of hair between the crimping plates
- Hold the hair firmly between the plates for about 5 seconds.
- Release that section of hair and re-position the crimper so that the next crimp falls in line with the first.
- Always work from the root towards the end of the hair.
- Repeat as necessary.
- After use switch off and unplug the appliance. Allow to cool before storing away.

CLEANING AND MAINTENANCE

To help keep your crimper in the best possible condition, clean the plates on a regular basis.

Please follow the steps below:

- Make sure the appliance has been unplugged and is cool.
- Clean the ceramic plates by wiping with a damp cloth. Make sure that no water enters the crimper and the crimper is completely dry before re-use.


SAFETY CAUTIONS

This appliance should only be used as described within these instructions.

Read carefully before use. Please retain for reference.

WARNING! Polythene bags over product or packaging may be

dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. These bags are not toys.

- Do not use the appliance in the bathroom.
- Do not use the appliance near basins or other vessels containing liquids.
- Do not immerse the appliance in water or other liquids. 
- Always inspect the appliance before use for noticeable signs of damage, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to UK After Sales Service section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Conair Service Centre (refer to UK After Sales Service section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Allow the appliance to cool before storing.
- After use, do not coil the lead around the appliance as this may cause damage. Instead coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 04/108/EEC (Electromagnetic Compatibility) and 2006/95/EEC (Electrical Safety of Domestic Appliances).

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture it will be repaired or replaced through Conair UK After Sales Service. Conair reserve the right to amend terms and specifications without prior notice. This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or alternatively email your enquiry to ukinfo@conair.com.

In Guarantee

Return the product to the Conair Service Centre at the following address:

Conair Service Centre
PO Box 506
Wigan
WN1 9AA

Enclose your name and address, together with proof of purchase and details of the fault. Conair will either repair or replace the product as appropriate.

Out of Guarantee

Contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or alternatively email your enquiry to ukinfo@conair.com for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Conair Service Centre at the following address:

Conair Service Centre
PO Box 506
Wigan
WN1 9AA

Enclose your name and address together with details of the fault and cheque made payable to The Conair Group Ltd.


UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.
- Neither core should be connected to the earth terminal of a three pin plug marked with the letter E or  or is coloured green or green and yellow.

With this appliance, if a 13 amp plug is used a 3 amp fuse should be fitted. If any other type of plug is used a 5 amp fuse must be fitted either in the plug or at the distribution board.