

# *BaByliss*®



**BIG HAIR**

**Model 2885U**

# *BaByliss*<sup>®</sup>

## **BIG HAIR**

The BaByliss Big Hair airstyler has an iconic rotating brush to add gorgeous volume and shine to styles and replicate a salon-perfect blow-dry at home. The large ceramic barrel adds fullness and body whilst the soft mixture of natural boar and nylon bristles create ultimate smoothness and shine. The super ionic conditioning leaves hair with a frizz-free, high shine finish.

## **FEATURES**

- 700W
- Large 50mm ceramic barrel
- Soft bristles for ultimate smoothness and shine
- Super ionic conditioning for a frizz-free, high shine finish
- 2 heats plus a cool setting
- 2 rotation speeds for total control
- Multi-directional brush
- Hinged rear filter
- Protective cover
- 2.5m longer length cord
- 2 year guarantee

## **SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

## **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

## **WARNING! THIS APPLIANCE GETS HOT!**

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

## **IMPORTANT SAFETY**

- **UK Only:** This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

**WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.

- Do not use this appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).



- Do not leave the appliance unattended when switched on or plugged in.
- This unit is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the airstyler to the “0” position, unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug, and contact the Conair Customer Care Line (refer to ‘UK After Sales Service’ section for further information).
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- Always ensure that the rear air filter is kept away from hair during use to prevent it being pulled into the fan which may cause the appliance to overheat.
- Take care using this appliance when wearing jewellery, in particular necklaces and earrings, to avoid entanglement in the rotating brush head.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- After use, do not coil the lead around the appliance

as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.

- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

### **Super Ionic Technology**

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution contribute to a build-up of static electricity in the hair. Even brushing and towel drying the hair can increase these levels, causing the surface of the cuticle to become rough. Consequently, hair may have a dull appearance. High levels of static charge can also cause the hair to become “fly-away” and difficult to style. The super ion generator releases more negative ions than a regular ionic port which act to neutralise the static charge, smoothing the hairs cuticle for noticeably smooth, shiny, manageable hair.

### **Heat Settings**

There are 2 heats plus a cool setting. Slide the ‘on/off’ switch to the first position to select the cool setting ‘\*’, the second position for the low heat ‘I’, and the third position for the high heat ‘II’.

### **Rotation Settings**

There are two rotation speed settings. To make the brush head rotate, press the buttons marked << and >>, this will make the brush head rotate clockwise and anti-clockwise. When the appliance is set on the high heat setting the brush head rotation will be faster. When the appliance is set on the low heat setting the brush head rotation will be slower. For best results, use the rotating brush feature to create styles with gorgeous volume and shine.

**NOTE:** When the appliance is used on the cool setting, the brush head will not rotate.

## **Protective Cover**

After every use, always ensure the protective cover is placed over the brush head. This protects the bristles from damage. When placing the protective cover over the brush head, ensure to line it up with the grooves around the top of the airstyler so it slides easily into place.

**NOTE:** The diagram on the protective cover demonstrates the direction it should be placed on to the brush head. If placed on incorrectly it may be difficult to remove.

## **INSTRUCTIONS FOR USE**

- If you have long or thick hair, you may find it quicker and easier to use a hairdryer first to rough dry your hair and remove the excess moisture. For added volume, turn your head upside down as you dry.
- Once the hair is 80% dry, you should start to create your style using the styler.

## **Maximum Volume and Body**

- 1) Start by sectioning the hair.
- 2) To turn the appliance on, slide the 'on/off' switch to the correct heat setting for your hair.
- 3) Place the brush underneath the hair section, close to the roots and brush through the section to remove any tangles.
- 4) For added root lift, hold the brush in place at the root for a few seconds.
- 5) Move the brush through the hair, towards the ends and as you reach the end of the section, start to rotate the brush away from your head by pressing and holding the appropriate rotation button.
- 6) As you do this, resist the rotation of the brush by pulling the brush downwards. This will create tension through the section of hair.

**IMPORTANT!** It may take several attempts to perfect this technique, if the brush spins too quickly, simply release the rotation button and remove from the hair.

- 7) For even more volume, place the brush at the end of the hair section and allow the brush to rotate along the hair section by pressing and

holding the appropriate rotate button. Wind the entire section of hair around the barrel until you reach the root. Release the rotate button and then hold the brush in the hair for a few seconds.

- 8) Slide the switch to the cool setting ‘\*\*’ for a further few seconds, this cools the hair to create longer lasting volume.
- 9) To release the section, move the switch back to setting ‘I’ or ‘II’ then press and hold the opposite rotation button to unwind the hair section.
- 10) Repeat as necessary.
- 11) After use, switch off and unplug the appliance.
- 12) Allow to cool before storing away.
- 13) Place protective shield over brush head to protect the bristles.  
Please see the ‘Protective Cover’ section for direction.

### **Helpful Hints and Tips**

- To define layers and add shape to the ends of the hair, follow steps 5 - 6 and repeat through the sections.
- To get root volume and body through the top section of hair, follow steps 7 - 9 using an upward motion.

### **CLEANING & MAINTENANCE**

To help keep your appliance in the best possible condition follow the steps below:

#### **General**

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side when storing away.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

#### **Cleaning & Maintenance**

- Unplug the appliance and let it cool completely before cleaning it.
- Holding the handle of the appliance firmly pull the top of the rear filter towards you, this will enable the rear filter to open.

- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by pushing back into position.
- To clean the outside of the appliance, wipe with a damp cloth. Make sure no water enters the appliance and it is completely dry before use.

## **UK GUARANTEE**

This BaByliss appliance is guaranteed for consumer use for 2 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

## **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

The return address is:


Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.



## SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.


## UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 5A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 5A fuse must be fitted.





